









Services


# Operating Instructions **Proline Promag 50 HART**

Electromagnetic flow measuring system



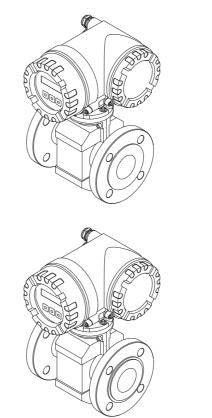

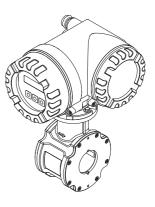

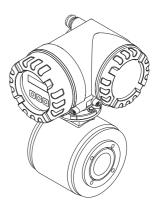



BA00046D/06/EN/14.11 71136623 Valid as of version V 2.03.XX (device software)

## Table of contents

1	Safety instructions 5
1.1 1.2 1.3 1.4	Designated use5Installation, commissioning and operation5Operational safety5Return6
1.5	Notes on safety conventions and icons 6
2	Identification 7
2.1	Device designation72.1.1Nameplate of the transmitter72.1.2Nameplate of the sensor82.1.3Nameplate, connections9
2.2 2.3	Certificates and approvals
3	Installation 11
3.1	Incoming acceptance, transport and storage113.1.1Incoming acceptance113.1.2Transport113.1.3Storage12
3.2	Installation conditions       13         3.2.1       Dimensions       13         3.2.2       Mounting location       13         3.2.3       Orientation       15         3.2.4       Vibrations       16         3.2.5       Foundations, supports       17
3.3	3.2.6Adapters173.2.7Nominal diameter and flow rate183.2.8Length of connecting cable20Installation instructions21
3.3	3.3.1Installing the Promag D sensor213.3.2Installing the Promag L sensor243.3.3Installing the Promag W sensor273.3.4Installing the Promag P sensor323.3.5Installing the Promag H sensor363.3.6Turning the transmitter housing393.3.7Turning the onsite display403.3.8Installing the wall-mount housing41
3.4	Post-installation check
4	Wiring 44
4.1	Connecting the remote version444.1.1Connecting Promag D, L, W, P, H444.1.2Cable specifications49
4.2	Connecting the measuring unit504.2.1Connecting the transmitter504.2.2Terminal assignment524.2.3HART connection52
4.3	<ul> <li>Potential equalization</li></ul>

	4.3.5 Exampels for potential equalization connections
	for Promag L, W, P
4.4	Degree of protection
4.5	Post-connection check 57
5	Operation
5.1	Display and operating elements
5.2	Brief operating instructions on the function matrix $% \left( {{{\mathbf{F}}_{\mathbf{F}}}^{T}} \right)$ . 59
	5.2.1 General notes
	5.2.2 Enabling the programming mode
5.3	5.2.3 Disabling the programming mode 60 Displaying error messages 61
5.5	5.3.1 Type of error
	5.3.2 Error message types
5.4	Communication
	5.4.1 Operating options
	5.4.2 Current device description files
	5.4.3 Device variables
	5.4.4 Switching HART write protection on/off 63
	5.4.5 Universal and common practice HART
	commands
	5.4.6 Device status and error messages
6	Commissioning70
6.1	Function check
6.2	Switching on the measuring device
6.3	Quick Setup
6.4	6.3.1 "Commissioning" Quick Setup menu 71
0.4	Configuration726.4.1Current output: active/passive72
6.5	Adjustment
0.0	6.5.1 Empty-pipe/full-pipe adjustment
6.6	Data storage device (HistoROM)
	6.6.1 HistoROM/S-DAT (sensor-DAT)74
7	Maintenance
7.1	Exterior cleaning
7.2	Seals
8	Accessories
8.1	Device-specific accessories
8.2	Measuring principle-specific accessories
8.3	Communication-specific accessories
8.4	Service-specific accessories
9	Troubleshooting
9.1	Troubleshooting instructions
9.2	System error messages
9.3	Process error messages
9.4	Process errors without messages
9.5	Response of outputs to errors
9.6	Spare parts
	9.6.1 Removing and installing printed circuit boards 87

	9.6.2 Replacing the device fuse
	9.6.3 Replacing the exchangeable electrode 92
9.7	Return
9.8	Disposal
9.9	Software history
10	Technical data
10.1	Technical data at a glance
	10.1.1 Application
	10.1.2 Function and system design
	10.1.3 Input
	10.1.4 Output
	10.1.5 Power supply 97
	10.1.6 Performance characteristics
	10.1.7 Operating conditions: Installation
	10.1.8 Operating conditions: Environment 99
	10.1.9 Operating conditions: Process 100
	10.1.10 Mechanical construction
	10.1.11 Human interface 114
	10.1.12 Certificates and approvals 115
	10.1.13 Ordering information
	10.1.14 Accessories 116
	10.1.15 Documentation 116
Inde	x

## 1 Safety instructions

## 1.1 Designated use

The measuring device described in this Operating Manual is to be used only for measuring the flow rate of conductive fluids in closed pipes.

A minimum conductivity of 20  $\mu$ S/cm is required for measuring demineralized water. Most liquids can be measured as of a minimum conductivity of 5  $\mu$ S/cm.

Examples:

- Acids, alkalis,
- Drinking water, wastewater, sewage sludge,
- Milk, beer, wine, mineral water, etc.

Resulting from incorrect use or from use other than that designated the operational safety of the measuring devices can be suspended. The manufacturer accepts no liability for damages being produced from this.

## 1.2 Installation, commissioning and operation

Please note the following:

- Installation, connection to the electricity supply, commissioning and maintenance of the device must be carried out by trained, qualified specialists authorized to perform such work by the facility's owner-operator. The specialist must have read and understood this Operating Manual and must follow the instructions it contains.
- The device must be operated by persons authorized and trained by the facility's owner-operator. Strict compliance with the instructions in the Operating Manual is mandatory.
- With regard to special fluids, including fluids used for cleaning, Endress+Hauser will be happy to
  assist in clarifying the corrosion-resistant properties of wetted materials.
  However, minor changes in temperature, concentration or in the degree of contamination in the

process may result in variations in corrosion resistance. For this reason, Endress+Hauser does not accept any responsibility with regard to the corrosion resistance of wetted materials in a specific application.

- The user is responsible for the choice of suitable wetted materials in the process.
- If welding work is performed on the piping system, do not ground the welding appliance through the Promag flowmeter.
- The installer must ensure that the measuring system is correctly wired in accordance with the wiring diagrams. The transmitter must be grounded apart from when special protective measures are taken (e.g. galvanically isolated SELV or PELV power supply)
- Invariably, local regulations governing the opening and repair of electrical devices apply.

## 1.3 Operational safety

Please note the following:

- Measuring systems for use in hazardous environments are accompanied by separate Ex documentation, which is an integral part of this Operating Manual. Strict compliance with the installation instructions and ratings as stated in this supplementary documentation is mandatory. The symbol on the front of this Ex documentation indicates the approval and the certification body (e.g. burope, VSA, Canada).
- The measuring device complies with the general safety requirements in accordance with EN 61010-1, the EMC requirements of IEC/EN 61326 and NAMUR Recommendations NE 21 and NE 43.
- Depending on the application, the seals of the process connections of the Promag H sensor require periodic replacement.

- When hot fluid passes through the measuring tube, the surface temperature of the housing increases. In the case of the sensor, in particular, users should expect temperatures that can be close to the fluid temperature. If the temperature of the fluid is high, implement sufficient measures to prevent burning or scalding.
- The manufacturer reserves the right to modify technical data without prior notice. Your Endress+Hauser distributor will supply you with current information and updates to these Operating Instructions.

## 1.4 Return

- Do not return a measuring device if you are not absolutely certain that all traces of hazardous substances have been removed, e.g. substances which have penetrated crevices or diffused through plastic.
- Costs incurred for waste disposal and injury (burns, etc.) due to inadequate cleaning will be charged to the owner-operator.

## 1.5 Notes on safety conventions and icons

The devices are designed to meet state-of-the-art safety requirements, have been tested, and left the factory in a condition in which they are safe to operate. The devices comply with the applicable standards and regulations in accordance with EN 61010-1 "Safety requirements for electrical equipment for measurement, control and laboratory use".

The devices can, however, be a source of danger if used incorrectly or for anything other than the designated use. Consequently, always pay particular attention to the safety instructions indicated in this Operating Manual by the following icons:



#### Warning!

"Warning" indicates an action or procedure which, if not performed correctly, can result in injury or a safety hazard. Comply strictly with the instructions and proceed with care.

## Caution!

"Caution" indicates an action or procedure which, if not performed correctly, can result in incorrect operation or destruction of the device. Comply strictly with the instructions.



#### Note!

"Note" indicates an action or procedure which, if not performed correctly, can have an indirect effect on operation or trigger an unexpected response on the part of the device.

## 2 Identification

## 2.1 Device designation

The flow measuring system consists of the following components:

- Promag 50 transmitter
- Promag D, Promag L, Promag W, Promag P or Promag H sensor

In the *compact version*, the transmitter and sensor form a single mechanical unit; in the *remote version* they are installed separately.

## 2.1.1 Nameplate of the transmitter

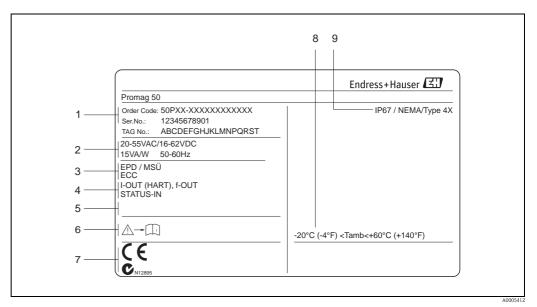


Fig. 1: Nameplate specifications for the "Promag 50" transmitter (example)

- 1 Ordering code/serial number: See the specifications on the order confirmation for the meanings of the individual letters and digits.
- Power supply, frequency, power consumption
   Additional information: EPD/MSÜ: with Empty Pipe Detection ECC: with electrode cleaning
   Outputs available: I-OUT (HART): with current output (HART)
  - *f-OUT (HART): with status input (print) f-OUT (HART): with frequency output STATUS-IN: with status input (power supply)*
- 5 Reserved for information on special products
- 6 Observe device documentation
- 7 Reserved for additional information on device version (approvals, certificates)
- 8 Permitted ambient temperature range
- 9 Degree of protection





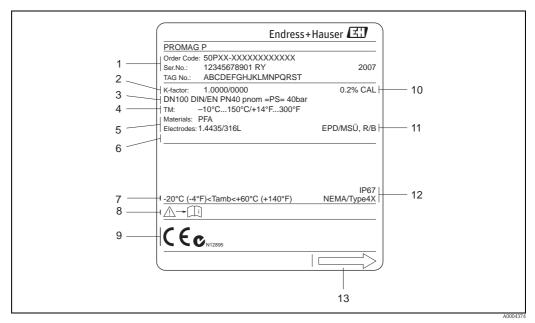


Fig. 2: Nameplate specifications for the "Promag" sensor (example)

- 1 Ordering code/serial number: See the specifications on the order confirmation for the meanings of the individual letters and digits.
- 2 Calibration factor with zero point
- 3 Nominal diameter / Pressure rating
- 4 Fluid temperature range
- 5 Materials: lining/measuring electrodes
- 6 Reserved for information on special products
- 7 Permitted ambient temperature range
- 8 Observe device documentation
- 9 Reserved for additional information on device version (approvals, certificates)
- *10 Calibration tolerance*
- 11 Additional information (examples):
  - EPD/MSÜ: with Empty Pipe Detection electrode
  - R/B: with reference electrode
- 12 Degree of protection
- 13 Flow direction

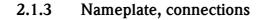

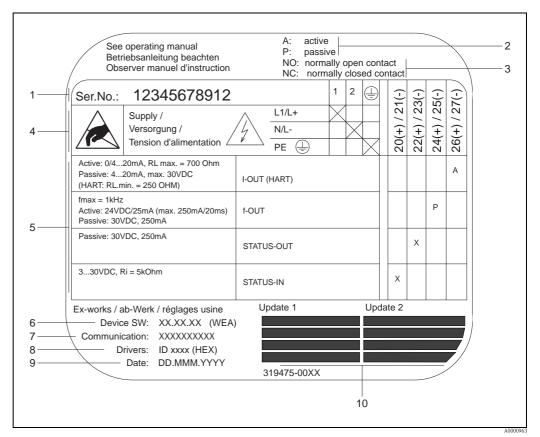

*Fig. 3:* Nameplate specifications for transmitter (example)

- 1 Serial number
- *2 Possible configuration of current output*
- *3 Possible configuration of relay contacts*
- 4 Terminal assignment, cable for power supply: 85 to 260 V AC, 20 to 55 V AC, 16 to 62 V DC Terminal **No. 1**: L1 for AC, L+ for DC
- Terminal **No. 2**: N for AC, L– for DC
- 5 Signals present at inputs and outputs, possible configuration and terminal assignment (20 to 27), see also "Electrical values of inputs/outputs"
- 6 Version of device software currently installed
- 7 Installed communication type, e.g.: HART, PROFIBUS PA, etc.
- 8 Information on current communication software (Device Revision and Device Description), e.g.: Dev. 01 / DD 01 for HART
- 9 Date of installation
- 10 Current updates to data specified in points 6 to 9

## 2.2 Certificates and approvals

The devices are designed to meet state-of-the-art safety requirements in accordance with sound engineering practice. They have been tested and left the factory in a condition in which they are safe to operate.

The devices comply with the applicable standards and regulations in accordance with EN 61010-1 "Safety requirements for electrical equipment for measurement, control and laboratory use" and with the EMC requirements of IEC/EN 61326/A1.

The measuring system described in this Operating Manual is therefore in conformity with the statutory requirements of the EC Directives. Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

The measuring system meets the EMC requirements of the Australian Communications and Media Authority (ACMA)

## 2.3 Registered trademarks

 $\mathsf{KALREZ}^{\texttt{R}}$  and  $\mathsf{VITON}^{\texttt{R}}$ 

Registered trademarks of E.I. Du Pont de Nemours & Co., Wilmington, USA

TRI-CLAMP®

Registered trademark of Ladish & Co., Inc., Kenosha, USA

HART®

Registered trademark of the HART Communication Foundation, Austin, USA

HistoROM<sup>™</sup>, S-DAT<sup>®</sup>, Field Xpert<sup>™</sup>, FieldCare<sup>®</sup>, Fieldcheck<sup>®</sup>, Applicator<sup>®</sup> Registered or registration-pending trademarks of Endress+Hauser Flowtec AG, Reinach, CH

## 3 Installation

## 3.1 Incoming acceptance, transport and storage

### 3.1.1 Incoming acceptance

On receipt of the goods, check the following:

- Check the packaging and the contents for damage.
- Check the shipment, make sure nothing is missing and that the scope of supply matches your order.

## 3.1.2 Transport

The following instructions apply to unpacking and to transporting the device to its final location: • Transport the devices in the containers in which they are delivered.

• Do not remove the protective plates or caps on the process connections until you are ready to install the device. This is particularly important in the case of sensors with PTFE linings.

#### Special notes on flanged devices

Caution!

- The wooden covers mounted on the flanges from the factory protect the linings on the flanges during storage and transportation. In case of Promag L they are additionally used to hold the lap joint flanges in place. Do not remove these covers until **immediately before** the device in the pipe.
- Do not lift flanged devices by the transmitter housing, or the connection housing in the case of the remote version.

#### Transporting flanged devices $DN \le 300 (\le 12")$


Use webbing slings slung round the two process connections. Do not use chains, as they could damage the housing.



#### Warning!

Risk of injury if the measuring device slips. The center of gravity of the assembled measuring device might be higher than the points around which the slings are slung.

At all times, therefore, make sure that the device does not unexpectedly turn around its axis or slip.

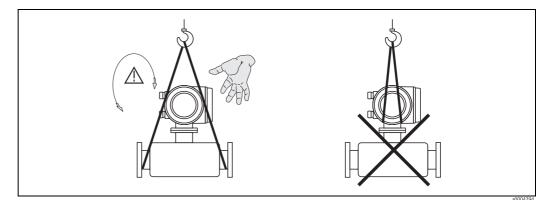


*Fig. 4:* Transporting sensors with  $DN \le 300 \ (\le 12")$ 

#### *Transporting flangeddevices DN* > 300 (> 12")

Use only the metal eyes on the flanges for transporting the device, lifting it and positioning the sensor in the piping.

#### Caution!

Do not attempt to lift the sensor with the tines of a fork-lift truck beneath the metal casing. This would buckle the casing and damage the internal magnetic coils.

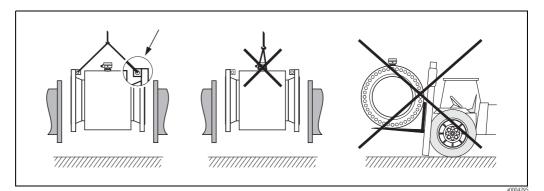

*Fig. 5:* Transporting sensors with DN > 300 (> 12")

## 3.1.3 Storage

Please note the following:

- Pack the measuring device in such a way as to protect it reliably against impact for storage (and transportation). The original packaging provides optimum protection.
- The storage temperature corresponds to the operating temperature range of the measuring transmitter and the appropriate measuring sensors  $\rightarrow \ge 99$ .
- Do not remove the protective plates or caps on the process connections until you are ready to install the device. This is particularly important in the case of sensors with PTFE linings.
- The measuring device must be protected against direct sunlight during storage in order to avoid unacceptably high surface temperatures.
- Choose a storage location where moisture does not collect in the measuring device. This will help prevent fungus and bacteria infestation which can damage the liner.

## 3.2 Installation conditions

#### 3.2.1 Dimensions

The dimensions and installation lengths of the sensor and transmitter can be found in the "Technical Information" for the device in question. This document can be downloaded as a PDF file from www.endress.com. A list of the "Technical Information" documents available is provided in the "Documentation" section on  $\rightarrow \triangleq 116$ .

## 3.2.2 Mounting location

Entrained air or gas bubble formation in the measuring tube can result in an increase in measuring errors.

Avoid the following locations:

- Highest point of a pipeline. Risk of air accumulating!
- Directly upstream from a free pipe outlet in a vertical pipeline.

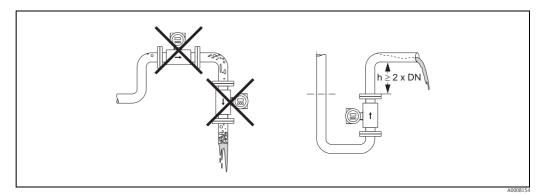


Fig. 6: Mounting location

#### Installation of pumps

Do **not** install the sensor on the intake side of a pump. This precaution is to avoid low pressure and the consequent risk of damage to the lining of the measuring tube. Information on the lining's resistance to partial vacuum can be found on  $\rightarrow \triangleq 103$ .

It might be necessary to install pulse dampers in systems incorporating reciprocating, diaphragm or peristaltic pumps. Information on the measuring system's resistance to vibration and shock can be found on  $\rightarrow \textcircled{}{}$  99.

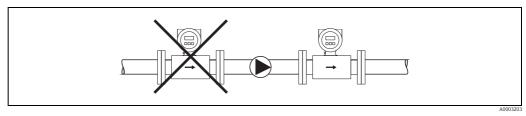


Fig. 7: Installation of pumps


#### Partially filled pipes

Partially filled pipes with gradients necessitate a drain-type configuration. The Empty Pipe Detection function (EPD  $\rightarrow \triangleq 73$ ) offers additional protection by detecting empty or partially filled pipes.

Caution!

()

Risk of solids accumulating. Do not install the sensor at the lowest point in the drain. It is advisable to install a cleaning valve.

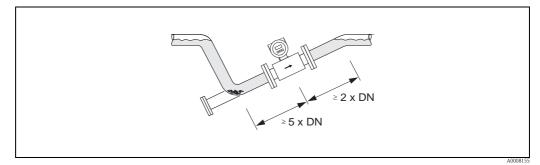


*Fig. 8: Installation in a partially filled pipe* 

#### Down pipes

Install a siphon or a vent valve downstream of the sensor in down pipes whose length  $h \ge 5$  m (16.4 ft). This precaution is to avoid low pressure and the consequent risk of damage to the lining of the measuring tube.

This measure also prevents the system losing prime, which could cause air pockets. Information on the lining's resistance to partial vacuum can be found on  $\rightarrow \triangleq 103$ .

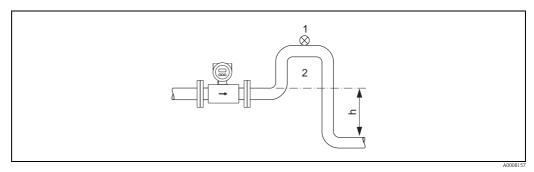

*Fig. 9: Measures for installation in a down pipe* 

- 1 Vent valve
- 2 Pipe siphon
- h Length of down pipe

## 3.2.3 Orientation

An optimum orientation position helps avoid gas and air accumulations and deposits in the measuring tube. However, Promag offers the additional Empty Pipe Detection (EPD) function to ensure the detection of partially filled measuring tubes, e.g. in the case of degassing fluids or varying process pressure:

- Electrode Cleaning Circuit (ECC) for applications with accretive fluids, e.g. electrically conductive deposits (→ "Description of Device Functions" manual).
- Empty Pipe Detection (EPD) ensures the detection of partially filled measuring tubes, e.g. in the case of degassing fluids (→ 
   <sup>1</sup>
   73)
- Exchangeable Measuring Electrodes for abrasive fluids ( $\rightarrow \square 92$ )

#### Vertical orientation

This is the ideal orientation for self-emptying piping systems and for use in conjunction with Empty Pipe Detection.

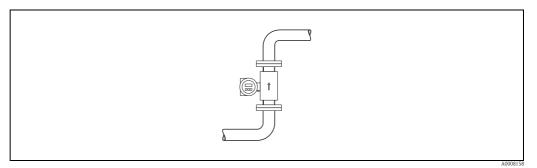


Fig. 10: Vertical orientation

#### Horizontal orientation

The measuring electrode plane should be horizontal. This prevents brief insulation of the two measuring electrodes by entrained air bubbles.

Caution!

ſ

Empty Pipe Detection functions correctly only when the measuring device is installed horizontally and the transmitter housing is facing upward ( $\rightarrow$   $\bigcirc$  10). Otherwise there is no guarantee that Empty Pipe Detection will respond if the measuring tube is only partially filled or empty.

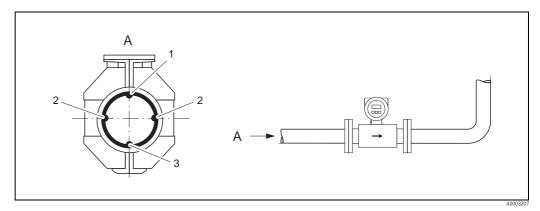


Fig. 11: Horizontal orientation

- 1 EPD electrode for the detection of empty pipes (not with Promag D and Promag H (DN 2 to 15; 1/12" to 1/2"))
- 2 Measuring electrodes for signal detection
- 3 Reference electrode for the potential equalization (not with Promag D and H)

#### Inlet and outlet run

If possible, install the sensor upstream from fittings such as valves, T-pieces, elbows, etc. The following inlet and outlet runs must be observed in order to meet accuracy specifications:

- Inlet run:  $\geq 5 \times DN$
- Outlet run:  $\geq 2 \times DN$

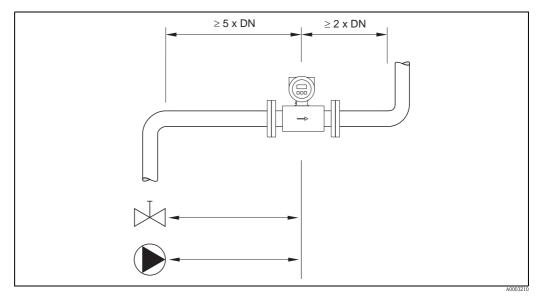


Fig. 12: Inlet and outlet runs

#### 3.2.4 Vibrations

Secure the piping and the sensor if vibration is severe.



Caution!

If vibrations are too severe, we recommend the sensor and transmitter be mounted separately. Information on resistance to vibration and shock can be found on  $\rightarrow \triangleq 99$ .

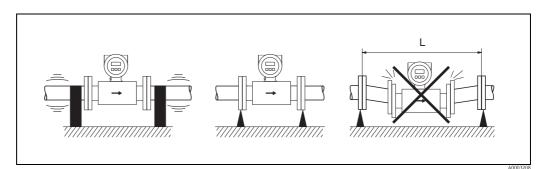


Fig. 13: Measures to prevent vibration of the device (L > 10 m (32.8 ft))

#### 3.2.5 Foundations, supports

If the nominal diameter is  $\text{DN} \ge 350$ , mount the sensor on a foundation of adequate load-bearing strength.

Caution!

Risk of damage.

Do not support the weight of the sensor on the metal casing: the casing would buckle and damage the internal magnetic coils.

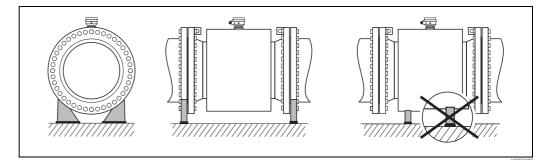


Fig. 14: Correct support for large nominal diameters ( $DN \ge 350$ )

## 3.2.6 Adapters

Suitable adapters to DIN EN 545 (double-flange reducers) can be used to install the sensor in largerdiameter pipes.


The resultant increase in the rate of flow improves measuring accuracy with very slow-moving fluids. The nomogram shown here can be used to calculate the pressure loss caused by reducers and expanders.



#### Note!

The nomogram only applies to liquids of viscosity similar to water.

- 1. Calculate the ratio of the diameters d/D.
- 2. From the nomogram read off the pressure loss as a function of flow velocity (downstream from the reduction) and the d/D ratio.

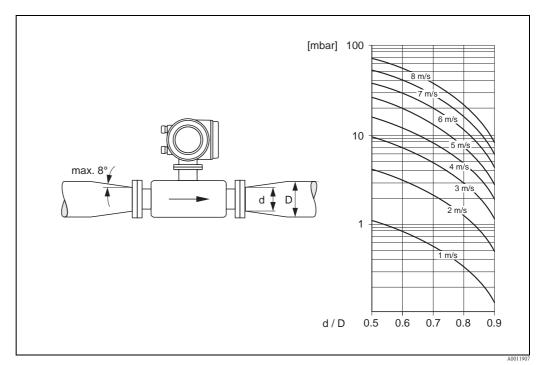

*Fig. 15: Pressure loss due to adapters* 

## 3.2.7 Nominal diameter and flow rate

The diameter of the pipe and the flow rate determine the nominal diameter of the sensor. The optimum velocity of flow is between 2 and 3 m/s (6.5 to 9.8 ft/s)

The velocity of flow (v), moreover, has to be matched to the physical properties of the fluid: • v < 2 m/s (v < 6.5 ft/s): for abrasive fluids

• v > 2 m/s (v > 6.5 ft/s): for fluids producing buildup



Note!

Flow velocity can be increased, if necessary, by reducing the nominal diameter of the sensor ( $\rightarrow \ge 17$ ).

#### Recommended flow (SI units)

Nominal diameter	Promag D	Promag L	Promag W	Promag P	Promag H
[mm]		Min./max. full scal	le value (v $\approx$ 0.3 or 10	m/s) in [dm³/min]	
2	_	-	_	-	0.06 to 1.8
4	_	-	-	-	0.25 to 7
8	_	-	-	-	1 to 30
15	_	-	_	4 to 100	4 to 100
25	9 to 300	-	9 to 300	9 to 300	9 to 300
32	_	-	15 to 500	15 to 500	_
40	25 to 700	-	25 to 700	25 to 700	25 to 700
50	35 to 1100	35 to 1100	35 to 1100	35 to 1100	35 to 1100
65	60 to 2000	60 to 2000	60 to 2000	60 to 2000	60 to 2000
80	90 to 3000	90 to 3000	90 to 3000	90 to 3000	90 to 3000
100	145 to 4700	145 to 4700	145 to 4700	145 to 4700	145 to 4700
125	_	220 to 7500	220 to 7500	220 to 7500	-
[mm]		Min./max. full so	cale value (v $\approx$ 0.3 or 1	0 m/s) in [m <sup>3</sup> /h]	
150	_	20 to 600	20 to 600	20 to 600	_
200	_	35 to 1100	35 to 1100	35 to 1100	_
250	_	55 to 1700	55 to 1700	55 to 1700	-
300	_	80 to 2400	80 to 2400	80 to 2400	_
350	_	110 to 3300	110 to 3300	110 to 3300	-
375	_	140 to 4200	140 to 4200	-	_
400	_	140 to 4200	140 to 4200	140 to 4200	_
450	_	180 to 5400	180 to 5400	180 to 5400	-
500	_	220 to 6600	220 to 6600	220 to 6600	-
600	_	310 to 9600	310 to 9600	310 to 9600	-
700	_	420 to 13500	420 to 13500	-	-
750	-	480 to 15200	480 to 15200	_	_
800	_	550 to 18000	550 to 18000	-	-
900	-	690 to 22500	690 to 22500	-	_
1000	_	850 to 28000	850 to 28000	-	_
1050	_	950 to 40000	950 to 40000	-	-
1200	_	1250 to 40000	1250 to 40000	_	-
1400	_	-	1700 to 55000	-	-
1600	_	-	2200 to 70000	-	_
1800	_	_	2800 to 90000	_	_
2000	-	-	3400 to 110000	-	_

Nominal diameter	Promag D	Promag L	Promag W	Promag P	Promag H
[inch]		Min./max. full sca	ale value (v $\approx$ 0.3 or	10 m/s) in [gal/min	]
1 <sup>1</sup> / <sub>12</sub> "	_	-	_	-	0.015 to 0.5
<sup>5</sup> / <sub>32</sub> "	-	-	_	-	0.07 to 2
<sup>5</sup> / <sub>16</sub> "	-	-	_	-	0.25 to 8
<sup>1</sup> / <sub>2</sub> "	-	-	-	1.0 to 27	1.0 to 27
1"	2.5 to 80	-	2.5 to 80	2.5 to 80	2.5 to 80
1 1/4"	-	-	4 to 130	4 to 130	_
1 1/2"	7 to 190	7 to 190	7 to 190	7 to 190	7 to 190
2"	10 to 300	10 to 300	10 to 300	10 to 300	10 to 300
2 1/2"	16 to 500	16 to 500	16 to 500	16 to 500	16 to 500
3"	24 to 800	24 to 800	24 to 800	24 to 800	24 to 800
4"	40 to 1250	40 to 1250	40 to 1250	40 to 1250	40 to 1250
5"	-	60 to 1950	60 to 1950	60 to 1950	_
6"	-	90 to 2650	90 to 2650	90 to 2650	-
8"	-	155 to 4850	155 to 4850	155 to 4850	-
10"	-	250 to 7500	250 to 7500	250 to 7500	-
12"	-	350 to 10600	350 to 10600	350 to 10600	_
14"	-	500 to 15000	500 to 15000	500 to 15000	_
15"	-	600 to 19000	600 to 19000	-	-
16"	-	600 to 19000	600 to 19000	600 to 19000	-
18"	-	800 to 24000	800 to 24000	800 to 24000	_
20"	-	1000 to 30000	1000 to 30000	1000 to 30000	-
24"	-	1400 to 44000	1400 to 44000	1400 to 44000	-
28"	-	1900 to 60000	1900 to 60000	-	_
30"	-	2150 to 67000	2150 to 67000	-	-
32"	-	2450 to 80000	2450 to 80000	-	_
36"	-	3100 to 100000	3100 to 100000	-	-
40"	-	3800 to 125000	3800 to 125000	-	-
42"	-	4200 to 135000	4200 to 135000	-	_
48"	-	5500 to 175000	5500 to 175000	-	-
[inch]		Min./max. full sc	ale value ( $v \approx 0.3$ or	10 m/s) in [Mgal/d]	
54"	-	-	9 to 300	-	-
60"	-	-	12 to 380	-	-
66"	_	-	14 to 500	-	-
72"	-	_	16 to 570	-	-
78"		1	18 to 650	<u> </u>	1

## Recommended flow (US units)

## 3.2.8 Length of connecting cable

In order to ensure measuring accuracy, comply with the following instructions when installing the remote version:

- Fix cable run or lay in armored conduit. Cable movements can falsify the measuring signal especially in the case of low fluid conductivities.
- Route the cable well clear of electrical machines and switching elements.
- Ensure potential equalization between sensor and transmitter, if necessary.
- The permitted connecting cable length L<sub>max</sub> is determined by the fluid conductivity (→ ☑ 16). A minimum conductivity of 20 µS/cm is required for measuring demineralized water. Most liquids can be measured as of a minimum conductivity of 5 µS/cm.
- The maximum connecting cable length is 10 m (32.8 ft) when empty pipe detection (EPD  $\rightarrow \equiv 73$ ) is switched on.

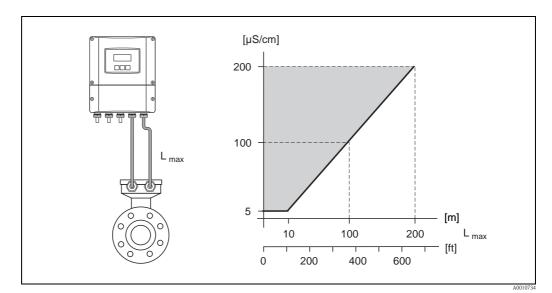


Fig. 16: Permissible cable length for the remote version

Area shaded gray = permitted range Lmax = connecting cable length in [m] Fluid conductivity in [µS/cm]

## 3.3 Installation instructions

#### 3.3.1 Installing the Promag D sensor

The sensor is installed between the pipe flanges with a mounting kit. The device is centered using recesses on the sensor ( $\rightarrow \ge 22$ ).



A mounting kit consisting of mounting bolts, seals, nuts and washers can be ordered separately  $(\rightarrow \ge 76)$ . Centering sleeves are provided with the device if they are required for the installation.

#### Caution!

When installing the transmitter in the pipe, observe the necessary torques ( $\rightarrow \ge 23$ ).

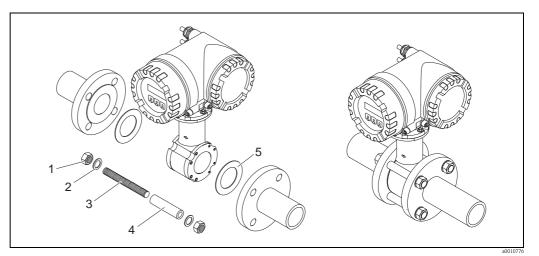


Fig. 17: Mounting the sensor

- 1 Nut
- 2 Washer
- 3 Mounting bolt
- 4 Centering sleeve
- 5 Seal

#### Seals

When installing the sensor, make sure that the seals used do not project into the pipe cross-section.



#### Caution!

Risk of short circuit! Do not use electrically conductive sealing compounds such as graphite! An electrically conductive layer could form on the inside of the measuring tube and short-circuit the measuring signal.



## Note!

Use seals with a hardness rating of 70° Shore.



#### Arrangement of the mounting bolts and centering sleeves

The device is centered using recesses on the sensor. The arrangement of the mounting bolts and the use of the centering sleeves supplied depend on the nominal diameter, the flange standard und the pitch circle diameter.

		Process connection	
	EN (DIN)	ANSI	JIS
DN 25 to 40 (DN 1" to 1 ½")			
	A0010896	A0010824	A0010896
DN 50 (DN 2")			
DN 65	A0010897	A0010825	A0010825
			A0012171
DN 80 (DN 3")		A0010827	A0010820
DN 100 (DN 4")			A0012169
2 = EN (DIN) flang	with centering sleeves ges: 4-hole $\rightarrow$ with centering slee ges: 8-hole $\rightarrow$ without centering s	ves leeves	

#### Screw tightening torques (Promag D)

Please note the following:

- The tightening torques listed below are for lubricated threads only.
- Always tighten the screws uniformly and in diagonally opposite sequence.
- Overtightening the screws will deform the sealing faces or damage the seals.
- The tightening torques listed below apply only to pipes not subjected to tensile stress.

The tightening torques apply to situations where an EPDM soft material flat seal (e.g. 70 Shore) is used.

Tightening torques, mounting bolts and centering sleeves for EN (DIN) PN 16

Nominal diameter	Mounting bolts	Centering sleeve length	Tightening torque [Nm] with a process flange with a		
[mm]	[mm]	[mm]	smooth seal face	raised face	
25	$4 \times M12 \times 145$	54	19	19	
40	$4 \times M16 \times 170$	68	33	33	
50	$4 \times M16 \times 185$	82	41	41	
65 <sup>1)</sup>	$4 \times M16 \times 200$	92	44	44	
65 <sup>2)</sup>	$8 \times M16 \times 200$	_ 3)	29	29	
80	8 × M16 × 225	116	36	36	
100	$8 \times M16 \times 260$	147	40	40	

<sup>1)</sup> EN (DIN) flanges: 4-hole  $\rightarrow$  with centering sleeves

 $^{2)}$  EN (DIN) flanges: 8-hole  $\rightarrow$  without centering sleeves

<sup>3)</sup> A centering sleeve is not required. The device is centered directly via the sensor housing.

Nominal diameter	Mounting bolts	Centering sleeve length	Tightening torque [Nm] with a process flange with a			
[mm]	[mm]	[mm]	smooth seal face raised face			
25	$4 \times M16 \times 170$	54	24	24		
40	$4 \times M16 \times 170$	68	32	25		
50	4 × M16 × 185	- *	38	30		
65	$4 \times M16 \times 200$	- *	42	42		
80	8 × M16 × 225	- *	36	28		
100	8 × M16 × 260	- *	39	37		
* A centering sl	eeve is not required. The de	evice is centered directly vi	a the sensor housing.			

Tightening torques, mounting bolts and centering sleeves for JIS 10 K

#### Tightening torques, mounting bolts and centering sleeves for ANSI Class 150

Nominal diameter	Mounting bolts	Centering sleeve length	Tightening torque [lbf $\cdot$ ft] with a process flange with a		
[inch]	[inch]	[inch]	smooth seal face	raised face	
1"	4 × UNC 1/2" × 5.70"	- *	14	7	
1 1/2"	4 × UNC 1/2" × 6.50"	- *	21	14	
2"	4 × UNC 5/8" × 7.50"	- *	30	27	
3"	4 × UNC 5/8" × 9.25"	- *	31	31	
4"	8 × UNC 5/8" × 10,4"	5,79	28	28	

A centering sleeve is not required. The device is centered directly via the sensor hour

## 3.3.2 Installing the Promag L sensor

#### Caution!

- The protective covers mounted on the two sensor flanges (DN 50...300) are used to hold the lap joint flanges in place and to protect the PTFE liner during transportation. Consequently, do not remove these covers until immediately before the sensor is installed in the pipe.
- The covers must remain in place while the device is in storage.
- Make sure that the lining is not damaged or removed from the flanges.

# Note!

Bolts, nuts, seals, etc. are not included in the scope of supply and must be supplied by the customer.

The sensor is designed for installation between the two piping flanges.

- Observe in any case the necessary screw tightening torques on  $\rightarrow$   $\supseteq$  25
- If grounding disks are used, follow the mounting instructions which will be enclosed with the shipment
- To comply with the device specification, a concentrical installation in the measuring section is required

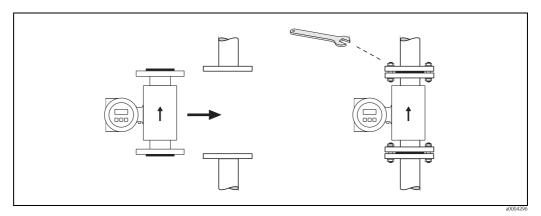


Fig. 18: Installing the Promag L sensor

#### Seals

Comply with the following instructions when installing seals:

- Hard rubber lining  $\rightarrow$  additional seals are **always** necessary.
- Polyurethane lining  $\rightarrow$  **no** seals are required.
- PTFE lining  $\rightarrow$  **no** seals are required.
- For DIN flanges, use only seals according to EN 1514-1.
- Make sure that the seals do not protrude into the piping cross-section.

#### Caution!

Risk of short circuit!

Do not use electrically conductive sealing compounds such as graphite! An electrically conductive layer could form on the inside of the measuring tube and short-circuit the measuring signal.

#### Ground cable

- If necessary, special ground cables for potential equalization can be ordered as an accessory ( $\rightarrow \ge 76$ ).
- Information on potential equalization and detailed mounting instructions for the use of ground cables can be found on  $\rightarrow \textcircled{}{}$  55.

#### Screw tightening torques (Promag L)

Please note the following:

- The tightening torques listed below are for lubricated threads only.
- Always tighten the screws uniformly and in diagonally opposite sequence.
- Overtightening the screws will deform the sealing faces or damage the seals.
- The tightening torques listed below apply only to pipes not subjected to tensile stress.

Promag L tightening torques for EN (DIN)

Nominal diameter	EN (DIN)		Ma	ax. tightening torq	lne
			Hard rubber	Polyurethane	PTFE
[mm]	Pressure rating	Threaded	[Nm]	[Nm]	[Nm]
	[bar]	fasteners			
50	PN 10/16	4 × M 16	-	15	40
65*	PN 10/16	8 × M 16	-	10	22
80	PN 10/16	8 × M 16	-	15	30
100	PN 10/16	8 × M 16	-	20	42
125	PN 10/16	8 × M 16	-	30	55
150	PN 10/16	8 × M 20	-	50	90
200	PN 10	8 × M 20	-	65	130
250	PN 10	12 × M 20	-	50	90
300	PN 10	12 × M 20	-	55	100
350	PN 6	12 × M 20	111	120	-
350	PN 10	16 × M 20	112	118	-
400	PN 6	16 × M 20	90	98	-
400	PN 10	16 × M 24	151	167	-
450	PN 6	16 × M 20	112	126	-
450	PN 10	20 × M 24	153	133	-
500	PN 6	20 × M 20	119	123	-
500	PN 10	20 × M 24	155	171	-
600	PN 6	20 × M 24	139	147	-
600	PN 10	20 × M 27	206	219	-
700	PN 6	24 × M 24	148	139	-
700	PN 10	24 × M 27	246	246	-
800	PN 6	24 × M 27	206	182	-
800	PN 10	24 × M 30	331	316	-
900	PN 6	24 × M 27	230	637	-
900	PN 10	28 × M 30	316	307	-
1000	PN 6	28 × M 27	218	208	-
1000	PN 10	28 × M 33	402	405	-
1200	PN 6	32 × M 30	319	299	-
1200	PN 10	32 × M 36	564	568	-
* Designed acc. to EN	1092-1 (not to DIN 2	501)			

Promag L tightening torques for ANSI

	al diam- er	ANSI	Threaded fasteners	Max. tightening torque					
		Pressure rating		Hard	rubber	Polyur	ethane	PT	FE
[mm]	[inch]	[lbs]		[Nm]	[lbf ∙ ft]	[Nm]	[lbf ∙ ft]	[Nm]	[lbf · ft]
50	2"	Class 150	4 × 5/8"	-	-	15	11	40	29
80	3"	Class 150	4 × 5/8"	-	-	25	18	65	48
100	4"	Class 150	8 × 5/8"	-	-	20	15	44	32
150	6"	Class 150	8 × ¾"	-	-	45	33	90	66
200	8"	Class 150	8 × ¾"	-	-	65	48	125	92
250	10"	Class 150	12 × 7/8"	-	-	55	41	100	74
300	12"	Class 150	12 × 7/8"	-	-	68	56	115	85
350	14"	Class 150	12 × 1"	135	100	158	117	-	-

	al diam- er	ANSI	Threaded fasteners	Max. tightening torque					
		Pressure rating		Hard rubber Polyurethane PTFE			FE		
[mm]	[inch]	[lbs]		[Nm]	[lbf · ft]	[Nm]	[lbf · ft]	[Nm]	[lbf · ft]
400	16"	Class 150	16 × 1"	128	94	150	111	-	-
450	18"	Class 150	16 × 1 1/8"	204	150	234	173	-	-
500	20"	Class 150	20 × 1 1/8"	183	135	217	160	-	-
600	24"	Class 150	20 × 1 ¼"	268	198	307	226	-	-

## Promag L tightening torques for AWWA

Nomina et	al diam- er	AWWA	Threaded fasteners	Max. tightening torque					
		Pressure rating		Hartg	ummi	Polyur	ethane	РТ	FE
[mm]	[inch]			[Nm]	[lbf · ft]	[Nm]	[lbf · ft]	[Nm]	[lbf · ft]
700	28"	Class D	28 × 1 ¼"	247	182	292	215	-	-
750	30"	Class D	28 × 1 ¼"	287	212	302	223	-	-
800	32"	Class D	28 × 1 ½"	394	291	422	311	-	-
900	36"	Class D	32 × 1 ½"	419	309	430	317	-	-
1000	40"	Class D	36 × 1 ½"	420	310	477	352	-	-
1050	42"	Class D	36 × 1 ½"	528	389	518	382	-	-
1200	48"	Class D	44 × 1 ½"	552	407	531	392	-	-

Promag L tightening torques for AS 2129

Nominal diameter	AS 2129	Threaded fasteners	Max. tightening torque				
	Pressure rating		Hard rubber	Polyurethane	PTFE		
[mm]			[Nm]	[Nm]	[Nm]		
350	Table E	12 × M 24	203	-	-		
400	Table E	12 × M 24	226	-	-		
450	Table E	16 × M 24	226	-	-		
500	Table E	16 × M 24	271	-	-		
600	Table E	16 × M 30	439	-	-		
700	Table E	20 × M 30	355	-	-		
750	Table E	20 × M 30	559	-	-		
800	Table E	20 × M 30	631	-	-		
900	Table E	24 × M 30	627	-	-		
1000	Table E	24 × M 30	634	-	-		
1200	Table E	32 × M 30	727	-	-		

Promag L tightening torques for AS 4087

Nominal dia- meter	AS 4087	Threaded fasteners	Max. tightening torque			
	Pressure rating		Hard rubber	Polyurethane	PTFE	
[mm]			[Nm]	[Nm]	[Nm]	
350	PN 16	12 × M 24	203	-	-	
375	PN 16	12 × M 24	137	-	-	
400	PN 16	12 × M 24	226	-	-	
450	PN 16	12 × M 24	301	-	-	
500	PN 16	16 × M 24	271	-	-	
600	PN 16	16 × M 27	393	-	-	
700	PN 16	20 × M 27	330	-	-	
750	PN 16	20 × M 30	529	-	-	
800	PN 16	20 × M 33	631	-	-	
900	PN 16	24 × M 33	627	-	-	
1000	PN 16	24 × M 33	595	-	-	
1200	PN 16	32 × M 33	703	-	-	



#### 3.3.3 Installing the Promag W sensor

#### Note!

Bolts, nuts, seals, etc. are not included in the scope of supply and must be supplied by the customer.

- The sensor is designed for installation between the two piping flanges.
- Observe in any case the necessary screw tightening torques on  $\rightarrow \ge 27$
- If grounding disks are used, follow the mounting instructions which will be enclosed with the shipment

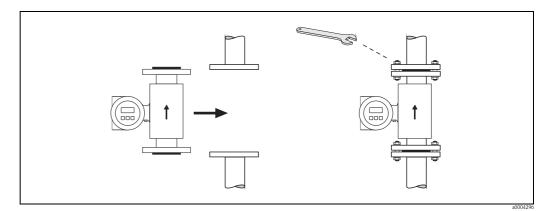


Fig. 19: Installing the Promag W sensor

#### Seals

Comply with the following instructions when installing seals:

- Hard rubber lining  $\rightarrow$  additional seals are **always** necessary.
- Polyure than e lining  $\rightarrow$  **no** seals are required.
- For DIN flanges, use only seals according to EN 1514-1.
- Make sure that the seals do not protrude into the piping cross-section.

Caution!

Risk of short circuit!

Do not use electrically conductive sealing compounds such as graphite! An electrically conductive layer could form on the inside of the measuring tube and short-circuit the measuring signal.

#### Ground cable

- If necessary, special ground cables for potential equalization can be ordered as an accessory ( $\rightarrow \ge 76$ ).
- Information on potential equalization and detailed mounting instructions for the use of ground cables can be found on  $\rightarrow \ge 55$

#### Screw tightening torques (Promag W)

Please note the following:

- The tightening torques listed below are for lubricated threads only.
- Always tighten the screws uniformly and in diagonally opposite sequence.
- Overtightening the screws will deform the sealing faces or damage the seals.
- The tightening torques listed below apply only to pipes not subjected to tensile stress.

#### Tightening torques for:

- EN (DIN)→ 🖹 28
- JIS→ 🖹 30
- ANSI→ 🖹 29
- AWWA  $\rightarrow$   $\ge$  30
- AS  $2129 \rightarrow \textcircled{2} 31$  AS  $4087 \rightarrow \textcircled{2} 31$

#### Promag W tightening torques for EN (DIN)

Nominal diameter	EN (DIN)	Threaded	Max. tightening torque [Nm]		
[mm]	Pressure rating [bar]	fasteners	Hard rubber	Polyurethane	
25	PN 40	4 × M 12	-	15	
32	PN 40	4 × M 16	-	24	
40	PN 40	4 × M 16	-	31	
50	PN 40	4 × M 16	48	40	
65*	PN 16	8 × M 16	32	27	
65	PN 40	8 × M 16	32	27	
80	PN 16	8 × M 16	40	34	
80	PN 40	8 × M 16	40	34	
100	PN 16	8 × M 16	43	36	
100	PN 40	8 × M 20	59	50	
125	PN 16	8 × M 16	56	48	
125	PN 40	8 × M 24	83	71	
150	PN 16	8 × M 20	74	63	
150	PN 40	8 × M 24	104	88	
200	PN 10	8 × M 20	106	91	
200	PN 16	12 × M 20	70	61	
200	PN 25	12 × M 24	104	92	
250	PN 10	12 × M 20	82	71	
250	PN 16	12 × M 24	98	85	
250	PN 25	12 × M 27	150	134	
300	PN 10	12 × M 20	94	81	
300	PN 16	12 × M 24	134	118	
300	PN 25	16 × M 27	153	138	
350	PN 6	12 × M 20	111	120	
350	PN 10	16 × M 20	112	118	
350	PN 16	16 × M 24	152	165	
350	PN 25	$16 \times M 30$	227	252	
400	PN 6	$16 \times M 20$	90	98	
400	PN 10	$16 \times M 20$ $16 \times M 24$	151	167	
400	PN 16	16 × M 27	193	215	
400	PN 25	16 × M 33	289	326	
450	PN 6	16 × M 20	112	126	
450	PN 10	$20 \times M 24$	153	133	
450	PN 16	$20 \times M 24$ $20 \times M 27$	198	196	
450	PN 25	20 × M 27 20 × M 33	256	253	
500	PN 6	20 × M 33 20 × M 20	119	123	
500	PN 10	20 × M 20 20 × M 24	155	125	
500	PN 16	20 × M 24 20 × M 30	275	300	
500	PN 25	20 × M 30 20 × M 33	317	360	
600	PN 6	20 × M 33 20 × M 24	139	147	
600	PN 10	20 × M 24 20 × M 27	206	219	
600 *	PN 10	$\frac{20 \times M 27}{20 \times M 33}$	415	443	
600	PN 25	20 × M 36	431	516	
700	PN 6	$\frac{24 \times M 24}{24 \times M 27}$	148	139	
700 700	PN 10 PN 16	24 × M 27 24 × M 33	246 278	246 318	

Nominal diameter	EN (DIN)	Threaded	Max. tightenii	Max. tightening torque [Nm]		
[mm]	Pressure rating [bar]	fasteners	Hard rubber	Polyurethane		
700	PN 25	24 × M 39	449	507		
800	PN 6	$24 \times M 27$	206	182		
800	PN 10	24 × M 30	331	316		
800	PN 16	24 × M 36	369	385		
800	PN 25	24 × M 45	664	721		
900	PN 6	$24 \times M 27$	230	637		
900	PN 10	28 × M 30	316	307		
900	PN 16	28 × M 36	353	398		
900	PN 25	28 × M 45	690	716		
1000	PN 6	28 × M 27	218	208		
1000	PN 10	28 × M 33	402	405		
1000	PN 16	28 × M 39	502	518		
1000	PN 25	28 × M 52	970	971		
1200	PN 6	32 × M 30	319	299		
1200	PN 10	32 × M 36	564	568		
1200	PN 16	32 × M 45	701	753		
1400	PN 6	36 × M 33	430	398		
1400	PN 10	36 × M 39	654	618		
1400	PN 16	36 × M 45	729	762		
1600	PN 6	40 × M 33	440	417		
1600	PN 10	40 × M 45	946	893		
1600	PN 16	40 × M 52	1007	1100		
1800	PN 6	44 × M 36	547	521		
1800	PN 10	44 × M 45	961	895		
1800	PN 16	44 × M 52	1108	1003		
2000	PN 6	48 × M 39	629	605		
2000	PN 10	48 × M 45	1047	1092		
2000	PN 16	48 × M 56	1324	1261		
* Designed acc. to EN	1092-1 (not to DIN 2501)		1	1		

Promag W tightening torques for ANSI

Non	ninal	ANSI			Max. tighte	ning torque	
diam	neter	Pressure rating	Threaded	Hard	rubber	Polyur	ethane
[mm]	[inch]	[lbs]	fasteners	[Nm]	[lbf · ft]	[Nm]	[lbf · ft]
25	1"	Class 150	$4 \times \frac{1}{2}$ "	-	-	7	5
25	1"	Class 300	4 × 5/8"	-	-	8	6
40	1 1⁄2"	Class 150	$4 \times \frac{1}{2}$ "	-	-	10	7
40	1 1⁄2"	Class 300	4 × ¾"	-	-	15	11
50	2"	Class 150	4 × 5/8"	35	26	22	16
50	2"	Class 300	8 × 5/8"	18	13	11	8
80	3"	Class 150	4 × 5/8"	60	44	43	32
80	3"	Class 300	8 × ¾"	38	28	26	19
100	4"	Class 150	8 × 5/8"	42	31	31	23
100	4"	Class 300	8 × ¾"	58	43	40	30
150	6"	Class 150	8 × ¾"	79	58	59	44
150	6"	Class 300	12 × ¾"	70	52	51	38
200	8"	Class 150	8 × ¾"	107	79	80	59
250	10"	Class 150	12 × 7/8"	101	74	75	55
300	12"	Class 150	12 × 7/8"	133	98	103	76
350	14"	Class 150	12 × 1"	135	100	158	117
400	16"	Class 150	16 × 1"	128	94	150	111
450	18"	Class 150	16 × 1 1/8"	204	150	234	173
500	20"	Class 150	20 × 1 1/8"	183	135	217	160
600	24"	Class 150	20 × 1 ¼"	268	198	307	226

Nominal diameter	JIS	Threaded	Max. tightenin	ng torque [Nm]
[mm]	Pressure rating	fasteners	Hard rubber	Polyurethane
25	10K	4 × M 16	-	19
25	20K	4 × M 16	-	19
32	10K	4 × M 16	-	22
32	20K	4 × M 16	-	22
40	10K	4 × M 16	-	24
40	20K	4 × M 16	-	24
50	10K	4 × M 16	40	33
50	20K	8 × M 16	20	17
65	10K	4 × M 16	55	45
65	20K	8 × M 16	28	23
80	10K	8 × M 16	29	23
80	20K	8 × M 20	42	35
100	10K	8 × M 16	35	29
100	20K	8 × M 20	56	48
125	10K	8 × M 20	60	51
125	20K	8 × M 22	91	79
150	10K	8 × M 20	75	63
150	20K	12 × M 22	81	72
200	10K	12 × M 20	61	52
200	20K	12 × M 22	91	80
250	10K	12 × M 22	100	87
250	20K	12 × M 24	159	144
300	10K	16 × M 22	74	63
300	20K	16 × M 24	138	124

## Promag W tightening torques for JIS

Promag W tightening torques for AWWA

Nominal	diameter	AWWA		Max. tightening torque				
		Pressure	Threaded	Threaded Hard rubber Poly		Polyur	rethane	
[mm]	[inch]	rating	fasteners	[Nm]	[lbf · ft]	[Nm]	[lbf ∙ ft]	
700	28"	Class D	28 × 1 ¼"	247	182	292	215	
750	30"	Class D	28 × 1 ¼"	287	212	302	223	
800	32"	Class D	28 × 1 ½"	394	291	422	311	
900	36"	Class D	32 × 1 ½"	419	309	430	317	
1000	40"	Class D	36 × 1 ½"	420	310	477	352	
1050	42"	Class D	36 × 1 ½"	528	389	518	382	
1200	48"	Class D	44 × 1 ½"	552	407	531	392	
1350	54"	Class D	44 × 1 ¾"	730	538	633	467	
1500	60"	Class D	52 × 1 ¾"	758	559	832	614	
1650	66"	Class D	52 × 1 ¾"	946	698	955	704	
1800	72"	Class D	60 × 1 ¾"	975	719	1087	802	
2000	78"	Class D	64 × 2"	853	629	786	580	

Nominal diameter [mm]	AS 2129 Pressure rating	Threaded fasteners	Max. tightening torque [Nm] Hard rubber
50	Table E	$4 \times M 16$	32
80	Table E	4 × M 16	49
100	Table E	8 × M 16	38
150	Table E	8 × M 20	64
200	Table E	8 × M 20	96
250	Table E	12 × M 20	98
300	Table E	12 × M 24	123
350	Table E	12 × M 24	203
400	Table E	12 × M 24	226
450	Table E	16 × M 24	226
500	Table E	16 × M 24	271
600	Table E	16 × M 30	439
700	Table E	20 × M 30	355
750	Table E	20 × M 30	559
800	Table E	20 × M 30	631
900	Table E	24 × M 30	627
1000	Table E	24 × M 30	634
1200	Table E	32 × M 30	727

Promag W tightening torques for AS 2129

Promag W tightening torques for AS 4087

Nominal diameter [mm]	AS 4087 Pressure rating	Threaded fasteners	Max. tightening torque [Nm] Hard rubber
50	Table E	4 × M 16	32
80	PN 16	4 × M 16	49
100	PN 16	4 × M 16	76
150	PN 16	8 × M 20	52
200	PN 16	8 × M 20	77
250	PN 16	8 × M 20	147
300	PN 16	12 × M 24	103
350	PN 16	12 × M 24	203
375	PN 16	12 × M 24	137
400	PN 16	12 × M 24	226
450	PN 16	12 × M 24	301
500	PN 16	16 × M 24	271
600	PN 16	16 × M 27	393
700	PN 16	20 × M 27	330
750	PN 16	20 × M 30	529
800	PN 16	20 × M 33	631
900	PN 16	24 × M 33	627
1000	PN 16	24 × M 33	595
1200	PN 16	32 × M 33	703

## 3.3.4 Installing the Promag P sensor

#### Caution!

- The protective covers mounted on the two sensor flanges guard the PTFE, which is turned over the flanges. Consequently, do not remove these covers until **immediately before** the sensor is installed in the pipe.
- The covers must remain in place while the device is in storage.
- Make sure that the lining is not damaged or removed from the flanges.

# Note!

Bolts, nuts, seals, etc. are not included in the scope of supply and must be supplied by the customer.

The sensor is designed for installation between the two piping flanges.

- Observe in any case the necessary screw tightening torques on  $\rightarrow \ge 33$
- If grounding disks are used, follow the mounting instructions which will be enclosed with the shipment

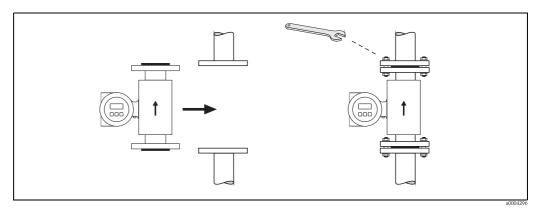


Fig. 20: Installing the Promag P sensor

#### Seals

Comply with the following instructions when installing seals:

- PFA or PTFE lining  $\rightarrow$  **No** seals are required!
- For DIN flanges, use only seals according to EN 1514-1.
- Make sure that the seals do not protrude into the piping cross-section.

#### Caution!

Risk of short circuit! Do not use electrically conductive sealing compounds such as graphite! An electrically conductive layer could form on the inside of the measuring tube and short-circuit the measuring signal.

#### Ground cable

- If necessary, special ground cables for potential equalization can be ordered as an accessory ( $\rightarrow \ge 76$ ).
- Information on potential equalization and detailed mounting instructions for the use of ground cables can be found on  $\rightarrow \textcircled{1}{53}$

#### Installing the high-temperature version (with PFA lining)

The high-temperature version has a housing support for the thermal separation of sensor and transmitter. The high-temperature version is always used for applications in which high ambient temperatures are encountered **in conjunction with** high fluid temperatures. The high-temperature version is obligatory if the fluid temperature exceeds +150 °C.



You will find information on permissible temperature ranges on  $\rightarrow \ge 100$ 

#### Insulation

Note!

Pipes generally have to be insulated if they carry very hot fluids, in order to avoid energy losses and to prevent accidental contact with pipes at temperatures that could cause injury. Guidelines regulating the insulation of pipes have to be taken into account.



#### Caution!

Risk of measuring electronics overheating. The housing support dissipates heat and its entire surface area must remain uncovered. Make sure that the sensor insulation does not extend past the top of the two sensor shells.

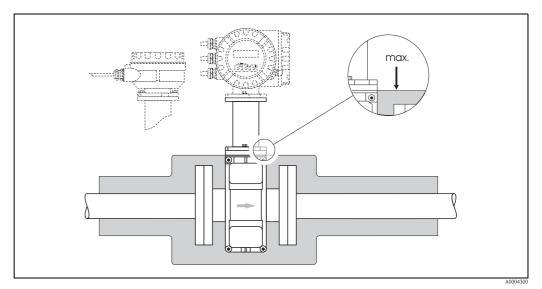


Fig. 21: Promag P (high-temperature version): Insulating the pipe

#### Tightening torques for threaded fasteners (Promag P)

Please note the following:

- The tightening torques listed below are for lubricated threads only.
- Always tighten the screws uniformly and in diagonally opposite sequence.
- Overtightening the screws will deform the sealing faces or damage the seals.
- The tightening torques listed below apply only to pipes not subjected to tensile stress.

Tightening torques for:

- EN (DIN) → 🖹 34
- ANSI  $\rightarrow$   $\geqq$  35
- JIS → 🖹 35
- AS 2129 → 🖹 36
- AS 4087 → 🖹 36

ominal diameter	EN (DIN)	Threaded	Max. tightening torque [Nm]		
[mm]	Pressure rating [bar]	fasteners	PTFE	PFA	
15	PN 40	4 × M 12	11	_	
25	PN 40	4 × M 12	26	20	
32	PN 40	4 × M 16	41	35	
40	PN 40	4 × M 16	52	47	
50	PN 40	4 × M 16	65	59	
65 *	PN 16	8 × M 16	43	40	
65	PN 40	8 × M 16	43	40	
80	PN 16	8 × M 16	53	48	
80	PN 40	8 × M 16	53	48	
100	PN 16	8 × M 16	57	51	
100	PN 40	8 × M 20	78	70	
125	PN 16	8 × M 16	75	67	
125	PN 40	8 × M 24	111	99	
150	PN 16	8 × M 20	99	85	
150	PN 40	8 × M 24	136	120	
200	PN 10	8 × M 20	141	101	
200	PN 16	12 × M 20	94	67	
200	PN 25	12 × M 24	138	105	
250	PN 10	12 × M 20	110	_	
250	PN 16	12 × M 24	131	_	
250	PN 25	12 × M 27	200	_	
300	PN 10	12 × M 20	125	_	
300	PN 16	12 × M 24	179	_	
300	PN 25	16 × M 27	204	_	
350	PN 10	16 × M 20	188	_	
350	PN 16	16 × M 24	254	_	
350	PN 25	16 × M 30	380	_	
400	PN 10	16 × M 24	260	_	
400	PN 16	16 × M 27	330	_	
400	PN 25	16 × M 33	488	_	
450	PN 10	20 × M 24	235	_	
450	PN 16	20 × M 27	300	_	
450	PN 25	20 × M 33	385	_	
500	PN 10	20 × M 24	265	_	
500	PN 16	20 × M 30	448	-	
500	PN 25	20 × M 33	533	_	
600	PN 10	20 × M 27	345	_	
600 *	PN 16	20 × M 33	658	_	
600	PN 25	20 × M 36	731	_	

## Promag P tightening torques for EN (DIN)

Nominal	diameter	ANSI			Max. tighte	ning torque	•
		Pressure rating	Threaded	P	TFE	P	FA
[mm]	[inch]	[lbs]	fasteners	[Nm]	[lbf · ft]	[Nm]	[lbf · ft]
15	1/2"	Class 150	4 × 1/2"	6	4	-	-
15	1/2"	Class 300	$4 \times \frac{1}{2}$ "	6	4	-	-
25	1"	Class 150	$4 \times \frac{1}{2}$ "	11	8	10	7
25	1"	Class 300	4 × 5/8"	14	10	12	9
40	1 1⁄2"	Class 150	$4 \times \frac{1}{2}$ "	24	18	21	15
40	1 1⁄2"	Class 300	4 × ¾"	34	25	31	23
50	2"	Class 150	4 × 5/8"	47	35	44	32
50	2"	Class 300	8 × 5/8"	23	17	22	16
80	3"	Class 150	4 × 5/8"	79	58	67	49
80	3"	Class 300	8 × ¾"	47	35	42	31
100	4"	Class 150	8 × 5/8"	56	41	50	37
100	4"	Class 300	8 × ¾"	67	49	59	44
150	6"	Class 150	8 × ¾"	106	78	86	63
150	6"	Class 300	12 × ¾"	73	54	67	49
200	8"	Class 150	8 × ¾"	143	105	109	80
250	10"	Class 150	12 × 7/8"	135	100	-	-
300	12"	Class 150	12 × 7/8"	178	131	-	-
350	14"	Class 150	12 × 1"	260	192	-	-
400	16"	Class 150	16 × 1"	246	181	-	-
450	18"	Class 150	16 × 1 1/8"	371	274	-	-
500	20"	Class 150	20 × 1 1/8"	341	252	-	-
600	24"	Class 150	20 × 1 ¼"	477	352	-	-

Promag P tightening torques for ANSI

Promag P tightening torques for JIS

Nominal diameter	JIS		Max. tightening torque [Nm]	
[mm]	Pressure rating	Threaded fasteners	PTFE	PFA
25	10K	4 × M 16	32	27
25	20K	4 × M 16	32	27
32	10K	4 × M 16	38	_
32	20K	4 × M 16	38	-
40	10K	4 × M 16	41	37
40	20K	4 × M 16	41	37
50	10K	4 × M 16	54	46
50	20K	8 × M 16	27	23
65	10K	4 × M 16	74	63
65	20K	8 × M 16	37	31
80	10K	8 × M 16	38	32
80	20K	8 × M 20	57	46
100	10K	8 × M 16	47	38
100	20K	8 × M 20	75	58
125	10K	8 × M 20	80	66
125	20K	8 × M 22	121	103
150	10K	8 × M 20	99	81
150	20K	12 × M 22	108	72
200	10K	12 × M 20	82	54
200	20K	12 × M 22	121	88
250	10K	12 × M 22	133	_
250	20К	12 × M 24	212	_
300	10K	16 × M 22	99	-
300	20К	16 × M 24	183	-

Promag P tightening torques for AS 2129

Nominal diameter [mm]	AS 2129 Pressure rating	Threaded fasteners	Max. tightening torque [Nm] PTFE
25	Table E	4 × M 12	21
50	Table E	4 × M 16	42

Promag P tightening torques for AS 4087

Nominal diameter	AS 4087	Threaded	Max. tightening torque [Nm]
[mm]	Pressure rating	fasteners	PTFE
50	PN 16	4 × M 16	

## 3.3.5 Installing the Promag H sensor

The sensor is supplied to order, with or without pre-installed process connections. Pre-installed process connections are secured to the sensor with 4 or 6 hex-head threaded fasteners.

հ Caution!

The sensor might require support or additional attachments, depending on the application and the length of the piping run. When plastic process connections are used, the sensor must be additionally supported mechanically. A wall-mounting kit can be ordered separately from Endress+Hauser as an accessory ( $\rightarrow \equiv 76$ ).

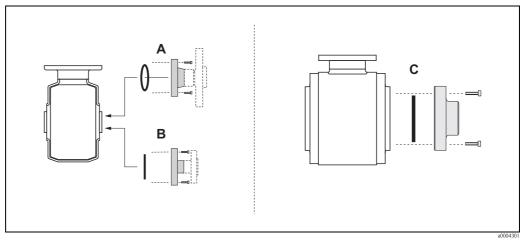


Abb. 22: Promag H process connections (DN 2...25 / DN 40...100, 1/12"...1" / DN 11/2"...4")

#### A = DN 2...25, 1/12"...1"/ process connections with O-ring

- welding flanges (DIN EN ISO 1127, ODT / SMS),
- flange (EN (DIN), ANSI, JIS ), flange PVDF (EN (DIN), ANSI, JIS )
- external and internal thread, hose connection, PVC adhesive fitting

#### B = DN 2...25, 1/12"...1"/ process connections with aseptic gasket vseal

- weld nipples (DIN 11850, ODT/SMS)
- Clamp (ISO 2852, DIN 32676, L14 AM7)
- coupling (DIN 11851, DIN 11864-1, SMS 1145)
- flange DIN 11864-2

#### C = DN 40...100, 11/2...4"/ process connections with aseptic gasket seal

- weld nipples (DIN 11850, ODT/SMS)
- Clamp (ISO 2852, DIN 32676, L14 AM7)
- coupling (DIN 11851, DIN 11864-1, ISO 2853, SMS 1145)
- flange DIN 11864-2

#### Seals

When installing the process connections, make sure that the seals are clean and correctly centered.

#### Caution!

- With metal process connections, you must fully tighten the screws. The process connection forms a metallic connection with the sensor, which ensures a defined compression of the seal.
- With plastic process connections, note the max. torques for lubricated threads (7 Nm / 5.2 lbf ft). With plastic flanges, always use seals between connection and counter flange.
- The seals must be replaced periodically, depending on the application, particularly in the case of gasket seals (aseptic version)!

The period between changes depends on the frequency of cleaning cycles, the cleaning temperature and the fluid temperature. Replacement seals can be ordered as accessories  $\rightarrow \equiv 76$ .

#### Usage and assembly of ground rings (DN 2 to 25, 1/12" to 1")

In case the process connections are made of plastic (e.g. flanges or adhesive fittings), the potential between the sensor and the fluid must be equalized using additional ground rings. If the ground rings are not installed this can affect the accuracy of the measurements or cause the destruction of the sensor through the electrochemical erosion of the electrodes.



- Depending on the option ordered, plastic disks may be installed at the process connections instead of ground rings. These plastic disks serve only as spacers and have no potential equalization function. In addition, they provide a sealing function at the interface between the sensor and process connection. For this reason, with process connections without ground rings, these plastic disks/seals must not be removed, or must always be installed.
- Ground rings can be ordered separately from Endress+Hauser as accessories ( $\rightarrow \square 76$ ). When placing the order, make certain that the ground ring is compatible with the material used for the electrodes. Otherwise, there is a risk that the electrodes may be destroyed by electrochemical corrosion! Information about the materials can be found on  $\rightarrow \square 111$ .
- Ground rings, including the seals, are mounted within the process connections. Therefore, the fitting length is not affected.
- 1. Loosen the four or six hexagonal headed bolts (1) and remove the process connection from the sensor (4).
- 2. Remove the plastic disk (3), including the two O-ring seals (2).
- 3. Place one seal (2) in the groove of the process connection.
- 4. Place the metal ground ring (3) on the process connection.
- 5. Now place the second seal (2) in the groove of the ground ring.
- 6. Finally, mount the process connection on the sensor again. With plastic process connections, note the max. torques for lubricated threads (7 Nm / 5.2 lbf ft).

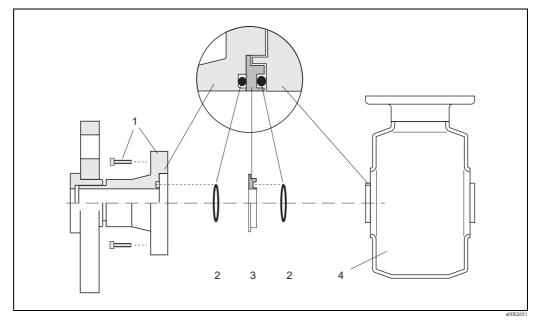


Fig. 23: Installing ground rings with Promag H (DN 2 to 25, 1/12" to 1")

1 = Hexagonal-headed bolt (process connection)

- 2 = O-ring seals
- 3 = Ground ring or plastic disk (spacer)
- 4 = Sensor

#### Welding the transmitter into the piping (weld nipples)

#### Caution!

Risk of destroying the measuring electronics. Make sure that the welding machine is *not* grounded via the sensor or the transmitter.

- 1. Tack-weld the sensor into the pipe. A suitable welding jig can be ordered separately as an accessory ( $\rightarrow \ge 76$ ).
- 2. Loosen the screws on the process connection flange and remove the sensor, complete with the seal, from the pipe.
- 3. Weld the process connection to the pipe.
- 4. Reinstall the sensor in the pipe. Make sure that everything is clean and that the seal is correctly seated.

#### Note!

- If thin-walled foodstuffs pipes are not welded correctly, the heat could damage the installed seal. It is therefore advisable to remove the sensor and the seal prior to welding.
- The pipe has to be spread approximately 8 mm to permit disassembly.

#### Cleaning with pigs

If pigs are used for cleaning, it is essential to take the inside diameters of the measuring tube and process connection into account. All the dimensions and lengths of the sensor and transmitter are provided in the separate documentation "Technical Documentation"  $\rightarrow \ge 116$ .

#### 3.3.6 Turning the transmitter housing


#### Turning the aluminum field housing



Warning!

The turning mechanism in devices with Ex d/de or FM/CSA Cl. I Div. 1 classification is not the same as that described here. The procedure for turning these housings is described in the Ex-specific documentation.

- 1. Loosen the two securing screws.
- 2. Turn the bayonet catch as far as it will go.
- Carefully lift the transmitter housing:
  Promag D: approx. 10 mm (0.39 inch) above the securing screws
  Promag L, W, P, H: to the stop
- 4. Turn the transmitter housing to the desired position:
  - Promag D: max. 180° clockwise or max. 180° counterclockwise
  - Promag L, W, P, H: max. 280° clockwise or max. 20° counterclockwise
- 5. Lower the housing into position and re-engage the bayonet catch.
- 6. Retighten the two securing screws.

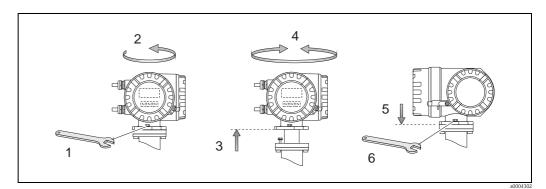

*Fig. 24: Turning the transmitter housing (aluminum field housing)* 

#### Turning the stainless-steel field housing

- 1. Loosen the two securing screws.
- 2. Carefully lift the transmitter housing as far as it will go.
- 3. Turn the transmitter housing to the desired position (max.  $2 \times 90^{\circ}$  in either direction).
- 4. Lower the housing into position.
- 5. Retighten the two securing screws.

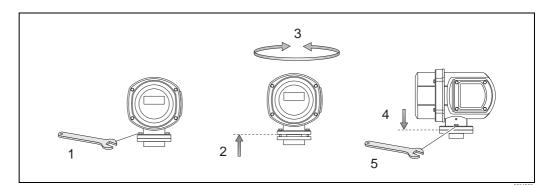


Fig. 25: Turning the transmitter housing (stainless-steel field housing)

### 3.3.7 Turning the onsite display

- 1. Unscrew the cover of the electronics compartment from the transmitter housing.
- 2. Press the side latches on the display module and remove it from the electronics compartment cover plate.
- 3. Turn the display to the desired position (max.  $4 \times 45^{\circ}$  in both directions) and reset it onto the cover plate of the electronics compartment.
- 4. Screw the cover of the electronics compartment firmly back onto the transmitter housing.

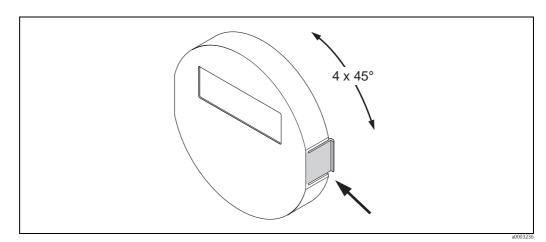


Fig. 26: Turning the local display (field housing)

### 3.3.8 Installing the wall-mount housing

There are various ways of installing the wall-mount transmitter housing:

- Direct wall mounting
- Installation in control panel (with separate mounting kit, accessories)  $\rightarrow = 42$
- Pipe mounting (with separate mounting kit, accessories)  $\rightarrow \triangleq 42$

#### Caution!

- Make sure that the ambient temperature does not exceed the permissible range at the mounting location, -20 to +60 °C (-4 to + °140 F), optional -40 to +60 °C (-40 to +140 °F). Install the device at a shady location. Avoid direct sunlight.
- Always install the wall-mount housing in such a way that the cable entries are pointing down.

#### Direct wall mounting

- 1. Drill the holes as illustrated in the graphic.
- 2. Remove the cover of the connection compartment (a).
- Push the two securing screws (b) through the appropriate bores (c) in the housing.
  Securing screws (M6): max. Ø 6.5 mm (0.26")
  Screw head: max. Ø 10.5 mm (0.41")
  - Serew field, fildx, & 10.5 fillin (0.41)
- 4. Secure the transmitter housing to the wall as indicated.
- 5. Screw the cover of the connection compartment (a) firmly onto the housing.

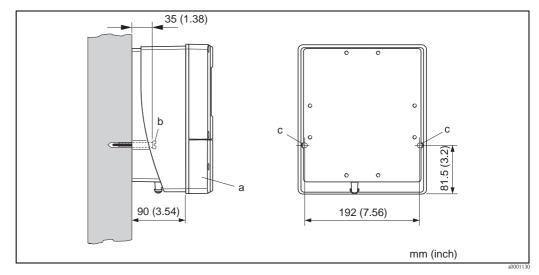


Fig. 27: Mounted directly on the wall

#### Panel-mounted installation

- 1. Prepare the opening in the panel as illustrated in the graphic.
- 2. Slide the housing into the opening in the panel from the front.
- 3. Screw the fasteners onto the wall-mount housing.
- 4. Place the threaded rods in the fasteners and screw them down until the housing is seated tightly against the panel. Afterwards, tighten the locking nuts. Additional support is not necessary.

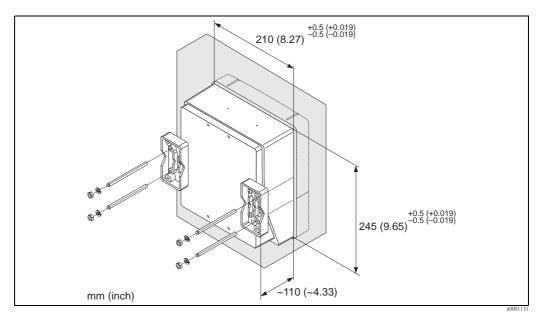


Fig. 28: Panel installation (wall-mount housing)

#### Pipe mounting

The assembly should be performed by following the instructions in the graphic.

Caution!

(<sup>1</sup>)

If the device is mounted to a warm pipe, make certain that the housing temperature does not exceed +60 °C (+140 °F), which is the maximum permissible temperature.

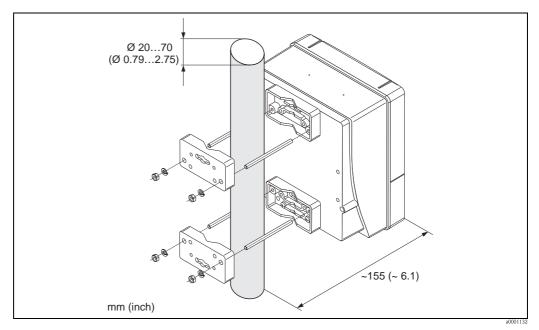


Fig. 29: Pipe mounting (wall-mount housing)

## 3.4 Post-installation check

Perform the following checks after installing the measuring device in the pipe:

Device condition and specifications	Notes
Is the device damaged (visual inspection)?	-
Does the device correspond to specifications at the measuring point, including process temperature and pressure, ambient temperature, minimum fluid conductivity, measuring range, etc.?	→ 🖹 100
Installation	Notes
Does the arrow on the sensor nameplate match the actual direction of flow through the pipe?	-
Is the position of the measuring electrode plane correct?	→ 🖹 15
Is the position of the empty pipe detection electrode correct?	→ 🖹 15
Were all screws tightened to the specified torques when the sensor was installed?	Promag D $\rightarrow \supseteq 23$ Promag L $\rightarrow \supseteq 25$ Promag W $\rightarrow \supseteq 27$ Promag P $\rightarrow \supseteq 33$
Were the correct seals used (type, material, installation)?	Promag D $\rightarrow \textcircled{21}$ Promag L $\rightarrow \textcircled{22}$ Promag W $\rightarrow \textcircled{22}$ Promag P $\rightarrow \textcircled{23}$ Promag H $\rightarrow \textcircled{23}$ 36
Are the measuring point number and labeling correct (visual inspection)?	-
Process environment / process conditions	Notes
Were the inlet and outlet runs respected?	Inlet run ≥ 5 × DN Outlet run ≥ 2 × DN
Is the measuring device protected against moisture and direct sunlight?	-
Is the sensor adequately protected against vibration (attachment, support)?	Acceleration up to 2 g by analogy with IEC 600 68-2-8



# 4 Wiring

#### Warning!

When connecting Ex-certified devices, see the notes and diagrams in the Ex-specific supplement to these Operating Instructions.

Please do not hesitate to contact your Endress+Hauser representative if you have any questions.

#### Note!

The device does not have an internal circuit breaker. For this reason, assign the device a switch or power-breaker switch capable of disconnecting the power supply line from the mains.

### 4.1 Connecting the remote version

### 4.1.1 Connecting Promag D, L, W, P, H



# Warning! Pisk of electric shock! Switch off the p

- Risk of electric shock! Switch off the power supply before opening the device. Do not install or
  wire the device while it is connected to the power supply. Failure to comply with this precaution
  can result in irreparable damage to the electronics.
- Risk of electric shock! Connect the protective conductor to the ground terminal on the housing before the power supply is applied.

### Caution!

- Only sensors and transmitters with the same serial number can be connected to one another. Communication problems can occur if the devices are not connected in this way.
- Risk of damaging the coil driver. Always switch off the power supply before connecting or disconnecting the coil cable.

#### Procedure

- 1. Transmitter: Remove the cover from the connection compartment (a).
- 2. Sensor: Remove the cover from the connection housing (b).
- 3. Feed the signal cable (c) and the coil cable (d) through the appropriate cable entries.

Caution!

Route the connecting cables securely (see "Connecting cable length"  $\rightarrow \ge 20$ ).

- 4. Terminate the signal and coil current cable as indicated in the table: Promag D, L, W, P → Refer to the table → a 47 Promag H → Refer to the "Cable termination" table → 48
- 5. Establish the wiring between the sensor and the transmitter.

The electrical wiring diagram that applies to your device can be found:

- In the corresponding graphic:
  - $\rightarrow$   $\square$  30 (Promag D)  $\rightarrow$   $\square$  31 (Promag L, W, P);  $\rightarrow$   $\square$  32 (Promag H)
- In the cover of the sensor and transmitter

#### 🗞 Note!


The cable shields of the Promag H sensor are grounded by means of the strain relief terminals (see also the "Cable termination" table  $\rightarrow \triangleq 48$ )

🖒 Caution!

Insulate the shields of cables that are not connected to eliminate the risk of short-circuits with neighboring cable shields inside the connection housing.

- 6. Transmitter: Screw the cover on the connection compartment (a).
- 7. Sensor: Secure the cover on the connection housing (b).

#### Promag D

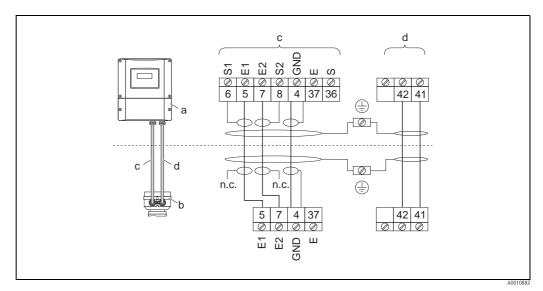

*Fig. 30:* Connecting the remote version of Promag D

- a Wall-mount housing connection compartment
- b Cover of the sensor connection housing
- c Signal cable
- d Coil current cable
- n.c. Not connected, insulated cable shields

Wire colors/Terminal No.:

5/6 = braun, 7/8 = white, 4 = green, 37/36 = yellow

#### Promag L, W, P

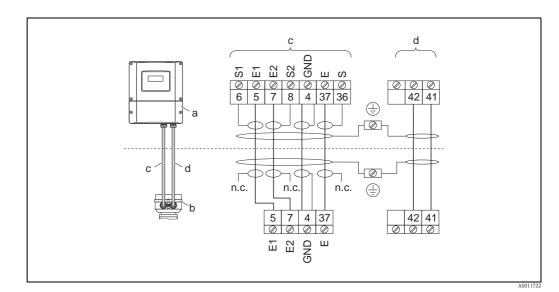


Fig. 31: Connecting the remote version of Promag L, W, P

- a Wall-mount housing connection compartment
- b Cover of the sensor connection housing
- c Signal cable
- d Coil current cable
- n.c. Not connected, insulated cable shields

Wire colors/Terminal No.:

5/6 = braun, 7/8 = white, 4 = green, 37/36 = yellow

#### Promag H


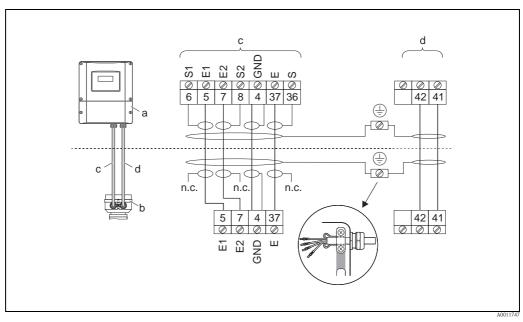


Fig. 32: Connecting the remote version of Promag H

- a Wall-mount housing connection compartment
- b Cover of the sensor connection housing
- c Signal cable
- d Coil current cable
- n.c. Not connected, insulated cable shields

Wire colors/Terminal No.:

5/6 = braun, 7/8 = white, 4 = green, 37/36 = yellow

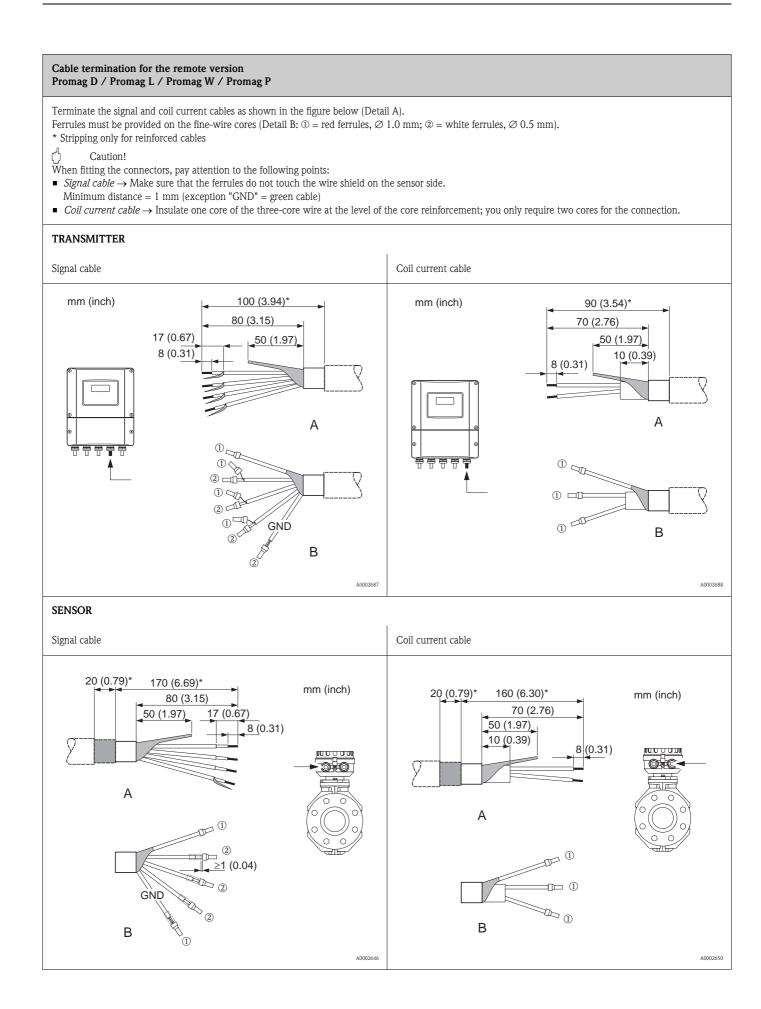

#### Cable termination for the remote version Promag H


Terminate the signal and coil current cables as shown in the figure below (Detail A).

Ferrules must be provided on the fine-wire cores (Detail B:  $\bigcirc$  = red ferrules,  $\varnothing$  1.0 mm;  $\bigcirc$  = white ferrules,  $\varnothing$  0.5 mm).

Caution!

- $\overline{\mathrm{W}}$ hen fitting the connectors, pay attention to the following points:
- Signal cable  $\rightarrow$  Make sure that the ferrules do not touch the wire shield on the sensor side.
- Minimum distance = 1 mm (exception "GND" = green cable).
- Coil current cable → Insulate one core of the three-core wire at the level of the core reinforcement; you only require two cores for the connection.
- On the sensor side, reverse both cable shields approx. 15 mm over the outer jacket. The strain relief ensures an electrical connection with the connection housing.

#### TRANSMITTER

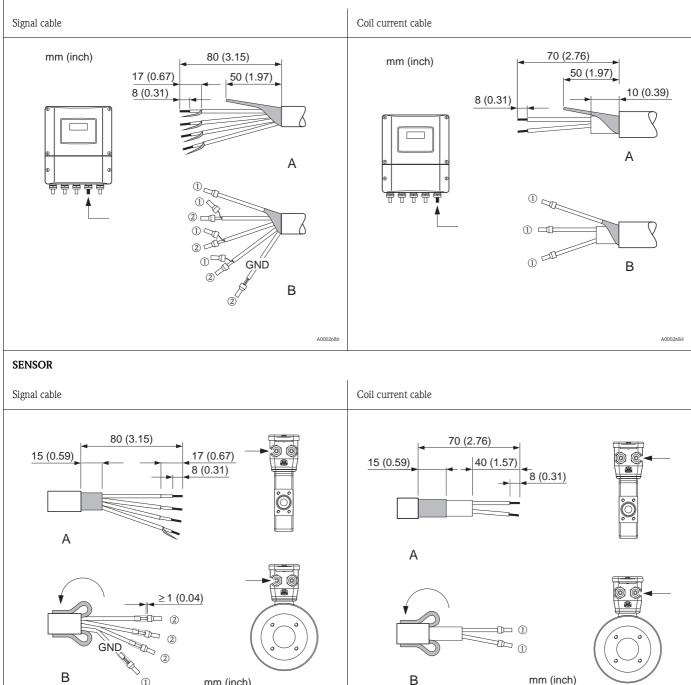

A0002647

A0002648

mm (inch)

(1)

mm (inch)


#### 4.1.2 Cable specifications

#### Signal cable

- $3 \times 0.38 \text{ mm}^2$  PVC cable with common, braided copper shield ( $\emptyset \sim 7 \text{ mm}$ ) and individually shielded cores
- With Empty Pipe Detection (EPD):  $4 \times 0.38$  mm<sup>2</sup> PVC cable with common, braided copper shield  $(\emptyset \sim 7 \text{ mm})$  and individually shielded cores
- Conductor resistance:  $\leq 50 \Omega/km$
- Capacitance: core/shield: ≤ 420 pF/m
- Permanent operating temperature: -20 to +80 °C
- Cable cross-section: max. 2.5 mm<sup>2</sup>

#### Coil cable

- $2 \times 0.75 \text{ mm}^2$  PVC cable with common, braided copper shield ( $\emptyset \sim 7 \text{ mm}$ )
- Conductor resistance:  $\leq 37 \Omega/km$
- Capacitance: core/core, shield grounded: ≤ 120 pF/m
- Operating temperature: -20 to +80 °C
- Cable cross-section: max. 2.5 mm<sup>2</sup>
- Test voltage for cable insulation: ≥1433 V AC r.m.s. 50/60 Hz or ≥2026 V DC

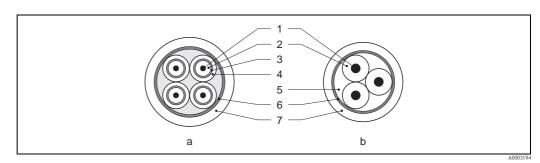

#### Fig. 33: Cable cross-section

- Signal cable а
- Coil current cable b
- 1 Core
- 2 Core insulation
- 3 Core shield
- 4 Core jacket
- 5 Core reinforcement
- 6 Cable shield 7
- Outer jacket

#### Reinforced connecting cables

As an option, Endress+Hauser can also deliver reinforced connecting cables with an additional, reinforcing metal braid. Reinforced connecting cables should be used when laying the cable directly in the ground, if there is a risk of damage from rodents or if using the measuring device below IP 68 degree of protection.

#### Operation in zones of severe electrical interference:

The measuring device complies with the general safety requirements in accordance with EN 61010 and the EMC requirements of IEC/EN 61326.



#### Caution!

Grounding is by means of the ground terminals provided for the purpose inside the connection housing. Ensure that the stripped and twisted lengths of cable shield to the ground terminal are as short as possible.

## 4.2 Connecting the measuring unit

### 4.2.1 Connecting the transmitter

#### Warning!

- Risk of electric shock! Switch off the power supply before opening the device. Do not install or
  wire the device while it is energized. Failure to comply with this precaution can result in
  irreparable damage to the electronics.
- Risk of electric shock! Connect the protective conductor to the ground terminal on the housing before the power supply is applied (not necessary if the power supply is galvanically isolated).
- Compare the specifications on the nameplate with the local voltage supply and frequency. Also comply with national regulations governing the installation of electrical equipment.
- 1. Remove the cover of the connection compartment (f) from the transmitter housing.
- 2. Feed the power supply cable (a) and the signal cable (b) through the appropriate cable entries.
- 3. Perform the wiring:
  - Wiring diagram (aluminum housing)  $\rightarrow$   $\square$  34
  - Wiring diagram (stainless steel housing)  $\rightarrow$   $\square$  35
  - Wiring diagram (wall-mount housing)  $\rightarrow$   $\square$  36
  - Terminal assignment  $\rightarrow \ge 52$
- 4. Screw the cover of the connection compartment (f) firmly onto the transmitter housing.


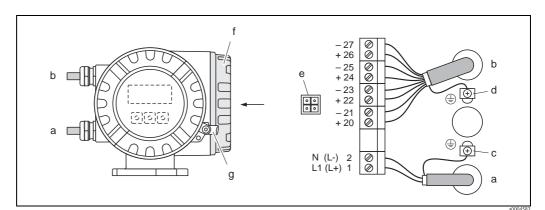


Fig. 34: Connecting the transmitter (aluminum field housing). Cable cross-section: max. 2.5 mm<sup>2</sup>

- a Cable for power supply: 85 to 260 V AC, 20 to 55 V AC, 16 to 62 V DC Terminal **No. 1**: L1 for AC, L+ for DC
  - Terminal No. 2: N for AC, L- for DC
- b Signal cable: Terminals **Nos.**  $20-27 \rightarrow \square 52$
- c Ground terminal for protective ground
- d Ground terminal for signal cable shield
- e Service connector for connecting service interface FXA193 (Fieldcheck, FieldCare)
- f Cover of the connection compartment
- g Securing clamp

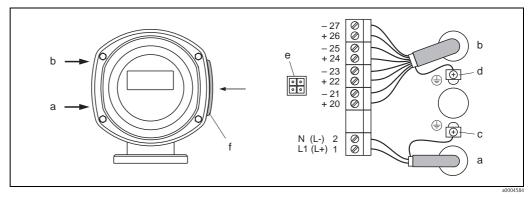

*Fig. 35:* Connecting the transmitter (stainless steel field housing); cable cross-section: max. 2.5 mm<sup>2</sup>

- a Cable for power supply: 85 to 260 V AC, 20 to 55 V AC, 16 to 62 V DC Terminal **No. 1**: L1 for AC, L+ for DC Terminal **No. 2**: N for AC, L- for DC
- b Signal cable: Terminals Nos. 20–27  $\rightarrow \ge 52$
- *c* Ground terminal for protective ground
- d Ground terminal for signal cable shield
- e Service connector for connecting service interface FXA193 (FieldCheck, FieldCare)
- f Cover of the connection compartment

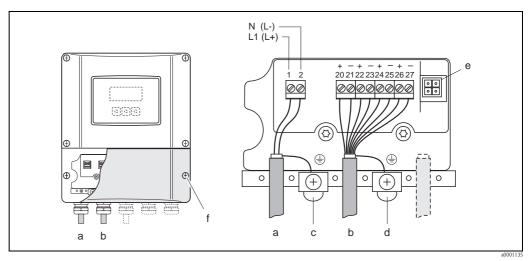


Fig. 36: Connecting the transmitter (wall-mount housing); cable cross-section: max. 2.5 mm<sup>2</sup>

- a Cable for power supply: 85 to 260 V AC, 20 to 55 V AC, 16 to 62 V DC Terminal **No. 1**: L1 for AC, L+ for DC Terminal **No. 2**: N for AC, L- for DC
- b Signal cable: Terminals Nos.  $20-27 \rightarrow \ge 52$
- c Ground terminal for protective ground
- d Ground terminal for signal cable shield
- e Service connector for connecting service interface FXA193 (Fieldcheck, FieldCare)
- f Cover of the connection compartment

	Terminal No. (inputs / outputs)			
Order version	20 (+) / 21 (-)	22 (+) / 23 (-)	24 (+) / 25 (-)	26 (+) / 27 (-)
50***_*******	-	-	-	Current output HART
50***_*********A	-	-	Frequency output	Current output HART
50***_*******D	Status input	Status output	Frequency output	Current output HART
50***_*********S	-	-	Frequency output Ex i	Current output, Ex i, active, HART
50***_**********T	-	_	Frequency output Ex i	Current output, Ex i, passive, HART

### 4.2.2 Terminal assignment



#### Note!

Functional values of the inputs and outputs  $\rightarrow$   $\stackrel{>}{=}$  96

### 4.2.3 HART connection

Users have the following connection options at their disposal:

- Direct connection to transmitter by means of terminals 26(+) and 27(-)
- Connection by means of the 4 to 20 mA circuit.



#### Note!

- The measuring loop's minimum load must be at least 250  $\Omega$ .
- After commissioning, make the following settings:
  - CURRENT SPAN function  $\rightarrow$  "4–20 mA HART"
  - Switch HART write protection on or off  $\rightarrow$   $\stackrel{>}{=}$  63

#### Connection of the HART handheld communicator

See also the documentation issued by the HART Communication Foundation, and in particular HCF LIT 20: "HART, a technical summary".

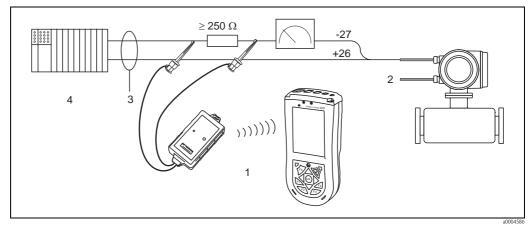


Fig. 37: Electrical connection of HART handheld Field Xpert SFX100

- 1 HART handheld Field Xpert SFX100
- 2 Auxiliary energy
- 3 Shielding
- 4 Other devices or PLC with passive input

#### Connection of a PC with an operating software

In order to connect a PC with operating software (e.g. "FieldCare"), a HART modem (e.g. "Commubox FXA195") is needed.

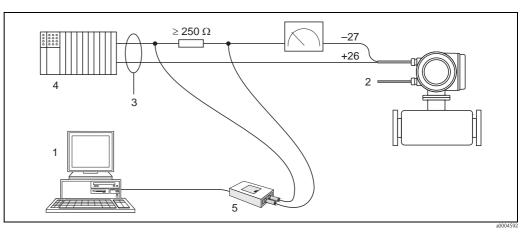


Fig. 38: Electrical connection of a PC with operating software

- 1 PC with operating software
- 2 Auxiliary energy
- 3 Shielding
- 4 Other devices or PLC with passive input
- 5 HART modem, e.g. Commubox FXA195

### 4.3 Potential equalization



#### Warning!

The measuring system must be included in the potential equalization.

Perfect measurement is only ensured when the fluid and the sensor have the same electrical potential. This is ensured by the reference electrode integrated in the sensor as standard.

The following should also be taken into consideration for potential equalization:

- Internal grounding concepts in the company
- Operating conditions, such as the material/grounding of the pipes (see Table)

#### 4.3.1 Potential equalization for Promag D

- No reference electrode is integrated!
- For the two ground disks of the sensor an electrical connection to the fluid is always ensured.
- Examplls for connections  $\rightarrow$   $\ge$  54

#### 4.3.2 Potential equalization for Promag W, P, L

- Reference electrode integrated in the sensor as standard
- Examplls for connections  $\rightarrow$   $\ge$  55

### 4.3.3 Potential equalization for Promag H

No reference electrode is integrated!

For the metal process connections of the sensor an electrical connection to the fluid is always ensured.



Caution!

If using process connections made of a synthetic material, ground rings have to be used to ensure that potential is equalized ( $\rightarrow \square 37$ ). The necessary ground rings can be ordered separately from Endress+Hauser as accessories ( $\rightarrow \square 76$ ).

### 4.3.4 Exampels for potential equalization connections for Promag D

#### Standard case

Operating conditions	Potential equalization
<ul> <li>When using the measuring device in a:</li> <li>Metal, grounded pipe</li> <li>Plastic pipe</li> <li>Pipe with insulating lining</li> <li>Potential equalization takes place via the ground terminal of the transmitter (standard situation).</li> <li>Note!</li> <li>When installing in metal pipes, we recommend you connect the ground terminal of the transmitter housing with the piping.</li> </ul>	
	Fig. 39: Via the ground terminal of the transmitter

#### Special cases


Operating conditions	Potential equalization
<ul> <li>When using the measuring device in a:</li> <li>Metal pipe that is not grounded</li> <li>This connection method also applies in situations where:</li> <li>Customary potential equalization cannot be ensured</li> <li>Excessively high equalizing currents can be expected</li> <li>Potential equalization takes place via the ground terminal of the transmitter and the two pipe flanges.</li> <li>Here, the ground cable (copper wire, 6 mm<sup>2</sup> (0.0093 in<sup>2</sup>)) is mounted directly on the conductive flange coating with flange screws.</li> </ul>	Fig. 40: Via the ground terminal of the
	<i>Fig. 40: Via the ground terminal of the transmitter and the flanges of the pipe .</i>
<ul> <li>When using the measuring device in a:</li> <li>Pipe with a cathodic protection unit</li> <li>The device is installed potential-free in the pipe.</li> <li>Only the two flanges of the pipe are connected with a ground cable (copper wire, 6 mm<sup>2</sup> (0.0093 in<sup>2</sup>)). Here, the ground cable is mounted directly on the conductive flange coating with flange screws.</li> <li>Note the following when installing:</li> <li>The applicable regulations regarding potential-free installation must be observed.</li> <li>There should be no electrically conductive connection between the pipe and the device.</li> <li>The mounting material must withstand the applicable torques.</li> </ul>	would be a constrained of the second


# 4.3.5 Exampels for potential equalization connections for Promag L, W, P

#### Standard case

Operating conditions	Potential equalization
<ul> <li>When using the measuring device in a:</li> <li>Metal, grounded pipe</li> <li>Potential equalization takes place via the ground terminal of the transmitter (standard situation).</li> <li>Note!</li> <li>When installing in metal pipes, we recommend you connect the ground terminal of the transmitter housing with the piping.</li> </ul>	Fig. 42: Via the ground terminal of the transmitter

#### Special cases

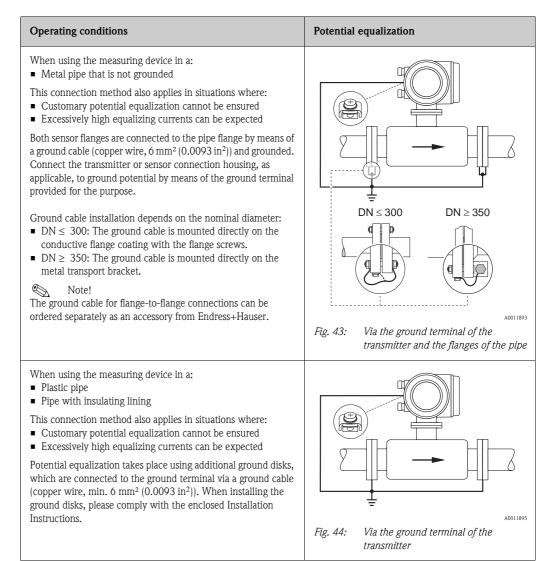

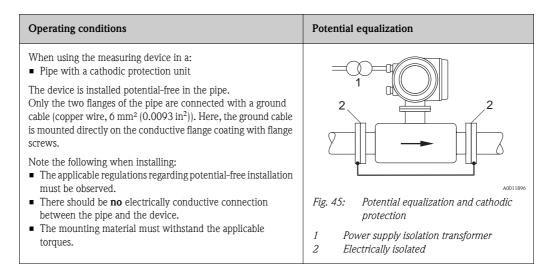


## 4.4 Degree of protection

The devices meet all the requirements of IP 67 degree of protection.

Compliance with the following points is mandatory following installation in the field or servicing in order to ensure that IP 67 protection is maintained:

- The housing seals must be clean and undamaged when inserted into their grooves. The seals must be dried, cleaned or replaced if necessary.
- All threaded fasteners and screw covers must be firmly tightened.
- The cables used for connection must be of the specified outside diameter  $\rightarrow \triangleq 49$ .
- Firmly tighten the cable entries.
- The cables must loop down before they enter the cable entries ("water trap"). This arrangement prevents moisture penetrating the entry. Always install the measuring device in such a way that the cable entries do not point up.
- Remove all unused cable entries and insert plugs instead.
- Do not remove the grommet from the cable entry.

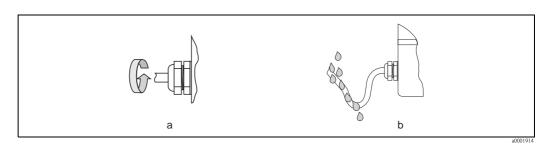

*Fig. 46:* Installation instructions, cable entries



#### Caution!

Do not loosen the threaded fasteners of the sensor housing, as otherwise the degree of protection guaranteed by Endress+Hauser no longer applies.



#### Note!

The Promag L, Promag W and Promag P sensors can be supplied with IP 68 rating (permanent immersion in water to a depth of 3 meters (10 ft)). In this case the transmitter must be installed remote from the sensor.

The Promag L sensors with IP 68 rating are only available with stainless steel flanges.

# 4.5 Post-connection check

Perform the following checks after completing electrical installation of the measuring device:


Device condition and specifications	Notes
Are cables or the device damaged (visual inspection)?	-
Electrical connection	Notes
Does the supply voltage match the specifications on the nameplate?	<ul> <li>85 to 250 V AC (50 to 60 Hz)</li> <li>20 to 28 V AC (50 to 60 Hz) 11 to 40 V DC</li> </ul>
Do the cables used comply with the necessary specifications?	→ <b>□</b> 49
Do the cables have adequate strain relief?	-
Is the cable type route completely isolated? Without loops and crossovers?	-
Are the power-supply and signal cables correctly connected?	See the wiring diagram inside the cover of the terminal compartment
Only remote version: Is the flow sensor connected to the matching transmitter electronics?	Check serial number on nameplates of sensor and connected transmitter.
Only remote version: Is the connecting cable between sensor and transmitter connected correctly?	→ 🖹 44
Are all screw terminals firmly tightened?	-
Have the measures for grounding/potential equalization been correctly implemented?	→ 🖹 53
Are all cable entries installed, firmly tightened and correctly sealed? Cables looped as "water traps"?	→ 🖹 56
Are all housing covers installed and firmly tightened?	-

# 5 Operation

### 5.1 Display and operating elements

The local display enables you to read all important parameters directly at the measuring point and configure the device.

The display area consists of two lines; this is where measured values are displayed, and/or status variables (direction of flow, partially filled pipe, bar graph, etc.). You can change the assignment of display lines to variables at will in order to customize the display to suit your needs and preferences ( $\rightarrow$  "Description of Device Functions" manual).

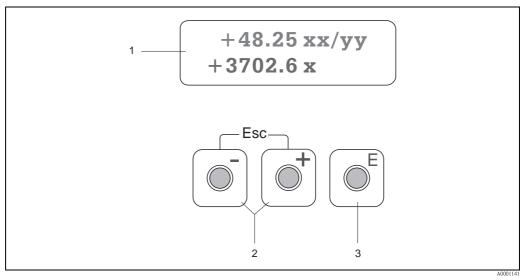

*Fig. 47: Display and operating elements* 

- 1 Liquid crystal display
  - The two-line liquid-crystal display shows measured values, dialog texts, error messages and information messages. The display as it appears when normal measuring is in progress is known as the HOME position (operating mode).
  - Upper display line: Shows primary measured values, e.g. volume flow in [ml/min] or in [%].
  - Lower display line: Shows supplementary measured variables and status variables, e.g. totalizer reading in [m3], bar graph, measuring point designation
- 2 Plus/minus keys
  - Enter numerical values, select parameters
  - Select different function groups within the function matrix
  - *Press the* +/- *keys simultaneously to trigger the following functions:*
  - Exit the function matrix step by step  $\rightarrow$  HOME position
  - Press and hold down +/- keys for longer than 3 seconds  $\rightarrow$  Return directly to HOME position
  - Cancel data entry
- 3 Enter key
  - HOME position  $\rightarrow$  Entry into the function matrix
  - Save the numerical values you input or settings you change

### 5.2 Brief operating instructions on the function matrix

#### Note!

- See the general notes on  $\rightarrow \ge 60$ .
- Detailed description of all the functions  $\rightarrow$  "Description of Device Functions" manual

The function matrix comprises two levels, namely the function groups and the functions of the function groups.

The groups are the highest-level grouping of the control options for the device. A number of functions is assigned to each group. You select a group in order to access the individual functions for operating and configuring the device.

- 1. HOME position  $\rightarrow \mathbb{E} \rightarrow$  Enter the function matrix
- 2. Select a function group (e.g. OPERATION)
- 3. Select a function (e.g. LANGUAGE) Change parameter/enter numerical values:
  - $\stackrel{\textcircled{1}}{=}$   $\rightarrow$  select or enter enable code, parameters, numerical values
  - $E \rightarrow$  save your entries
- 4. Exit the function matrix:
  - Press and hold down Esc key (III) for longer than 3 seconds  $\rightarrow$  HOME position
  - Repeatedly press Esc key  $(\exists \bullet)$   $\rightarrow$  return step by step to HOME position

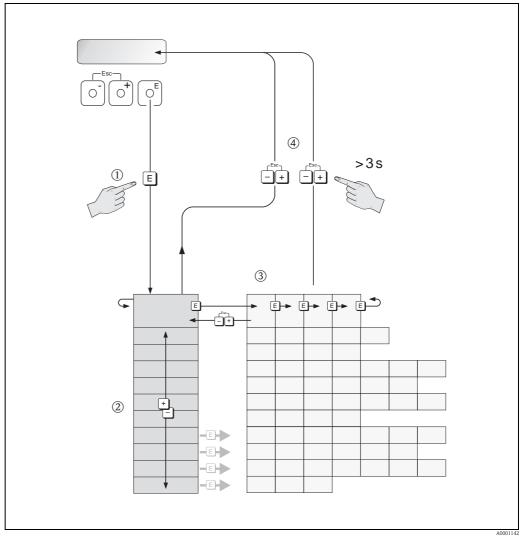


Fig. 48: Selecting functions and configuring parameters (function matrix)

### 5.2.1 General notes

The Quick Setup menu ( $\rightarrow \supseteq 70$ ) is adequate for commissioning in most instances. Complex measuring operations on the other hand necessitate additional functions that you can configure as necessary and customize to suit your process parameters. The function matrix, therefore, comprises a multiplicity of additional functions which, for the sake of clarity, are arranged in a number of function groups.

Comply with the following instructions when configuring functions:

- You select functions as described on  $\rightarrow \ge 59$ .
- You can switch off certain functions (OFF). If you do so, related functions in other function groups will no longer be displayed.
- Certain functions prompt you to confirm your data entries.
  - Press to select "SURE [YES]" and press again to confirm. This saves your setting or starts a function, as applicable.
- Return to the HOME position is automatic if no key is pressed for 5 minutes.

#### Note!

- The transmitter continues to measure while data entry is in progress, i.e. the current measured values are output via the signal outputs in the normal way.
- If the power supply fails, all preset and configured values remain safely stored in the EEPROM.

#### Caution!

All functions are described in detail, including the function matrix itself, in the "Description of Device Functions" manual, which is a separate part of these Operating Instructions.

### 5.2.2 Enabling the programming mode

The function matrix can be disabled. Disabling the function matrix rules out the possibility of inadvertent changes to device functions, numerical values or factory settings. A numerical code (factory setting = 50) has to be entered before settings can be changed.

If you use a code number of your choice, you exclude the possibility of unauthorized persons accessing data ( $\rightarrow$  see the "Description of Device Functions" manual).

Comply with the following instructions when entering codes:

- If programming is disabled and the <sup>⊕</sup> operating elements are pressed in any function, a prompt for the code automatically appears on the display.
- If "0" is specified as the customer's code, programming is always enabled.
- The Endress+Hauser service organization can be of assistance if you mislay your personal code.
- Caution!

Changing certain parameters such as all sensor characteristics, for example, influences numerous functions of the entire measuring system, particularly measuring accuracy.

There is no need to change these parameters under normal circumstances and consequently, they are protected by a special code known only to the Endress+Hauser service organization. Please contact Endress+Hauser if you have any questions.

### 5.2.3 Disabling the programming mode

Programming is disabled if you do not press the operating elements within 60 seconds following automatic return to the HOME position.

You can also disable programming in the "ACCESS CODE" function by entering any number (other than the customer's code).

### 5.3 Displaying error messages

### 5.3.1 Type of error

Errors which occur during commissioning or measuring operation are displayed immediately. If two or more system or process errors occur, the error with the highest priority is the one shown on the display.

The measuring system distinguishes between two types of error:

- System errors  $\rightarrow \ge 80$ :
- This group comprises all device errors, e.g. communication errors, hardware faults, etc. • *Process errors*  $\rightarrow \ge 82$ :

This group comprises all application errors, e.g. empty pipe, etc.

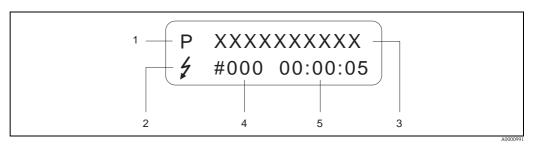


Fig. 49: Error messages on the display (example)

1 Error type:

2

- $-P = process \ error$
- S = system error
- Error message type:
  - fault message
     ! = notice message
- *3 Error designation: e.g. EMPTY PIPE = measuring tube is only partly filled or completely empty*
- 4 Error number: e.g. #401
- 5 Duration of most recent error occurrence (in hours, minutes and seconds)

### 5.3.2 Error message types

Users have the option of weighting certain errors differently, in other words having them classed as "Fault messages" or "Notice messages". You can define messages in this way with the aid of the function matrix ( $\rightarrow$  "Description of Device Functions" manual).

Serious system errors, e.g. module defects, are always identified and classed as "fault messages" by the measuring device.

#### Notice message (!)

- Displayed as  $\rightarrow$  Exclamation mark (!), error type (S: system error, P: process error)
- The error in question has no effect on the outputs of the measuring device.

#### Fault message (\*)

- Displayed as  $\rightarrow$  Lightning flash (  $\frac{1}{2}$ ), error type (S: system error, P: process error).
- The error in question has a direct effect on the outputs. The response of the individual outputs (failsafe mode) can be defined in the function matrix using the "FAILSAFE MODE" function (→ "Description of Device Functions" manual).



#### Note!

For security reasons, error messages should be output via the status output.

### 5.4 Communication

In addition to local operation, the measuring device can be configured and measured values can be obtained by means of the HART protocol. Digital communication takes place using the 4–20 mA current output HART  $\rightarrow \exists$  52.

The HART protocol allows the transfer of measuring and device data between the HART master and the field devices for configuration and diagnostics purposes.

The HART master, e.g. a handheld terminal or PC-based operating programs (such as FieldCare), require device description (DD) files which are used to access all the information in a HART device. Information is exclusively transferred using so-called "commands". There are three different command classes:

Universal commands:

All HART device support and use universal commands.

- The following functionalities are linked to them:
- Identify HART devices
- Reading digital measured values (volume flow, totalizer, etc.)
- Common practice commands: Common practice commands offer functions which are supported and can be executed by most but not all field devices.
- Device-specific commands:

These commands allow access to device-specific functions which are not HART standard. Such commands access individual field device information, amongst other things, such as empty/full pipe calibration values, low flow cutoff settings, etc.

Note!

The device has access to all three command classes. A list of all the "Universal commands" and "Common practice commands" is provided on  $\rightarrow \triangleq 64$ .

### 5.4.1 Operating options

For the complete operation of the measuring device, including device–specific commands, there are DD files available to the user to provide the following operating aids and programs:

#### Field Xpert HART Communicator

Selecting device functions with a HART Communicator is a process involving a number of menu levels and a special HART function matrix.

The HART manual in the carrying case of the HART Communicator contains more detailed information on the device.

#### Operating program "FieldCare"

FieldCare is Endress+Hauser's FDT-based plant Asset Management Tool and allows the configuration and diagnosis of intelligent field devices. By using status information, you also have a simple but effective tool for monitoring devices. The Proline flow measuring devices are accessed via a service interface or via the service interface FXA193.

#### Operating program "SIMATIC PDM" (Siemens)

SIMATIC PDM is a standardized, manufacturer-independent tool for the operation, configuration, maintenance and diagnosis of intelligent field devices.

#### Operating program "AMS" (Emerson Process Management)

AMS (Asset Management Solutions): program for operating and configuring devices.

### 5.4.2 Current device description files

The following table illustrates the suitable device description file for the operating tool in question and then indicates where these can be obtained.

HART protocol:		
Valid for device software:	2.03.XX	$\rightarrow$ Function DEVICE SOFTWARE
<b>Device data HART</b> Manufacturer ID: Device ID:	11 <sub>hex</sub> (ENDRESS+HAUSER) 41 <sub>hex</sub>	→ Function MANUFACTURER ID → Function DEVICE ID
HART version data:	Device Revision 6/ DD Revision 1	
Software release:	07.2009	
Operating program:	Sources for obtaining device descriptions:	
Handheld Field Xpert SFX100	Use update function of handheld terminal	
FieldCare / DTM	<ul> <li>www.endress.com → Download</li> <li>CD-ROM (Endress+Hauser order number 56004088)</li> <li>DVD (Endress+Hauser order number 70100690)</li> </ul>	
AMS	www.endress.com $\rightarrow$ Download	
SIMATIC PDM	www.endress.com $\rightarrow$ Download	

Tester/simulator:	Sources for obtaining device descriptions:
Fieldcheck	Update by means of FieldCare with the flow device FXA193/291 DTM in the Fieldflash module $\$



#### Note!

The "Fieldcheck" tester/simulator is used for testing flowmeters in the field. When used in conjunction with the "FieldCare" software package, test results can be imported into a database, printed out and used for official certification. Contact your Endress+Hauser representative for more information.

### 5.4.3 Device variables

The following device variables are available using the HART protocol:

Code (decimal)	Device variable
0	OFF (not assigned)
1	Volume flow
250	Totalizer 1
251	Totalizer 2

At the factory, the process variables are assigned to the following device variables:

- Primary process variable (PV)  $\rightarrow$  Volume flow
- Second process variable (SV)  $\rightarrow$  Totalizer 1
- Third process variable  $(TV) \rightarrow not assigned$
- Fourth process variable (FV)  $\rightarrow$  not assigned



Note!

You can set or change the assignment of device variables to process variables using Command 51.

### 5.4.4 Switching HART write protection on/off

The HART write protection can be switched on and off using the HART WRITE PROTECT device function ( $\rightarrow$  "Description of Device Functions" manual).

### 5.4.5 Universal and common practice HART commands

The following table contains all the universal commands supported by the device.

	nand No. command / Access type	Command data (numeric data in decimal form)	Response data (numeric data in decimal form)
Universal commands			
0	Read unique device identifier Access type = read	none	Device identification delivers information on the device and the manufacturer. It cannot be changed.
			The response consists of a 12 byte device ID: – Byte 0: fixed value 254 – Byte 1: Manufacturer ID, 17 = E+H – Byte 2: Device type ID, 65 = Promag 50 – Byte 3: Number of preambles – Byte 4: Universal commands rev. no. – Byte 5: Device-specific commands rev. no. – Byte 5: Device-specific commands rev. no. – Byte 5: Software revision – Byte 7: Hardware revision – Byte 8: Additional device information – Bytes 9-11: Device identification
1	Read primary process variable Access type = read	none	<ul><li>Byte 0: HART unit code of the primary process variable</li><li>Bytes 1-4: Primary process variable</li></ul>
			Factory setting: Primary process variable = Volume flow
			<ul> <li>Note!</li> <li>Manufacturer-specific units are represented using the HART unit code "240".</li> <li>You can change the assignment of device variables to process variables using Command 51.</li> </ul>
2	Read the primary process variable as current in mA and percentage of the set measuring range	none	<ul> <li>Bytes 0-3: actual current of the primary process variable in mA</li> <li>Bytes 4-7: % value of the set measuring range</li> </ul>
	Access type = read		Factory setting: Primary process variable = Volume flow Note! You can change the assignment of device variables to proces variables using Command 51.
3	Read the primary process variable as current in mA and four dynamic process variables Access type = read	none	24 bytes are sent as a response: – Bytes 0-3: primary process variable current in mA – Byte 4: HART unit code of the primary process variable – Bytes 5-8: Primary process variable – Byte 9: HART unit code of the second process variable – Bytes 10-13: Second process variable – Bytes 10-13: Second process variable – Bytes 15-18: Third process variable – Bytes 15-18: Third process variable – Byte 19: HART unit code of the fourth process variable – Bytes 20-23: Fourth process variable <i>Factory setting:</i>
			<ul> <li>Primary process variable = Volume flow</li> <li>Second process variable = Totalizer 1</li> <li>Third process variable = OFF (not assigned)</li> <li>Fourth process variable = OFF (not assigned)</li> </ul>
			<ul> <li>Note!</li> <li>Manufacturer-specific units are represented using the HART unit code "240".</li> <li>You can change the assignment of device variables to process variables using Command 51.</li> </ul>

Command No. HART command / Access type		Command data (numeric data in decimal form)	Response data (numeric data in decimal form)
6	Set HART shortform address Access type = write	Byte 0: desired address (0 to 15) Factory setting: 0 Note! With an address >0 (multidrop mode), the current output of the primary process variable is set to 4 mA.	Byte 0: active address
11	Read unique device identification using the TAG (measuring point designation) Access type = read	Bytes 0–5: TAG	<ul> <li>Device identification delivers information on the device and the manufacturer. It cannot be changed.</li> <li>The response consists of a 12 byte device ID if the given TAG agrees with the one saved in the device: <ul> <li>Byte 0: fixed value 254</li> <li>Byte 1: Manufacturer ID, 17 = E+H</li> <li>Byte 2: Device type ID, 65 = Promag 50</li> <li>Byte 3: Number of preambles</li> <li>Byte 4: Universal commands rev. no.</li> <li>Byte 5: Device-specific commands rev. no.</li> <li>Byte 6: Software revision</li> <li>Byte 7: Hardware revision</li> <li>Byte 8: Additional device information</li> <li>Bytes 9-11: Device identification</li> </ul> </li> </ul>
12	Read user message Access type = read	none	Bytes 0-24: User message Note! You can write the user message using Command 17.
13	Read TAG, descriptor and date Access type = read	none	<ul> <li>Bytes 0-5: TAG</li> <li>Bytes 6-17: descriptor</li> <li>Bytes 18-20: Date</li> <li>Note!</li> <li>You can write the TAG, descriptor and date using Command 18.</li> </ul>
14	Read sensor information on primary process variable	none	<ul> <li>Bytes 0-2: Sensor serial number</li> <li>Byte 3: HART unit code of sensor limits and measuring range of the primary process variable</li> <li>Bytes 4-7: Upper sensor limit</li> <li>Bytes 8-11: Lower sensor limit</li> <li>Bytes 12-15: Minimum span</li> <li>Note!</li> <li>The data relate to the primary process variable (= volume flow).</li> <li>Manufacturer-specific units are represented using the HART unit code "240".</li> </ul>
15	Read output information of primary process variable Access type = read	none	<ul> <li>Byte 0: Alarm selection ID</li> <li>Byte 1: Transfer function ID</li> <li>Byte 2: HART unit code for the set measuring range of the primary process variable</li> <li>Bytes 3-6: upper range, value for 20 mA</li> <li>Bytes 7-10: lower range, value for 4 mA</li> <li>Bytes 11-14: Damping constant in [s]</li> <li>Byte 15: Write protection ID</li> <li>Byte 16: OEM dealer ID, 17 = E+H</li> <li>Factory setting: Primary process variable = Volume flow</li> <li>Note!</li> <li>Manufacturer-specific units are represented using the HART unit code "240".</li> <li>You can change the assignment of device variables to process variables using Command 51.</li> </ul>

Command No. HART command / Access type		Command data (numeric data in decimal form)	Response data (numeric data in decimal form)
16	Read the device production number Access type = read	none	Bytes 0-2: Production number
17	Write user message Access = write	You can save any 32-character long text in the device under this parameter: Bytes 0-23: Desired user message	Displays the current user message in the device: Bytes 0–23: Current user message in the device
18	Write TAG, descriptor and date Access = write	With this parameter, you can store an 8 character TAG, a 16 character descriptor and a date: – Bytes 0-5: TAG – Bytes 6-17: descriptor – Bytes 18-20: Date	Displays the current information in the device: – Bytes 0-5: TAG – Bytes 6-17: descriptor – Bytes 18-20: Date
19	Write the device production number Access = write	Bytes 0-2: Production number	Bytes 0-2: Production number

# The following table contains all the common practice commands supported by the device.

	and No. command / Access type	Command data (numeric data in decimal form)	Response data (numeric data in decimal form)					
Comm	Common practice commands							
34	Write damping value for primary process variable Access = write	Bytes 0-3: Damping value of the primary process variable "volume flow" in seconds <i>Factory setting:</i> Primary process variable = Current output damping	Displays the current damping value in the device: Bytes 0–3: Damping value in seconds					
35	Write measuring range of primary process variable Access = write	<ul> <li>Write the desired measuring range: <ul> <li>Byte 0: HART unit code of the primary process variable</li> <li>Bytes 1-4: upper range, value for 20 mA</li> <li>Bytes 5-8: lower range, value for 4 mA</li> </ul> </li> <li><i>Factory setting:</i> <ul> <li>Primary process variable = Volume flow</li> <li>Note!</li> </ul> </li> <li>The start of the measuring range (4 mA) must correspond to the zero flow.</li> <li>If the HART unit code is not the correct one for the process variable, the device will continue with the last valid unit.</li> </ul>	<ul> <li>The currently set measuring range is displayed as a response:</li> <li>Byte 0: HART unit code for the set measuring range of the primary process variable</li> <li>Bytes 1-4: upper range, value for 20 mA</li> <li>Bytes 5-8: lower range, value for 4 mA</li> <li>Note!</li> <li>Manufacturer-specific units are represented using the HART unit code "240".</li> <li>You can change the assignment of device variables to process variables using Command 51.</li> </ul>					
38	Device status reset (configuration changed) Access = write	none	none Note! It is also possible to execute this HART command when write protection is activated (= ON)!					
40	Simulate input current of primary process variable Access = write	Simulation of the desired output current of the primary process variable. An entry value of 0 exits the simulation mode: Bytes 0-3: Output current in mA <i>Factory setting:</i> Primary process variable = Volume flow Note! You can set the assignment of device variables to process variables using Command 51.	The momentary output current of the primary process variable is displayed as a response: Bytes 0–3: Output current in mA					
42	Perform master reset Access = write	none	none					

Command No. HART command / Access type		Command data (numeric data in decimal form)	Response data (numeric data in decimal form)	
44	Write unit of primary process variable Access = write	<ul> <li>Set unit of primary process variable. Only units which are suitable for the process variable are transferred to the device:</li> <li>Byte 0: HART unit code</li> <li><i>Factory setting:</i></li> <li>Primary process variable = Volume flow</li> <li>Note!</li> <li>If the written HART unit code is not the correct one for the process variable, the device will continue with the last valid unit.</li> <li>If you change the unit of the primary process variable, this has a direct impact on the system units.</li> </ul>	The current unit code of the primary process variable is displayed as a response: Byte 0: HART unit code Note! Manufacturer-specific units are represented using the HART unit code "240".	
48	Read additional device status Access = read	none	The device status is displayed in extended form as the response: Coding: see table $\rightarrow \ge 68$	
50	Read assignment of the device variables to the four process variables Access = read	none	<ul> <li>Display of the current variable assignment of the process variables:</li> <li>Byte 0: Device variable code to the primary process variable</li> <li>Byte 1: Device variable code to the second process variable</li> <li>Byte 2: Device variable code to the third process variable</li> <li>Byte 3: Device variable code to the fourth process variable</li> <li>Byte 3: Device variable code to the fourth process variable</li> <li>Factory setting:</li> <li>Primary process variable: Code 1 for volume flow</li> <li>Second process variable: Code 250 for totalizer</li> <li>Third process variable: Code 0 for OFF (not assigned)</li> <li>Fourth process variable: Code 0 for OFF (not assigned)</li> </ul>	
51	Write assignment of the device variables to the four process variables Access = write	<ul> <li>Setting of the device variables to the four process variables: <ul> <li>Byte 0: Device variable code to the primary process variable</li> <li>Byte 1: Device variable code to the second process variable</li> <li>Byte 2: Device variable code to the third process variable</li> <li>Byte 3: Device variable code to the fourth process variable</li> <li>Byte 3: Device variable code to the fourth process variable</li> <li>Primary process variable: Volume flow</li> <li>Second process variable: OFF (not assigned)</li> <li>Fourth process variable: OFF (not assigned)</li> </ul> </li> </ul>	<ul> <li>The variable assignment of the process variables is displayed as a response:</li> <li>Byte 0: Device variable code to the primary process variable</li> <li>Byte 1: Device variable code to the second process variable</li> <li>Byte 2: Device variable code to the third process variable</li> <li>Byte 3: Device variable code to the fourth process variable</li> </ul>	
53	Write device variable unit Access = write	<ul> <li>This command sets the unit of the given device variables. Only those units which suit the device variable are transferred:</li> <li>Byte 0: Device variable code</li> <li>Byte 1: HART unit code</li> <li>Code of the supported device variables: See information → a 63</li> <li>Note!</li> <li>If the written unit is not the correct one for the device variable, the device will continue with the last valid unit.</li> <li>If you change the unit of the device variable, this has a direct impact on the system units.</li> </ul>	The current unit of the device variables is displayed in the device as a response: - Byte 0: Device variable code - Byte 1: HART unit code Note! Manufacturer-specific units are represented using the HART unit code "240".	
59	Write number of preambles in response message Access = write	This parameter sets the number of preambles which are inserted in the response messages: Byte 0: Number of preambles (4 to 20)	The current number of preambles is displayed in the response telegram: Byte 0: Number of preambles	

### 5.4.6 Device status and error messages

You can read the extended device status, in this case, current error messages, via Command "48". The command delivers information which is partly coded in bits (see table below).

Note!
■ You

- You can find a detailed explanation of the device status and error messages and their elimination on  $\rightarrow \triangleq 68$
- Bits and bytes not listed are not assigned.

Byte	Bit	Error No.	Short error description	
	0	001	Serious device error	
0	1	011	Measuring amplifier has faulty EEPROM	
	2	012	Error when accessing data of the measuring amplifier EEPROM	
	1	031	S-DAT: defective or missing	
1	2	032	S-DAT: Error accessing saved values	
	5	051	I/O and the amplifier are not compatible.	
3	3	111	Totalizer checksum error	
	4	121	I/O board and amplifier not compatible.	
4	3	251	Internal communication fault on the amplifier board.	
	4	261	No data reception between amplifier and I/O board	
5	0	321	Coil current of the sensor is outside the tolerance.	
5	7	339	Flow buffer: The temporarily buffered flow portions (measuring mode for pulsating flow) could not be cleared or output within 60 seconds.	
	0	340		
	1	341		
	2	342		
	3	343	Frequency buffer: The temporarily buffered flow portions (measuring mode for pulsating flow) could not be cleared or output within 60 seconds.	
6	4	344		
	5	345		
	6	346		
	7	347	Pulse buffer:	
	0	348	The temporarily buffered flow portions (measuring mode for pulsating flow) could not be cleared or output within 60 seconds.	
	1	349		
	2	350		
_	3	351	Current output:	
7	4	352	Flow is out of range.	
	5	353		
	6	354		
	7	355	Frequency output:	
	0	356	Flow is out of range.	
8	1	357		
	2	358		

Byte	Bit	Error No.	Short error description	
	3	359	Pulse output:	
_	4	360	Flow is out of range.	
8	5	361		
	6	362		
10	7	401	Measuring tube partially filled or empty	
11	2	461	EPD calibration not possible because the fluid's conductivity is either too low or too high.	
11	4	463	The EPD calibration values for empty pipe and full pipe are identical, and therefore incorrect.	
12	1	474	Maximum flow value entered is overshot	
	7	501	Amplifier software version is loaded. Currently no other commands are possible.	
13	0	502	Upload/download of device files. Currently no other commands are possible.	
1.4	3	601	Positive zero return active	
14	7	611	Simulation current output active	
	0	612		
	1	613		
	2	614		
15	3	621	Simulation frequency output active	
15	4	622		
	5	623		
	6	624		
	7	631	Simulation pulse output active	
	0	632		
	1	633		
	2	634		
16	3	641	Simulation status output active	
	4	642		
	5	643		
	6	644		
17	7	671	Simulation of the status input active	
	0	672		
	1	673		
18	2	674		
	3	691	Simulation of response to error (outputs) active	
	4	692	Simulation of volume flow active	

#### Commissioning 6


#### 6.1 **Function check**

Make sure that all final checks have been completed before you start up your measuring point:

- Checklist for "Post-installation check" → <sup>1</sup>/<sub>2</sub> 43
   Checklist for "Post-connection check" → <sup>1</sup>/<sub>2</sub> 57

#### 6.2 Switching on the measuring device

Once the connection checks have been successfully completed, it is time to switch on the power supply. The device is now operational. The measuring device performs a number of post switch-on self-tests. As this procedure progresses the following sequence of messages appears on the local display:

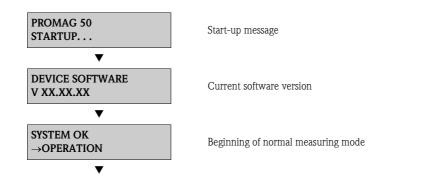

Normal measuring mode commences as soon as start-up completes. Various measured-value and/or status variables (HOME position) appear on the display.



#### Note!

If start-up fails, an error message indicating the cause is displayed.

### 6.3 Quick Setup

In the case of measuring devices without a local display, the individual parameters and functions must be configured via the operating program, e.g. FieldCare.

If the measuring device is equipped with a local display, all the important device parameters for standard operation, as well as additional functions, can be configured quickly and easily by means of the following Quick Setup menu.

### 6.3.1 "Commissioning" Quick Setup menu

This Quick Setup menu guides you systematically through the setup procedure for all the major device functions that have to be configured for standard measuring operation.

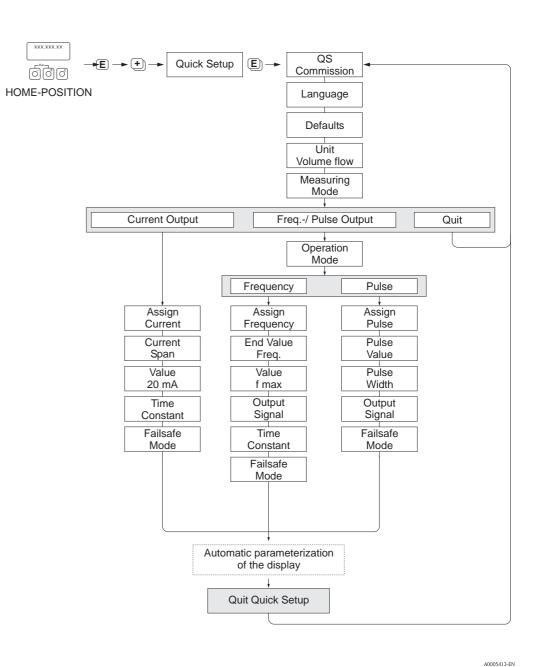


Fig. 50: "OUICK SETUP COMMISSIONING" menu for the rapid configuration of important device functions

## 6.4 Configuration

### 6.4.1 Current output: active/passive

The current output is configured as "active" or "passive" by means of various jumpers on the  $\rm I/O$  board.




Warning!

Risk of electric shock! Exposed components carry dangerous voltages. Make sure that the power supply is switched off before you remove the cover of the electronics compartment.

- 1. Switch off power supply.
- 2. Remove the I/O board  $\rightarrow \mathbb{B}$  87
- 3. Position the jumper  $\rightarrow$  51
  - 🖒 Caution!

Risk of destroying the measuring device. Set the jumpers exactly as shown in the graphic. Pay strict attention to the position of the jumpers as indicated in the graphic.

4. Installation of the I/O board is the reverse of the removal procedure.

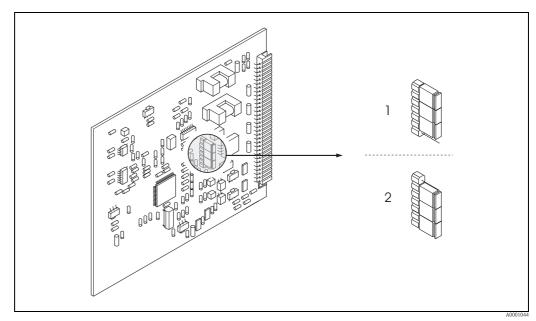

*Fig. 51:* Configuring current outputs using jumpers (I/O board)

- *1 Active current output (factory setting)*
- 2 Passive current output

## 6.5 Adjustment

## 6.5.1 Empty-pipe/full-pipe adjustment

Flow cannot be measured correctly unless the measuring tube is completely full. This status can be permanently monitored using the Empty Pipe Detection:

- EPD = Empty Pipe Detection (with the help of an EPD electrode)
- OED = Open Electrode Detection (Empty Pipe Detection with the help of the measuring electrodes, if the sensor is not equipped with an EPD electrode or the orientation is not suitable for using EPD).
- ال Caution!

Notel

Detailed information on the empty-pipe/full-pipe adjustment procedure can be found in the "Description of Device Functions" manual:

- EPD/OED ADJUSTMENT (carrying out the adjustment).
- EPD (switching on and off EPD/OED).
- EPD RESPONSE TIME (input of the response time for EPD/OED).



- The EPD function is not available unless the sensor is fitted with an EPD electrode.
- The devices are already calibrated at the factory with water (approx. 500 µS/cm). If the fluid conductivity differs from this reference, empty-pipe/full-pipe adjustment has to be performed again on site.
- The default setting for EPD when the devices are delivered is OFF; the function has to be activated if required.
- The EPD process error can be output by means of the configurable relay output.

### Performing empty-pipe and full-pipe adjustment (EPD)

- 1. Select the appropriate function in the function matrix: HOME  $\rightarrow \mathbb{E} \rightarrow \mathbb{H} \rightarrow \text{PROCESS PARAMETER} \rightarrow \mathbb{E} \rightarrow \mathbb{H} \rightarrow \text{EPD ADJUSTMENT}$
- 2. Empty the piping:
  - The wall of the measuring tube should still be wet with fluid during EPD empty pipe adjustment
  - The wall of the measuring tube/the measuring electrodes should **no longer** be wet with fluid during OED empty pipe adjustment
- 3. Start empty-pipe adjustment: Select "EMPTY PIPE ADJUST" or "OED EMPTY ADJUST" and press 🖻 to confirm.
- 4. After empty-pipe adjustment, fill the piping with fluid.
- 5. Start full-pipe adjustment: Select "FULL PIPE ADJUST" or "OED FULL ADJUST" and press E to confirm.
- 6. Having completed the adjustment, select the setting "OFF" and exit the function by pressing E.
- 7. Switch on empty pipe detection in the EPD function:
  - EPD empty pipe adjustment: Select ON STANDARD or ON SPECIAL and press <sup>E</sup> to confirm
     OED empty pipe adjustment: Select OED and confirm with <sup>E</sup>.
  - 🖒 Caution!

The adjustment coefficients must be valid before you can activate the EPD function. If adjustment is incorrect the following messages might appear on the display:

- FULL = EMPTY

- The adjustment values for empty pipe and full pipe are identical. In cases of this nature you must repeat empty-pipe or full-pipe adjustment!
- ADJUSTMENT NOT OK
  - Adjustment is not possible because the fluid's conductivity is out of range.

## 6.6 Data storage device (HistoROM)

At Endress+Hauser, the term HistoROM refers to various types of data storage modules on which process and measuring device data are stored. It is possible to plug these modules into other devices to copy device configurations from one device to another, for example.

## 6.6.1 HistoROM/S-DAT (sensor-DAT)

The S-DAT is an exchangeable data storage device in which all sensor relevant parameters are stored, i.e., diameter, serial number, calibration factor, zero point.

# 7 Maintenance

No special maintenance work is required.

# 7.1 Exterior cleaning

When cleaning the exterior of measuring devices, always use cleaning agents that do not attack the surface of the housing and the seals.

# 7.2 Seals

The seals of the Promag H sensor must be replaced periodically, particularly in the case of gasket seals (aseptic version).

The period between changes depends on the frequency of cleaning cycles, the cleaning temperature and the fluid temperature.

Replacement seals (accessories)  $\rightarrow$   $\stackrel{\frown}{=}$  76.

# 8 Accessories

Various accessories, which can be ordered separately from Endress+Hauser, are available for the transmitter and the sensor. Your Endress+Hauser service organization can provide detailed information on the specific order codes on request.

# 8.1 Device-specific accessories

Accessory	Description	Order code
Proline Promag 50 transmitter	Transmitter for replacement or storage. Use the order code to define the following specifications: Approvals Degree of protection/version Cable for remote version Cable entry Display/power supply/operation Software Outputs/inputs	50XXX – XXXXX*****

# 8.2 Measuring principle-specific accessories

Accessory	Description	Order code
Mounting set for Promag 50 transmitter	Mounting set for the transmitter (remote version). Suitable for: • Wall mounting • Pipe mounting • Panel-mounted installation	DK5WM – *
	<ul><li>Mounting set for aluminum field housing. Suitable for:</li><li>Pipe mounting</li></ul>	
Wall-mounting kit for Promag H	Wall-mounting kit for the Promag H sensor.	DK5HM - **
Cable for remote version	Coil and signal cables, various lengths.	DK5CA – **
Mounting kit for Promag D, wafer version     Mounting kit consisting of:       • Mounting bolts       • Nuts incl. washers       • Flange seals       • Centering sleeves (if required for the flange)		DKD** – **
Set of seals for Promag D	Set of seals consisting of two flange seals.	DK5DD - ***
Mounting kit for Promag H	Mounting kit consisting of: 2 process connections Threaded fasteners Seals	DKH** - ****
Set of seals for Promag H	For regular replacement of the seals of the Promag H sensor.	DK5HS - ***
Welding jig for Promag H	Weld nipple as process connection: welding jig for installation in pipe.	DK5HW - ***
Adapter connection for Promag A, H	Adapter connections for installing a Promag 10 H instead of a Promag 30/33 A or Promag 30/33 H DN 25.	DK5HA – *****
Ground rings for Promag H		
Ground cable for Promag L, W, P	Ground cable for potential equalization.	DK5GC - ***
Ground disk for Promag L, W, P	Ground disk for potential equalization.	DK5GD - * * ***

Accessory	Accessory Description	
Process display RIA45	Multifunctional 1-channel display unit: Universal input Transmitter power supply Limit relay Analog output	RIA45 – *****
Process display RIA251	Digital display device for looping into the 4 to 20 mA current loop.	RIA251 - **
Field display unit RIA16	Digital field display device for looping into the 4 to 20 mA current loop.	RIA16 – ***
Application Manager RMM621	Electronic recording, display, balancing, control, saving and event and alarm monitoring of analog and digital input signals. Values and conditions determined are output by means of analog and digital output signals. Remote transmission of alarms, input values and calculated values using a PSTN or GSM modem.	RMM621 – ******

# 8.3 Communication-specific accessories

Accessory	Description	Order code	
HART Communicator Field Xpert SFX 100	Handheld terminal for remote configuration and for obtaining measured values via the HART current output (4 to 20 mA) and FOUNDATION Fieldbus. Contact your Endress+Hauser representative for more information.	SFX100 - ******	
<ul> <li>Gateway for remote interrogation of HART sensors and actuators via Web browser:</li> <li>2-channel analog input (4 to 20 mA)</li> <li>4 binary inputs with event counter function and frequency measurement</li> <li>Communication via modem, Ethernet or GSM</li> <li>Visualization via Internet/Intranet in Web browser and/or WAP cellular phone</li> <li>Limit value monitoring with alarm by e-mail or SMS</li> <li>Synchronized time stamping of all measured values.</li> </ul>		FXA320 – ****	
Fieldgate FXA520	<ul> <li>Gateway for remote interrogation of HART sensors and actuators via Web browser:</li> <li>Web server for remote monitoring of up to 30 measuring points</li> <li>Intrinsically safe version [EEx ia]IIC for applications in hazardous areas</li> <li>Communication via modem, Ethernet or GSM</li> <li>Visualization via Internet/Intranet in Web browser and/or WAP cellular phone</li> <li>Limit value monitoring with alarm by e-mail or SMS</li> <li>Synchronized time stamping of all measured values</li> <li>Remote diagnosis and remote configuration of connected HART devices</li> </ul>	FXA520 – ****	
FXA195	The Commubox FXA195 connects intrinsically safe Smart transmitters with HART protocol to the USB port of a personal computer. This makes the remote operation of the transmitters possible with the aid of configuration programs (e.g. FieldCare). Power is supplied to the Commubox by means of the USB port	FXA195 – *	

# 8.4 Service-specific accessories

Accessory	Description	Order code
Applicator	Software for selecting and planning flowmeters. The Applicator software can be downloaded from the Internet or ordered on CD-ROM for installation on a local PC. Contact your Endress+Hauser representative for more information.	DXA80 – *
Fieldcheck	Tester/simulator for testing flowmeters in the field. When used in conjunction with the "FieldCare" software package, test results can be imported into a database, printed out and used for official certification. Contact your Endress+Hauser representative for more information.	50098801
FieldCare	FieldCare is Endress+Hauser's FDT-based asset management tool. It can configure all intelligent field units in your system and helps you manage them. By using status information, it is also a simple but effective way of checking their status and condition.	See the product page on the Endress+Hauser Web site: www.endress.com
Memograph M graphic display recorder	The Memograph M graphic display recorder provides information on all the relevant process variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a DSD card or USB stick. Memograph M boasts a modular design, intuitive operation and a comprehensive security concept. The ReadWin <sup>®</sup> 2000 PC software is part of the standard package and is used for configuring, visualizing and archiving the data captured. The mathematics channels which are optionally available enable continuous monitoring of specific power consumption, boiler efficiency and other parameters which are important for efficient energy management.	RSG40 – *****
FXA193	Service interface from the device to the PC for operation via FieldCare.	FXA193 - *

# 9 Troubleshooting

# 9.1 Troubleshooting instructions

Always start troubleshooting with the checklist below if faults occur after start-up or during operation. The routine takes you directly to the cause of the problem and the appropriate remedial measures.

No display visible and no output signals present.	<ol> <li>Check the supply voltage → terminals 1, 2</li> <li>Check the power line fuse →          <sup>1</sup> 91 85 to 260 V AC: 0.8 A slow-blow / 250 V 20 to 55 V AC / 16 to 62 V DC: 2 A slow-blow / 250 V         </li> </ol>
	3. Measuring electronics defective $\rightarrow$ order spare parts $\rightarrow \ge 86$
No display visible, but output signals are present.	<ol> <li>Check whether the ribbon-cable connector of the display module is correctly plugged into the amplifier board →  <sup>1</sup> 87</li> <li>Display module defective → order spare parts →  <sup>1</sup> 86</li> <li>Measuring electronics defective → order spare parts →  <sup>1</sup> 86</li> </ol>
Display texts are in a foreign language.	Switch off power supply. Press and hold down both the $\cdot$ buttons and switch on the measuring device. The display text will appear in English (default) and is displayed at maximum contrast.
Measured value indicated, but no signal at the current or pulse output.	Electronics board defective $\rightarrow$ order spare parts $\rightarrow \triangleq 86$
$\downarrow$	1
<ul> <li>Error messages consist of a</li> <li>Error type: S = system e</li> <li>Error message type: # =</li> <li>EMPTY PIPE = Type o</li> <li>O3:00:05 = duration of</li> <li>#401 = error number</li> <li>Caution!</li> <li>See the information on -</li> <li>The measuring system in message only.</li> </ul>	<pre>commissioning or measuring operation are displayed immediately. variety of icons: the meanings of these icons are as follows (example): rror, P = process error fault message, ! = notice message f error, e.g. measuring tube is only partly filled or completely empty error occurrence (in hours, minutes and seconds)  →</pre>
Errors which occur during Error messages consist of a – Error type: <b>S</b> = system e – Error message type: $t =$ – <b>EMPTY PIPE</b> = Type o – <b>03:00:05</b> = duration of – #401 = error number $\bigcirc$ Caution! • See the information on - • The measuring system in	commissioning or measuring operation are displayed immediately. variety of icons: the meanings of these icons are as follows (example): rror, <b>P</b> = process error fault message, <b>!</b> = notice message f error, e.g. measuring tube is only partly filled or completely empty error occurrence (in hours, minutes and seconds) →
<ul> <li>Errors which occur during Error messages consist of a <ul> <li>Error type: S = system e</li> <li>Error message type: t =</li> <li>EMPTY PIPE = Type o</li> <li>03:00:05 = duration of</li> <li>#401 = error number</li> <li>Caution!</li> <li>See the information on -</li> <li>The measuring system in message only.</li> </ul> </li> <li>Error number: No. 001 – 399</li> </ul>	<pre>commissioning or measuring operation are displayed immediately. variety of icons: the meanings of these icons are as follows (example): rror, P = process error fault message, ! = notice message f error, e.g. measuring tube is only partly filled or completely empty error occurrence (in hours, minutes and seconds)  →</pre>
<ul> <li>Errors which occur during Error messages consist of a</li> <li>Error messages consist of a</li> <li>Error message type: <i>f</i> =</li> <li>EMPTY PIPE = Type o</li> <li>03:00:05 = duration of</li> <li>#401 = error number</li> <li>Caution!</li> <li>See the information on -</li> <li>The measuring system in message only.</li> <li>Error number:</li> <li>No. 001 – 399</li> <li>No. 501 – 699</li> <li>Error number:</li> </ul>	commissioning or measuring operation are displayed immediately. variety of icons: the meanings of these icons are as follows (example): rror, $\mathbf{P} = \text{process error}$ fault message, $\mathbf{!} = \text{notice message}$ f error, e.g. measuring tube is only partly filled or completely empty error occurrence (in hours, minutes and seconds) $\rightarrow \triangleq 61!$ nterprets simulations and positive zero return as system errors, but displays them as notice System error (device error) has occurred $\rightarrow \triangleq 80$
Errors which occur during Error messages consist of a – Error type: <b>S</b> = system e – Error message type: $\pounds =$ <b>EMPTY PIPE</b> = Type o <b>03:00:05</b> = duration of – #401 = error number () Caution! • See the information on - • The measuring system in message only. Error number: No. 001 – 399 No. 501 – 699 Error number: No. 401 – 499	commissioning or measuring operation are displayed immediately. variety of icons: the meanings of these icons are as follows (example): rror, $\mathbf{P}$ = process error fault message, $\mathbf{I}$ = notice message f error, e.g. measuring tube is only partly filled or completely empty error occurrence (in hours, minutes and seconds) $\rightarrow \triangleq 61!$ nterprets simulations and positive zero return as system errors, but displays them as notice System error (device error) has occurred $\rightarrow \triangleq 80$ Process error (application error) has occurred $\rightarrow \triangleq 82$



## 2 System error messages

Serious system errors are **always** recognized by the device as "Fault message", and are shown as a lightning flash ( $\frac{1}{2}$ ) on the display. Fault messages immediately affect the outputs.

### Caution!

In the event of a serious fault, a flowmeter might have to be returned to the manufacturer for repair. The necessary procedures on  $\rightarrow \triangleq 6$  must be carried out before you return a flowmeter to Endress+Hauser. Always enclose a duly completed "Declaration of Contamination" form. You will find a master copy of this form at the back of this manual.



()

Note!

Also observe the information on  $\rightarrow \ge 61$ .

No.	Error message / Type	Cause	Remedy (spare part $\rightarrow \blacksquare 86$ )
≠ = Fa	stem error ult message (with an effect or ptice message (without an effe		
No. #	$0xx \rightarrow$ Hardware error		
001	S: CRITICAL FAILURE 4: # 001	Serious device error	Replace the amplifier board.
011	S: AMP HW EEPROM 4: # 011	Amplifier: Defective EEPROM	Replace the amplifier board.
012	S: AMP SW EEPROM 7: # 012	Amplifier: Error accessing EEPROM data	The EEPROM data blocks in which an error has occurred are displayed in the TROUBLESHOOTING function. Press Enter to acknowledge the errors in question; default values are automatically inserted instead of the errored parameter values. Note! The measuring device has to be restarted if an error has occurred in a totalizer block (see error No. 111 / CHECKSUM TOTAL).
031	S: SENSOR HW DAT 5: # 031	<ol> <li>S-DAT is not plugged into the amplifier board correctly (or is missing).</li> <li>S-DAT is defective.</li> </ol>	<ol> <li>Check whether the S-DAT is correctly plugged into the amplifier board.</li> <li>Replace the S-DAT if it is defective.</li> <li>Check that the new replacement DAT is compatible with the measuring electronics.</li> </ol>
032	S: SENSOR SW DAT 7: # 032		Check the: - Spare part set number - Hardware revision code
			3. Replace measuring electronics boards if necessary.
			4. Plug the S-DAT into the amplifier board.
No. #	$1xx \rightarrow Software error$		
101	S: GAIN ERROR AMP 5: # 101	Gain deviation compared to reference gain > 25%.	Replace the amplifier board.
111	S: CHECKSUM TOTAL 4: # 111	Totalizer checksum error.	<ol> <li>Restart the measuring device.</li> <li>Replace the amplifier board if necessary.</li> </ol>
121	S: A / C COMPATIB. !: # 121	Due to different software versions, I/O board and amplifier board are only partially compatible (possibly restricted functionality). Note! - This message is only listed in the error history. - Nothing is shown on the display.	Module with lower software version has either to be updated by FieldCare with the required software version or the module has to be replaced.

No.	Error message / Type	Cause	Remedy (spare part $\rightarrow \blacksquare 86$ )
No. # 2	$2xx \rightarrow \text{Error in DAT / no}$	communication	
251	S: COMMUNICATION I/O 7: # 251	Internal communication fault on the amplifier board.	Replace the amplifier board.
261	S: COMMUNICATION I/O 7: # 261	No data reception between amplifier and I/O board or faulty internal data transfer.	Check the BUS contacts.
No. # 3	$3xx \rightarrow System$ limits exceed	eded	
321	S: TOL. COIL CURR. 4: # 321	Sensor: Coil current is out of tolerance.	Warning! Switch off power supply before manipulating the coil current cable, coil current cable connector or measuring electronics boards!
			Remote version:
			1. Check wiring of terminals $41/42 \rightarrow a$ 44
			2. Check coil current cable connector.
			Compact and remote version: Replace measuring electronics boards if necessary
339	S: STACK CUR OUT n	The temporarily buffered flow portions (measuring	1. Change the upper or lower limit setting, as applicable.
to 342	!: # 339 to 342	mode for pulsating flow) could not be cleared or output within 60 seconds.	2. Increase or reduce flow, as applicable.
343	S: STACK FREQ. OUT n		Recommendations in the event of fault category = FAULT MESSAGE ( $\mathfrak{F}$ )
to 346	!: # 343 to 346		<ul> <li>Configure the fault response of the output to "ACTUAL VALUE" so that the temporary buffer can be cleared.</li> <li>Clear the temporary buffer by the measures described under Item 1.</li> </ul>
347	S: STACK PULSE OUT n	The temporarily buffered flow portions (measuring	1. Increase the setting for pulse weighting
to 350	!: # 343 to 346	mode for pulsating flow) could not be cleared or output within 60 seconds.	2. Increase the max. pulse frequency if the totalizer can handle a higher number of pulses.
			3. Increase or reduce flow, as applicable.
			Recommendations in the event of fault category = FAULT MESSAGE ( $f$ )
			<ul> <li>Configure the fault response of the output to "ACTUAL VALUE" so that the temporary buffer can be cleared.</li> <li>Clear the temporary buffer by the measures described under Item 1.</li> </ul>
251	C. CUDDENT DANCE 7	Current autout	
351 to 354	S: CURRENT RANGE n !: # 351 to 354	Current output: flow is out of range.	<ol> <li>Change the upper or lower limit setting, as applicable.</li> <li>Increase or reduce flow, as applicable.</li> </ol>
355	S: FREQ. RANGE n	Frequency output:	1. Change the upper or lower limit setting, as applicable.
to 358	1: # 355 to 358	flow is out of range.	<ol> <li>Increase or reduce flow, as applicable.</li> </ol>
359	S: PULSE RANGE	Pulse output:	1. Increase the setting for pulse weighting
to 362	!: # 359 to 362	the pulse output frequency is out of range.	<ul> <li>2. When selecting the pulse width, choose a value that can still be processed by a connected counter (e.g. mechanical counter, PLC etc.). Determine the pulse width: <ul> <li>Variant 1: Enter the minimum duration that a pulse must be present at the connected counter to ensure its registration.</li> <li>Variant 2: Enter the maximum (pulse) frequency as the half "reciprocal value" that a pulse must be present at the connected counter to ensure its registration. Example:</li> <li>The maximum input frequency of the connected counter is 10 Hz. The pulse width to be entered is:</li> </ul> </li> </ul>
			**************************************

No.	Error message / Type	Cause	Remedy (spare part $\rightarrow \blacksquare 86$ )
No. #	$5xx \rightarrow$ Application error		
501	S: SWUPDATE ACT. !: # 501	New amplifier or communication (I/O module) software version is loaded. Currently no other functions are possible.	Wait until the procedure is finished. The device will restart automatically.
502	S: UP-/DOWNLOAD ACT !: # 502	Uploading or downloading the device data via operating program. Currently no other functions are possible.	Wait until the procedure is finished.
No. #	$6xx \rightarrow Simulation mode a$	ictive	
601	S: POS. ZERO-RETURN !: # 601	Positive zero return active Cution! This message has the highest display priority!	Switch off positive zero return
611 to 614	S: SIM. CURR. OUT. n !: # 611 to 614	Simulation current output active	
621 to 624	S: SIM. FREQ. OUT. n !: # 621 to 624	Simulation frequency output active	Switch off simulation
631 to 634	S: SIM. PULSE n !: # 631 to 634	Simulation pulse output active	Switch off simulation
641 to 644	S: SIM. STAT. OUT n !: # 641 to 644	Simulation status output active	Switch off simulation
671 to 674	S: SIM. STATUS IN n !: # 671 to 674	Simulation status input active	Switch off simulation
691	S: SIM. FAILSAFE !: # 691	Simulation of response to error (outputs) active	Switch off simulation
692	S: SIM. MEASURAND !: # 692	Simulation of a measured variable active (e.g. mass flow).	Switch off simulation
698	S: DEV. TEST ACT. !: # 698	The measuring device is being checked on site via the test and simulation device.	-

# 9.3 Process error messages

Note! Also observe the information on  $\rightarrow \ge 61$ .

No.	Error message / Type	Cause	Remedy (spare part $\rightarrow \textcircled{1}{2}86$ )
ל = Fat	ocess error 11 message (with an effect on tice message (without an effec	. ,	
401	EMPTY PIPE 7: # 401	Measuring tube partially filled or empty	<ol> <li>Check the process conditions of the plant</li> <li>Fill the measuring tube</li> </ol>
461	ADJ. NOT OK !: # 461	EPD calibration not possible because the fluid's conductivity is either too low or too high.	The EPD function cannot be used with fluids of this nature.
463	FULL = EMPTY 7: # 463	The EPD calibration values for empty pipe and full pipe are identical, therefore incorrect.	Repeat calibration, making sure procedure is correct $\rightarrow$ $\square$ 73.

# 9.4 Process errors without messages

Symptoms	Rectification
Remark: You may have to change or corr	rect certain settings in functions in the function matrix in order to rectify the fault.
Flow values are negative, even though the fluid is flowing forwards through the pipe.	<ol> <li>Remote version:         <ul> <li>Switch off the power supply and check the wiring → ■ 44</li> <li>If necessary, reverse the connections at terminals 41 and 42</li> </ul> </li> <li>Change the setting in the "INSTALLATION DIFFECTION SENSOR" function accordingly.</li> </ol>
Measured-value reading fluctuates even though flow is steady.	<ol> <li>Change the setting in the "INSTALLATION DIRECTION SENSOR" function accordingly</li> <li>Check grounding and potential equalization → 1 53</li> <li>Check the fluid for presence of gas bubbles.</li> <li>In the "SYSTEM DAMPING" function → increase the value</li> </ol>
Measured-value reading shown on display, even though the fluid is at a standstill and the measuring tube is full.	<ol> <li>Check grounding and potential equalization → <sup>1</sup>/<sub>2</sub> 53</li> <li>Check the fluid for presence of gas bubbles.</li> <li>Activate the "LOW FLOW CUTOFF" function, i.e. enter or increase the value for the switching point.</li> </ol>
Measured-value reading on display, even though measuring tube is empty.	<ol> <li>Perform empty-pipe/full-pipe adjustment and then switch on Empty Pipe detection → 1 73</li> <li>Remote version: Check the terminals of the EPD cable → 1 44</li> <li>Fill the measuring tube.</li> </ol>
The current output signal is always 4 mA, irrespective of the flow signal at any given time.	<ol> <li>Select the "BUS ADDRESS" function and change the setting to "0".</li> <li>Value for creepage too high. Reduce the value in the "LOW FLOW CUTOFF" function.</li> </ol>
The fault cannot be rectified or some other fault not described above has arisen. In these instances, please contact your Endress+Hauser service organization.	The following options are available for tackling problems of this nature: Request the services of an Endress+Hauser service technician sent out, please be ready to quote the following information: <ul> <li>Bif description of the fault</li> <li>Nameplate specifications (→ □ 7): order code, serial number</li> </ul> Returning devices to Endress+Hauser The necessary procedures (→ □ 6) must be carried out before you return a flowmeter requiring repair or calibration to Endress+Hauser. Always enclose a duly completed "Declaration of Conformity" form with the flowmeter. You will find a master copy of this form at the back of this manual. Replace transmitter electronics Components in the measuring electronics defective → order spare parts → □ 86



## 9.5 Response of outputs to errors

### Note!

The failsafe mode of totalizers, current, pulse and frequency outputs can be customized by means of various functions in the function matrix. You will find detailed information on these procedures in the "Description of Device Functions" manual.

You can use positive zero return to set the signals of the current, pulse and status outputs to their fallback value, for example when measuring has to be interrupted while a pipe is being cleaned. This function takes priority over all other device functions: simulations, for example, are suppressed.

	Process/system error is current	Positive zero return is activated
Caution System or proces information on –	s errors defined as "Notice messages" have no effect whatsoever on t	he inputs and outputs. See the
Current output	MINIMUM VALUE $0-20 \text{ mA} \rightarrow 0 \text{ mA}$ $4-20 \text{ mA} \rightarrow 2 \text{ mA}$ $4-20 \text{ mA} \text{ HART} \rightarrow 2 \text{ mA}$ $4-20 \text{ mA} \text{ HART} \rightarrow 2 \text{ mA}$ $4-20 \text{ mA} \text{ MAMUR} \rightarrow 3.5 \text{ mA}$ $4-20 \text{ mA} \text{ HART} \text{ NAMUR} \rightarrow 3.5 \text{ mA}$ $4-20 \text{ mA} \text{ US} \rightarrow 3.75 \text{ mA}$ $4-20 \text{ mA} \text{ US} \rightarrow 3.75 \text{ mA}$ $4-20 \text{ mA} \text{ LS} \rightarrow 3.75 \text{ mA}$ $4-20 \text{ mA} (25 \text{ mA}) \rightarrow 0 \text{ mA}$ $4-20 \text{ mA} (25 \text{ mA}) \rightarrow 2 \text{ mA}$ $4-20 \text{ mA} (25 \text{ mA}) \text{ HART} \rightarrow 2 \text{ mA}$	Output signal corresponds to "zero flow"
	MAXIMUM VALUE $0-20 \text{ mA} \rightarrow 22 \text{ mA}$ $4-20 \text{ mA} \rightarrow 22 \text{ mA}$ $4-20 \text{ mA} \text{ HART} \rightarrow 22 \text{ mA}$ $4-20 \text{ mA} \text{ HART} \rightarrow 22.6 \text{ mA}$ $4-20 \text{ mA} \text{ HART} \text{ NAMUR} \rightarrow 22.6 \text{ mA}$ $4-20 \text{ mA} \text{ US} \rightarrow 22.6 \text{ mA}$ $4-20 \text{ mA} \text{ US} \rightarrow 22.6 \text{ mA}$ $4-20 \text{ mA} (25 \text{ mA}) \rightarrow 25 \text{ mA}$ $4-20 \text{ mA} (25 \text{ mA}) \rightarrow 25 \text{ mA}$ $4-20 \text{ mA} (25 \text{ mA}) \rightarrow 25 \text{ mA}$ $4-20 \text{ mA} (25 \text{ mA}) \text{ HART} \rightarrow 25 \text{ mA}$ $4-20 \text{ mA} (25 \text{ mA}) \text{ HART} \rightarrow 25 \text{ mA}$ $4-20 \text{ mA} (25 \text{ mA}) \text{ HART} \rightarrow 25 \text{ mA}$ $4-20 \text{ mA} (25 \text{ mA}) \text{ HART} \rightarrow 25 \text{ mA}$ $4-20 \text{ mA} (25 \text{ mA}) \text{ HART} \rightarrow 25 \text{ mA}$ $4-20 \text{ mA} (25 \text{ mA}) \text{ HART} \rightarrow 25 \text{ mA}$ $4-20 \text{ mA} (25 \text{ mA}) \text{ HART} \rightarrow 25 \text{ mA}$ $4-20 \text{ mA} (25 \text{ mA}) \text{ HART} \rightarrow 25 \text{ mA}$ $4-20 \text{ mA} (25 \text{ mA}) \text{ HART} \rightarrow 25 \text{ mA}$ $4-20 \text{ mA} (25 \text{ mA}) \text{ HART} \rightarrow 25 \text{ mA}$ $4-20 \text{ mA} (25 \text{ mA}) \text{ HART} \rightarrow 25 \text{ mA}$ $4-20 \text{ mA} (25 \text{ mA}) \text{ HART} \rightarrow 25 \text{ mA}$ $4-20 \text{ mA} (25 \text{ mA}) \text{ HART} \rightarrow 25 \text{ mA}$ $4-20 \text{ mA} (25 \text{ mA}) \text{ HART} \rightarrow 25 \text{ mA}$ $4-20 \text{ mA} (25 \text{ mA}) \text{ HART} \rightarrow 25 \text{ mA}$ $4-20 \text{ mA} (25 \text{ mA}) \text{ HART} \rightarrow 25 \text{ mA}$ $4-20 \text{ mA} (25 \text{ mA}) \text{ HART} \rightarrow 25 \text{ mA}$ $4-20 \text{ mA} (25 \text{ mA}) \text{ HART} \rightarrow 25 \text{ mA}$ $4-20 \text{ mA} (25 \text{ mA}) \text{ HART} \rightarrow 25 \text{ mA}$ $4-20 \text{ mA} (25 \text{ mA}) \text{ HART} \rightarrow 25 \text{ mA}$ 4-20  mA (25  mA)  HAR  HA  mA  mA	
Pulse output	MIN/MAX VALUE → FALLBACK VALUE Signal output → no pulses HOLD VALUE Last valid value (preceding occurrence of the fault) is output. ACTUAL VALUE Fault is ignored, i.e. normal measured-value output on the basis of ongoing flow measurement.	Output signal corresponds to "zero flow"

Failsafe mode of outputs and totalizers					
	Process/system error is current	Positive zero return is activated			
Frequency output	FALLBACK VALUESignal output $\rightarrow 0$ Hz	Output signal corresponds to "zero flow"			
	<i>FAILSAFE LEVEL</i> Output of the frequency specified in the FALÌLSAFE VALUE function.				
	HOLD VALUE Measured value display on the basis of the last saved value preceding occurrence of the fault.				
	ACTUAL VALUE Measured value display on the basis of the current flow measurement. The fault is ignored.				
Totalizer	STOP The totalizers are paused until the error is rectified.	Totalizer stops			
	ACTUAL VALUE The fault is ignored. The totalizer continues to count in accordance with the current flow value.				
	HOLD VALUE The totalizer continues to count the flow in accordance with the last valid flow value (before the error occurred).				
Status output	In the event of a fault or power supply failure: Status output $\rightarrow$ non-conductive	No effect on status output			

## 9.6 Spare parts

Detailed troubleshooting instructions are provided in the previous sections  $\rightarrow \square 79$ The measuring device, moreover, provides additional support in the form of continuous selfdiagnosis and error messages.

Fault rectification can entail replacing defective components with tested spare parts. The illustration below shows the available scope of spare parts.



#### Note!

You can order spare parts directly from your Endress+Hauser service organization by providing the serial number printed on the transmitter's nameplate  $\rightarrow \triangleq 7$ 

Spare parts are shipped as sets comprising the following parts:

- Spare part
- Additional parts, small items (threaded fasteners, etc.)
- Mounting instructions
- Packaging

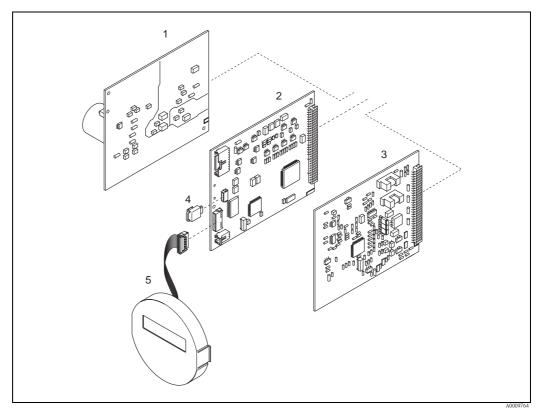


Fig. 52: Spare parts for Promag 50 transmitter (field and wall-mounted housings)

- 1 Power unit board (85 to 260 V AC, 20 to 55 V AC, 16 to 62 V DC)
- 2 Amplifier board
- 3 I/O board (COM module)
- 4 HistoROM / S-DAT (sensor data memory)
- 5 Display module

## 9.6.1 Removing and installing printed circuit boards

#### Field housing: removing and installing printed circuit boards $\rightarrow$ $\square$ 53



- Warning! ■ Risk of electric shock!
- Exposed components carry dangerous voltages. Make sure that the power supply is switched off before you remove the cover of the electronics compartment.
- Risk of damaging electronic components (ESD protection). Static electricity can damage electronic components or impair their operability. Use a workplace with a grounded working surface purpose-built for electrostatically sensitive devices!
- If you cannot guarantee that the dielectric strength of the device is maintained in the following steps, then an appropriate inspection must be carried out in accordance with the manufacturer's specifications.
- When connecting Ex-certified devices, see the notes and diagrams in the Ex-specific supplement to these Operating Instructions.



Use only original Endress+Hauser parts.

- 1. Switch off power supply.
- 2. Unscrew cover of the electronics compartment from the transmitter housing.
- 3. Remove the local display (1) as follows:
  - Press in the latches (1.1) at the side and remove the display module.
  - Disconnect the ribbon cable (1.2) of the display module from the amplifier board.
- 4. Remove the screws and remove the cover (2) from the electronics compartment.
- 5. Remove the boards (4, 6): Insert a suitable tool into the hole (3) provided for the purpose and pull the board clear of its holder.
- 6. Remove amplifier board (5):
  - Disconnect the plug of the electrode signal cable (5.1) including S-DAT (5.3) from the board.
  - Loosen the plug locking of the coil current cable (5.2) and gently disconnect the plug from the board, i.e. without moving it to and fro.
  - Insert a thin pin into the hole (3) provided for the purpose and pull the board clear of its holder.
- 7. Installation is the reverse of the removal procedure.



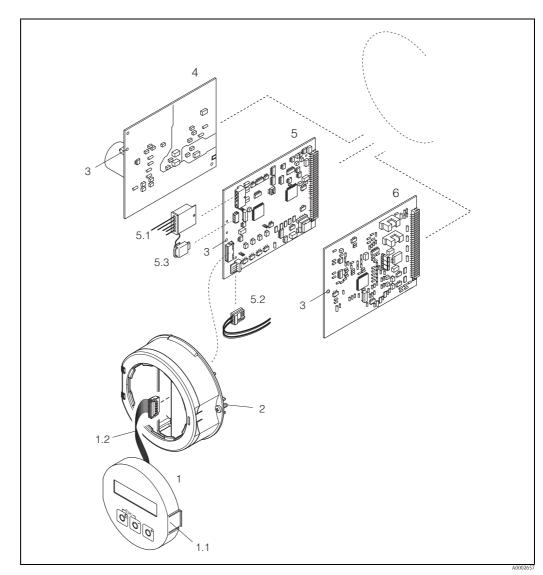


Fig. 53: Field housing: removing and installing printed circuit boards

- Local display
- 1.1 Latch

1

- 1.2 Ribbon cable (display module)
- 2
- Screws of electronics compartment cover Aperture for installing/removing boards 3
- 4 Power supply board
- 5 Amplifier board
- 5.1 Electrode signal cable (sensor)
- 5.2
- Coil current cable (sensor) Histo-ROM / S-DAT (sensor data memory) 5.3
- 6 I/O board

#### Wall-mount housing: removing and installing printed circuit boards $\rightarrow$ $\square$ 54



Risk of electric shock!

Exposed components carry dangerous voltages. Make sure that the power supply is switched off before you remove the cover of the electronics compartment.

- Risk of damaging electronic components (ESD protection). Static electricity can damage electronic components or impair their operability. Use a workplace with a grounded working surface purpose-built for electrostatically sensitive devices!
- If you cannot guarantee that the dielectric strength of the device is maintained in the following steps, then an appropriate inspection must be carried out in accordance with the manufacturer's specifications.
- When connecting Ex-certified devices, see the notes and diagrams in the Ex-specific supplement to these Operating Instructions.
- ן Caution!

Use only original Endress+Hauser parts.

- 1. Switch off power supply.
- 2. Remove the screws and open the hinged cover (1) of the housing. Remove screws of the electronics module (2).
- 3. Then push up electronics module and pull it as far as possible out of the wall-mounted housing.
- 4. Disconnect the following cable plugs from amplifier board (7): - Electrode signal cable plug (7.1) including S-DAT (7.3).
  - Plug of coil current cable (7.2). To do so, loosen the plug locking of the coil current cable and gently disconnect the plug from the board, i.e. without moving it to and fro.
    Ribbon cable plug (3) of the display module.
- 5. Remove the screws and remove the cover (4) from the electronics compartment.
- 6. Remove the boards (6, 7, 8): Insert a suitable tool into the hole (5) provided for the purpose and pull the board clear of its holder.
- 7. Installation is the reverse of the removal procedure.

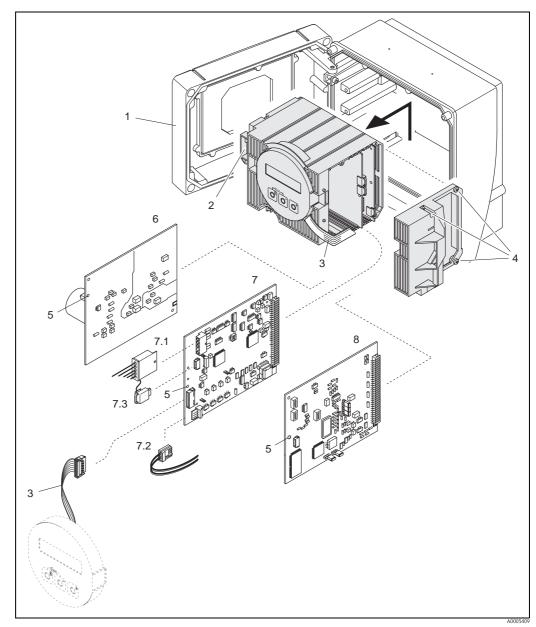


Fig. 54: Wall-mount housing: removing and installing printed circuit boards

- 1 Housing cover
- 2 3 Electronics module
- Ribbon cable (display module)
- 4 5 Cover of electronics compartment (3 screws)
- Aperture for installing/removing boards Power supply board Amplifier board Electrode signal cable (sensor)
- 6
- 7
- 7.1
- 7.2 7.3 Coil current cable (sensor)
- Histo-ROM / S-DAT (sensor data memory)
- 8 I/O board

## 9.6.2 Replacing the device fuse

# Warning!

Risk of electric shock! Exposed components carry dangerous voltages. Make sure that the power supply is switched off before you remove the cover of the electronics compartment.

The main fuse is on the power supply board ( $\rightarrow \boxtimes 55$ ). The procedure for replacing the fuse is as follows:

- 1. Switch off power supply.
- 2. Remove the power supply board: field housing  $\rightarrow \ge 87$ , wall-mount housing  $\rightarrow \ge 89$
- 3. Remove cap (1) and replace the device fuse (2). Use only fuses of the following type:
  - − Power supply 20 to 55 V AC / 16 to 62 V DC  $\rightarrow$  2.0 A slow-blow / 250 V; 5.2 × 20 mm
  - Power supply 85 to 260 V AC  $\rightarrow$  0.8 A slow-blow / 250 V; 5.2 × 20 mm
  - Ex-rated devices  $\rightarrow$  see the Ex documentation.
- 4. Installation is the reverse of the removal procedure.
- က် Caution!

Use only original Endress+Hauser parts.

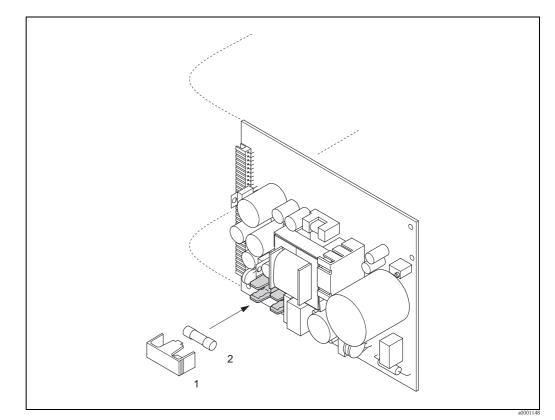


Fig. 55: Replacing the device fuse on the power supply board

- 1 Protective cap
- 2 Device fuse

## 9.6.3 Replacing the exchangeable electrode

The Promag W sensor (DN 350 to 2000; 14" to 78") is available with exchangeable measuring electrodes as an option. This design permits the measuring electrodes to be replaced or cleaned under process conditions.

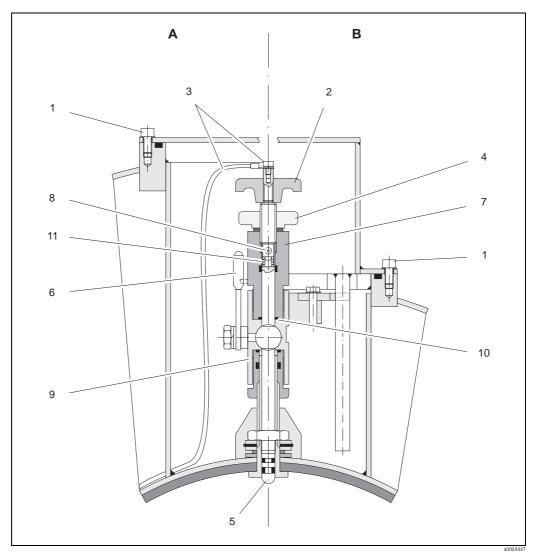


Fig. 56: Apparatus for replacing exchangeable measuring electrodes

*View* A = DN 1200 to 2000 (48" to 78")

*View B* = *DN 350 to 1050 (14" to 42")* 

- 1 Allen screw
- 2 Handle
- 3 Electrode cable
- 4 Knurled nut (locknut)
- 5 Measuring electrode
- 6 Stop cock (ball valve)
- 7 Retaining cylinder
- 8 Locking pin (for handle)
- 9 Ball-valve housing10 Seal (retaining cylinder)
- 10 Seal (retaining cyll 11 Coil spring

	Removing the electrode		Installing the electrode		
1	Loosen Allen screw (1) and remove the cover.		Insert new electrode (5) into retaining cylinder (7) from below. Make sure that the seals at the tip of the electrode are clean.		
2	Remove electrode cable (3) secured to handle (2).		Mount handle (2) on the electrode and insert locking pin (8) to secure it in position. Caution! Make sure that coil spring (11) is inserted. This is essential to ensure correct electrical contact and correct measuring signals.		
3	Loosen knurled nut (4) by hand. This knurled nut acts as a locknut.		Pull the electrode back until the tip of the electrode no longer protrudes from retaining cylinder (7).		
4	Remove electrode (5) by turning handle (2). The electrode can now be pulled out of retaining cylinder (7) as far as a defined stop. M Warning! Risk of injury. Under process conditions (pressure in the piping system) the electrode can recoil suddenly against its stop. Apply counter-pressure while releasing the electrode.		Screw the retaining cylinder (7) onto ball-valve housing (9) and tighten it by hand. Seal (10) on the cylinder must be correctly seated and clean. Note! Make sure that the rubber hoses on retaining cylinder (7) and stop cock (6) are of the same color (red or blue).		
5	Close stop cock (6) after pulling out the electrode as far as it will go. Warning! Do not subsequently open the stop cock, in order to prevent fluid escaping.		Open stop cock (6) and turn handle (2) to screw the electrode all the way into the retaining cylinder.		
6	Remove the electrode complete with retaining cylinder (7).		Screw knurled nut (4) onto the retaining cylinder. This firmly locates the electrode in position.		
7	Remove handle (2) from electrode (5) by pressing out locking pin (8). Take care not to lose coil spring (11).	· · · · · · · · · · · · · · · · · · ·	Use the Allen screw to secure electrode cable (3) to handle (2). Caution! Make sure that the machine screw securing the electrode cable is firmly tightened. This is essential to ensure correct electrical contact and correct measuring signals.		
8	Remove the old electrode and insert the new electrode. Replacement electrodes can be ordered separately from Endress+Hauser.	8	Reinstall the cover and tighten Allen screw (a).		

## 9.7 Return

### Caution!

Do not return a measuring device if you are not absolutely certain that all traces of hazardous substances have been removed, e.g. substances which have penetrated crevices or diffused through plastic.

Costs incurred for waste disposal and injury (burns, etc.) due to inadequate cleaning will be charged to the owner-operator.

The following steps must be taken before returning a flow measuring device to Endress+Hauser, e.g. for repair or calibration:

- Always enclose a duly completed "Declaration of contamination" form. Only then can Endress+Hauser transport, examine and repair a returned device.
- Enclose special handling instructions if necessary, for example a safety data sheet as per EC REACH Regulation No. 1907/2006.
- Remove all residues. Pay special attention to the grooves for seals and crevices which could contain residues. This is particularly important if the substance is hazardous to health, e.g. flammable, toxic, caustic, carcinogenic, etc.



Note!

You will find a preprinted "Declaration of contamination" form at the back of these Operating Instructions.

## 9.8 Disposal

Observe the regulations applicable in your country!

## 9.9 Software history

Date	Software version	Changes to software	Operating Instructions
11.2009	Amplifier: V 2.03.XX	Introduction of Calf history	71106181 / 12.09 71105332 / 11.09
06.2009	Amplifier: V 2.02.XX	Introduction of Promag L	71095684 / 06.09
03.2009	Amplifier: V 2.02.XX	Introduction of Promag D Introduction of new nominal diameter	71088677 / 03.09
11.2004	Amplifier: 1.06.01 Communication module: 1.04.00	Software update relevant only for production	50097089 / 10.03
10.2003	Amplifier: 1.06.00 Communication module: 1.03.00	Software expansion: • Language groups • Flow direction pulse output selectable New functionalities: • Second Totalizer • Adjustable backlight (display) • Operation hours counter • Simulation function for pulse output • Counter for access code • Reset function (fault history) • Up-/download with FieldTool	50097089 / 10.03

Date	Software version	Changes to software	Operating Instructions
08.2003	Communication module: 1.02.01	Software expansion: New / revised functionalities New functionalities: Current span NAMUR NE 43 Failsafe mode function Troubleshooting function System and process error messages Response of status output	50097089 / 08.03
08.2002	Amplifier: 1.04.00	Software expansion: New / revised functionalities New functionalities: Current span NAMUR NE 43 EPD (new mode) Failsafe mode function Acknowledge fault function Troubleshooting function System and process error messages Response of status output	50097089 / 08.02
03.2002	Amplifier: 1.03.00	Software expansion: Suitability for custody transfer measurement Promag 50/51	none
06.2001	Amplifier: 1.02.00 Communication module: 1.02.00	Software expansion: New functionalities: New functionalities: General device functions "OED" software function "Pulse width" software function	50097089 / 06.01
09.2000	Amplifier: 1.01.01 Communication module: 1.01.00	Software expansion: Functional adaptations	none
08.2000	Amplifier: 1.01.00	Software expansion: • Functional adaptations	none
04.2000	Amplifier: 1.00.00 Communication module: 1.00.00	Original software Compatible with: • FieldTool • Commuwin II (version 2.05.03 and higher) • HART Communicator DXR 275 (from OS 4.6) with Rev. 1, DD1	50097089 / 04.00



#### Note!


Uploads or downloads between the individual software versions are only possible with a special service software.

	10	Technical data	
	10.1	Technical data at a glance	
	<b>10.1.1</b> → 🖹 5	Application	
	10.1.2	Function and system design	
Measuring principle	Electromag	gnetic flow measurement on the basis of Faraday's Law.	
Measuring system	→ Ē7		
	10.1.3	Input	
Measured variable	Flow veloc	city (proportional to induced voltage)	
Measuring range	Typically v	r = 0.01 to 10 m/s (0.033 to 33 ft/s) with the specified accuracy	
Operable flow range	Over 1000	):1	
Input signal	<ul> <li>Galvanic</li> <li>U = 3 to</li> <li>Ri = 5 ks</li> </ul>		
Output signal	<ul> <li>Active/p – Active</li> <li>Passive</li> <li>Time con</li> <li>Full scale</li> <li>Tempera</li> <li>o.f.s. = of b</li> <li>Pulse / freq</li> <li>Galvanic</li> <li>Passive:</li> <li>Open co</li> <li>Can be con</li> <li>Pulse - Pulse - Puls</li></ul>	cally isolated passive can be selected: :: $0/4$ to 20 mA, $R_L < 700 \Omega$ (HART: $R_L \ge 250 \Omega$ ) e: 4 to 20 mA, supply voltage $V_S$ 18 to 30 V DC, $R_i \ge 150 \Omega$ ) nstant can be selected (0.01 to 100s) e value adjustable ature coefficient: typ. 0.005% o.f.s./°C, resolution: 0.5 μA full scale value nuency output cally isolated 30 V DC / 250 mA llector configured as:	

Signal on alarm	Current output		
	Failsafe mode can be selected (e.g. in accordance with NAMUR Recommendation NE 43)		
	Pulse/frequency output		
	Failsafe mode can be selected		
	Status output		
	"Not conductive" in the event of fault or power supply failure		
Load	See "Output signal"		
Switching output	Status output		
	Galvanically isolated		
	<ul> <li>Max. 30 V DC/250 mA</li> <li>Open collector</li> </ul>		
	<ul> <li>Can be configured for: error messages, empty pipe detection (EPD), flow direction, limit values</li> </ul>		
Low flow cut off	Low flow cut off, switch-on point can be selected as required		
Galvanic isolation	All circuits for inputs, outputs, and power supply are galvanically isolated from each other.		
	10.1.5 Power supply		
Electrical connections	$\rightarrow$ $$ 44		
Supply voltage (power supply)	<ul> <li>85 to 260 V AC, 45 to 65 Hz</li> <li>20 to 55 V AC, 45 to 65 Hz</li> <li>16 to 62 V DC</li> </ul>		
Cable entry	Power supply and signal cables (inputs/outputs):		
	<ul> <li>Cable entry M20 × 1.5 (8 to 12 mm/0.31 to 0.47 inch)</li> <li>Sensor cable entry for armored cables M20 × 1.5 (9.5 to 16 mm / 0.37 to 0.63 inch)</li> <li>Threads for cable entries ½" NPT, G ½"</li> </ul>		
	Connecting cable for remote version:		
	<ul> <li>Cable entry M20 × 1.5 (8 to 12 mm/0.31 to 0.47 inch)</li> <li>Sensor cable entry for armored cables M20 × 1.5 (9.5 to 16 mm / 0.37 to 0.63 inch)</li> <li>Threads for cable entries ½" NPT, G ½"</li> </ul>		
Cable specifications	$\rightarrow$ $\ge$ 49		
Power consumption	Power consumption		
	<ul> <li>AC: &lt;15 VA (incl. sensor)</li> <li>DC: &lt;15 W (incl. sensor)</li> </ul>		
	Switch-on current		
	<ul> <li>max. 3 A (&lt;5 ms) for 24 V DC</li> <li>max. 8.5 A (&lt;5 ms) for 260 V AC</li> </ul>		

Power supply failure	<ul> <li>Lasting min. 1 cycle frequency:</li> <li>EEPROM saves measuring system data</li> <li>S-DAT: exchangeable data storage chip which stores the data of the sensor (nominal diameter, serial number, calibration factor, zero point etc.)</li> </ul>				
Potential equalization	$\rightarrow 153$				
	10.1.6 Performance characteristics				
Reference operating	<i>To DIN EN 29104 and VDI/VDE 2641:</i>				
conditions	<ul> <li>Fluid temperature: +28 °C ± 2 K</li> <li>Ambient temperature: +22 °C ± 2 K</li> <li>Warm-up period: 30 minutes</li> </ul>				
	Installation:				
	<ul> <li>Inlet run &gt;10 × DN</li> <li>Outlet run &gt; 5 × DN</li> <li>Sensor and transmitter grounded.</li> <li>The sensor is centered in the pipe.</li> </ul>				
Maximum measured error	<ul> <li>Current output: plus typically ± 5 μA</li> <li>Pulse output: ± 0.5% o.r. ± 1 mm/s Option: ± 0.2% o.r. ± 2 mm/s (o.r. = of reading)</li> </ul>				
	Fluctuations in the supply voltage do not have any effect within the specified range.				

Fluctuations in the supply VOILage do not have any ect within the specified range.

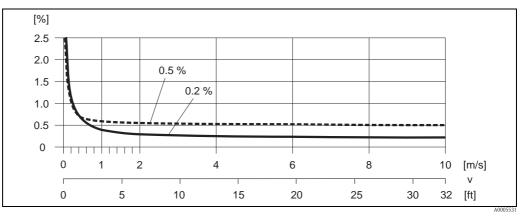

Max. measured error in % of reading Fig. 57:

Repeatability	Max. $\pm$ 0.1% o.r. $\pm$ 0.5 mm/s (o.r. = of reading)		
	10.1.7 Operating conditions: Installation		
Installation instructions	Any orientation (vertical, horizontal), restrictions and installation instructions $\rightarrow$ 13		
Inlet and outlet run	<ul> <li>If possible, install the sensor upstream from fittings such as valves, T-pieces, elbows, etc. The following inlet and outlet runs must be observed in order to meet accuracy specifications (→ </li> <li>16, → </li> <li>12):</li> <li>Inlet run: ≥ 5 × DN</li> <li>Outlet run: ≥ 2 × DN</li> </ul>		

ired.
overshot ic regions. id
ıg
r to avoid vice. This

Electromagnetic compatibility (EMC)	<ul> <li>As per IEC/EN 61326 and NAMUR Recommendation NE 21</li> <li>Emission: to limit value for industry EN 55011</li> </ul>				
	10.1.9 Operating conditions: Process				
Medium temperature range	The permi	ssible temperature depends on the lining of the measuring tube			
	Promag D				
	0 to +60 °	$^{\circ}C$ (+32 to +140 $^{\circ}F$ ) for polyamide			
	Promag L				
	■ -20 to +	D °C (+32 to +176 °F) for hard rubber (DN 350 to 1200) +50 °C (-4 to +122 °F) for polyurethane (DN 50 to 1200) +90 °C (-4 to +194 °F) for PTFE (DN 50 to 300)			
	Promag W	7			
	<ul> <li>0 to +80 °C (+32 to +176 °F) for hard rubber (DN 50 to 2000)</li> <li>-20 to +50 °C (-4 to +122 °F) for polyurethane (DN 25 to 1200)</li> </ul>				
	Promag P				
	Restricti <ul> <li>–20 to +</li> <li>Restricti</li> <li>–20 to +</li> </ul>	+130 °C (-40 to +266 °F) for PTFE (DN 15 to 600 / 1/2" to 24"), ons → see the following diagrams +130 °C (-4 to +266 °F) for PFA/HE (DN 25 to 200 / 1" to 8"), ons → see the following diagrams +150 °C (-4 to +302 °F) for PFA (DN 25 to 200 / 1" to 8"), ons → see the following diagrams			
	Optional	perature version (HT): –20 to +180 °C (–4 to +356 °F) for PFA (DN 25 to 200 $\neq$ 1" to 8")			
		[°F] [°C] HT			
	1				
		020 PFA			
		-40 - 40 - 20 - 0 - 20 - 40 - 60 - 80 - 100 - 120 - 140 - 160 - 180 - [°C]			

Abb. 58: Compact version Promag P (with PFA- or PTFE-lining)

Т

Т

-40 0

\_ Т -

Т

100

\_

 $T_A$  = ambient temperature;  $T_F$  = fluid temperature; HT = high-temperature version with insulation  $\bigcirc$  = light gray area  $\rightarrow$  temperature range from -10 to -40 °C (-14 to -40 °F) is valid for stainless steel version only O = diagonal hatched area  $\rightarrow$  foam lining (HE) and degree of protection IP 68 = fluid temperature max. 130°C / 266 °F

-40 -20 0 20 40 60 80 100 120 140 160 180 [°C]

. . . . .

200

360 [°F]

300

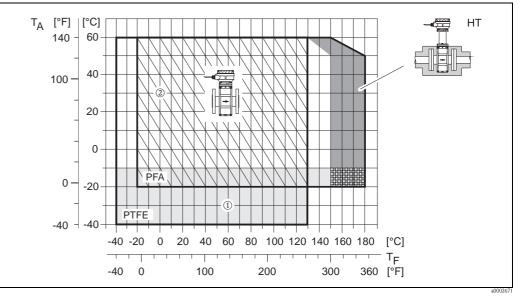


Abb. 59: Remote version Promag P (with PFA- or PTFE-lining)

 $T_A$  = ambient temperature;  $T_F$  = fluid temperature; HT = high-temperature version with insulation

 $\bigcirc$  = light gray area  $\rightarrow$  temperature range from -10 to -40 °C (-14 to -40 °F) is valid for stainless steel version only

② = diagonal hatched area → foam lining (HE) and degree of protection IP68 = fluid temperature max. 130°C / 266 °F

#### Promag H

Sensor:

- DN 2 to 25: -20 to +150 °C (-4 to +302 °F)
- DN 40 to 100: -20 to +150 °C (-4 to +302 °F)

#### Seals:

- EPDM: -20 to +150 °C (-4 to +302 °F)
- Silicone: -20 to +150 °C (-4 to +302 °F)
- Viton: -20 to +150 °C (-4 to +302 °F)
- Kalrez: -20 to +150 °C (-4 to +302 °F)

Conductivity

The minimum conductivity is  $\geq 5 \ \mu\text{S/cm}$  ( $\geq 20 \ \mu\text{S/cm}$  for demineralized water)



Note!

Note that in the case of the remote version, the requisite minimum conductivity is also influenced by the length of the connecting cable  $\rightarrow \triangleq 20$ 

Medium pressure range (nominal pressure)	Promag D • EN 1092-1 (DIN 2501) - PN 16 • ANSI B 16.5 - Class 150 • JIS B2220 - 10 K
	Promag L
	<ul> <li>EN 1092-1 (DIN 2501)</li> <li>PN 6 (DN 3501200)</li> <li>PN 10 (DN 501200)</li> <li>PN 16 (DN 50150)</li> <li>EN 1092-1, lap joint flange, stampel plate</li> <li>PN 10 (DN 50 to 300)</li> </ul>

- ANSI B 16.5
  - Class 150 (2" to 24")
- AWWA
- Class D (28" to 48")
- AS2129
- Table E (DN 350 to 1200)
- AS4087
  - PN 16 (DN 350 to1200)

#### Promag W

- EN 1092-1 (DIN 2501)
  - PN 6 (DN 350 to 2000)
  - PN 10 (DN 200 to 2000)
  - PN 16 (DN 65 to 2000)
  - PN 25 (DN 200 to 1000)
  - PN 40 (DN 25 to 150)
- ANSI B 16.5
  - Class 150 (1" to 24")
  - Class 300 (1" to 6")
- AWWA
  - Class D (28" to 78")
- JIS B2220
  - 10 K (DN 50 to 300)
  - 20 K (DN 25 to 300)
- AS 2129
- Table E (DN 80, 100, 150 to 1200)
- AS 4087
  - PN 16 (DN 80, 100, 150 to 1200)

#### Promag P

- EN 1092-1 (DIN 2501)
  - PN 10 (DN 200 to 600)
  - PN 16 (DN 65 to 600)
  - PN 25 (DN 200 to 600)
  - PN 40 (DN 15 to 150)
- ANSI B 16.5
  - Class 150 (1/2" to 24")
  - Class 300 (1/2" to 6")
- JIS B2220
  - 10 K (DN 50 to 300)
  - 20 K (DN 15 to 300)
- AS 2129
- Table E (DN 25, 50)
- AS 4087
- PN 16 (DN 50)

#### Promag H

The permissible nominal pressure depends on the process connection and the seal:

- 40 bar  $\rightarrow$  flange, weld nipple (with O-ring seal)
- 16 bar  $\rightarrow$  all other process connections

### Pressure tightness

#### Promag D

Measuring tube: 0 mbar abs (0 psi abs) with a fluid temperature of  $\leq$  60 °C ( $\leq$  140 °F)

Promag L (Measuring tube lining: Polyurethane, Hard rubber)

Promag L Nominal diameter		Measuring tube lining	Resistance of measuring tube lining to partial vacuum Limit values for abs. pressure [mbar] ([psi]) at various fluid temperatures		
			25 °C	50 °C	80° C
[mm]	[inch]		77 °F	122 °F	176° F
50 to 1200	2 to 48"	Polyurethane	0	0	-
350 to 1200	14 to 48"	Hard rubber	0	0	0

Promag L Measuring tube lining: PTFE

Promag L Nominal d	iameter		Resistance of measuring tube lining to partial vacuum Limit values for abs. pressure [mbar] ([psi]) at various fluid temperatures									
		25	°C	90	0°C							
		77	°F	19	4 °F							
[mm]	[inch]	[mbar]	[psi]	[mbar]	[psi]							
50	2"	0	0	0	0							
65	-	0	0	40	0.58							
80	3"	0	0	40	0.58							
100	4"	0	0	135	1.96							
125	-	135	1.96	240	3.48							
150	6"	135	1.96	240	3.48							
200	8"	200	2.90	290	4.21							
250	10"	330	4.79	400	5.80							
300	12"	400	5.80	500	7.25							

### Promag W

Promag W Nominal di	ameter	Measuring tube lining		Resistance of measuring tube lining to partial vacuum Limit values for abs. pressure [mbar] ([psi]) at various fluid temperatures								
			25 °C 50 °C 80° C 100 °C 130 °C 150 °C 180 °C									
[mm]	m] [inch]		77 °F	122 °F	1 <b>76°</b> F	212 °F	266 °F	302 °F	356 °F			
25 to 1200	1 to 48"	Polyurethane	0	0	-	-	-	-	-			
50 to 2000	2 to 78"	Hard rubber	0	0 0 0								

### Promag P Measuring tube lining: PFA

Promag P Nominal dia	meter		Resistance of measuring tube lining to partial vacuum Limit values for abs. pressure [mbar] ([psi]) at various fluid temperatures										
		25 °C	80° C	100 °C	130 °C	150 °C	180 °C						
[mm] [inch]		77 °F	176° F	212 °F	266 °F	302 °F	356 °F						
25	1"	0	0	0	0	0	0						
32	-	0	0	0	0	0	0						
40	1 1⁄2"	0	0	0	0	0	0						
50	2"	0	0	0	0	0	0						
65	-	0	*	0	0	0	0						
80 3"		0	*	0	0	0	0						

Promag P Nominal dia	meter		Resistance of measuring tube lining to partial vacuum Limit values for abs. pressure [mbar] ([psi]) at various fluid temperatures										
		25 °C	80° C	100 °C	130 °C	150 °C	180 °C						
[mm]	[inch]	77 °F	176° F	212 °F	266 °F	302 °F	356 °F						
100	4"	0	*	0	0	0	0						
125	-	0	*	0	0	0	0						
150	6"	0	*	0	0	0	0						
200 8"		0	*	0	0	0	0						
* No value can be quoted.													

#### Promag P

Measuring tube lining: PTFE

Promag F Nominal	o diameter			uring tube s. pressure	<b>·</b> ·		uum rious fluid	temperat	ures		
		25	°C	80° C	100	°C	130	) °C	150 °C	180 °C	
		77	°F	176° F	212	212 °F		5 °F	302 °F	356 °F	
[mm]	[inch]	[mbar]	[psi]		[mbar]	[psi]	[mbar]	[psi]			
15	1/2"	0	0	0	0	0	100	1.45	-	-	
25	1"	0	0	0	0	0	100	1.45	-	-	
32	-	0	0	0	0	0	100	1.45	-	I	
40	1 1/2"	0	0	0	0	0	100	1.45	-	-	
50	2"	0	0	0	0	0	100	1.45	_	1	
65	-	0	0	*	40	0.58	130	1.89	_	I	
80	3"	0	0	*	40	0.58	130	1.89	-	I	
100	4"	0	0	*	135	1.96	170	2.47	-	I	
125	-	135	1.96	*	240	3.48	385	5.58	-	I	
150	6"	135	1.96	*	240	3.48	385	5.58	-	I	
200	8"	200	2.90	*	290	4.21	410	5.95	_	I	
250	10"	330	4.79	*	400	5.80	530	7.69	-	I	
300	12"	400	5.80	*	500	7.25	630	9.14	-	I	
350	14"	470	6.82	*	600	8.70	730	10.59	-	I	
400	16"	540	7.83	*	670	9.72	800	11.60	-	-	
450	18"		-	•	Partial vac	uum is imp	ermissible!			-	
500	20"										
600	24"										
* No valu	* No value can be quoted.										

Promag H (Measuring tube lining: PFA)

Promag H Nominal diar	meter	Resistance of measuring tube lining to partial vacuum Limit values for abs. pressure [mbar] ([psi]) at various fluid temperatures									
		25 °C	80° C	100 °C	130 °C	150 °C	180 °C				
[mm]	[inch]	77 °F	176° F 212 °F 266 °		266 °F	302 °F	356 °F				
2 to 100	1/12 to 4"	0	0	0	0	0	0				

Limiting flow

→ 🖹 18

Pressure loss

• No pressure loss if the sensor is installed in a pipe of the same nominal diameter (Promag H: only DN 8 and larger).

Pressure losses for configurations incorporating adapters according to DIN EN 545 (see "Adapters" → 
 → 17)

## 10.1.10 Mechanical construction

Design, dimensions The dimensions and installation lengths of the sensor and transmitter can be found in the "Technical Information" for the device in question. This document can be downloaded as a PDF file from www.endress.com. A list of the "Technical Information" documents available is provided in the "Documentation" section on  $\rightarrow \triangleq 116$ .

Weight (SI units)

Promag D

Weight d	ata of Pron	nag D in kg							
Nominal	diameter	Compact version	Remote version (without cable)						
[mm]	[inch]		Sensor	Transmitter					
25	1"	4.5	2.5	6.0					
40	1 1⁄2"	5.1	3.1	6.0					
50	2"	5.9	3.9	6.0					
65	2 1⁄2"	6.7	4.7	6.0					
80	3"	7.7	5.7	6.0					
100	4"	10.4	8.4 6.0						
Transmitte	er Promag (o	compact version): 3.4 kg (Weight da	ta valid without packaging materi	al)					

*Promag L compact version (lap joint flanges / welded flanges DN >350)* 

Nominal	diameter			Compact version								
				1	(including	1		1				
[mm]	[inch]	E	N (DIN)	E	N (DIN)	ANS	I / AWWA		AS			
50	2"		10.6		-		10.6		-			
65	2 1⁄2"		12.0		-		-		_			
80	3"	PN 16	14.0		-		14.0		-			
100	4"	PN	16.0		-		16.0		-			
125	5"		21.5		-		-		-			
150	6"		25.5		-	00	25.5		-			
200	8"		45		-	ANSI / Class 150	45		-			
250	10"		65		-	, Cla	65		-			
300	12"		70	PN 6	-	/ ISI	70		-			
350	14"		90		79	AN	139	le E	101			
375	15"		-		-		-	abel	107			
400	16"		106		91		170	6. T	122			
450	18"		114		101		193	PN 16. Tabelle E	135/145			
500	20"	10	134		116		230		184			
600	24"	PN 10	157		157		304		262			
700	28"		248		200		277		354			
750	30"		-		_	D	329		441			
800	32"		322		248	lass	396		501			
900	36"		402		316	AWWA / Class D	482		698			
1000	40"		475		366	WA	601		769			
	42"		-		_	AW	684		_			
1200	48"		724		537		914		1227			

\* DN 450 AS Tab E

Nominal	diameter					e version			
				(sensor	plus sensor	housing v	vithout cable)	۱.	
[mm]	[inch]	E	N (DIN)	E	N (DIN)	ANS	I / AWWA		AS
50	2"		8.6		-		8.6		-
65	2 1/2"		10.0		_		-		-
80	3"	PN 16	12.0		-		12.0		-
100	4"	PN	14.0		-		14.0		-
125	5"	-	19.5		-		-		-
150	6"	-	23.5	-	-	50	23.5		-
200	8"		$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$	-					
250	10"				-	Cla	63		-
300	12"		68		-	ISI /	108		-
350	14"		87		76	AN	136	le E	98
375	15"		I	9	-		-	PN 16, Tabelle E	104
400	16"		103	PN	88		167	6, T	119
450	18"		111		98		190	PN 1	132/142
500	20"	10	131		113		227		181
600	24"	PN 10	154	-	154		301		259
700	28"		-	-	198		275		352
750	30"		-	-	-	D	327		439
800	32"		320		246	AWWA / Class D	394		499
900	36"		400		314		480		696
1000	40"		473		364	WA	599		767
	42"		-		-	AW	682		-
1200	48"		722		535		912		1225
ansmitter	Promag (rei	note vers	ion): 6 kg						

Promag L remote version (lap joint flanges / welded flanges DN >350)

Promag L (lap joint flanges, stamped plate)

Weight dat	a of Promag	; L in kg									
Nominal	diameter	Com	pact version		Remote version (without cable)						
[mm]	[inch]	I	EN (DIN)	Sens	Transmitter						
50	2"		7.2		5.2	6.0					
65	2 1⁄2"		8.0		6.0	6.0					
80	3"		9.0		7.0	6.0					
100	4"		11.5		9.5	6.0					
125	5"	PN 10	15.0	PN 10	13.0	6.0					
150	6"	<u>ц</u>	19.0	<u>ц</u>	17.0	6.0					
200	8"		37.5		35.5	6.0					
250	10"		56.0		54.0	6.0					
300	12"		57.0		55.0	6.0					
	Transmitter Promag (compact version): 3.4 kg (Weight data valid for standard pressure ratings and without packaging material)										

## Promag W

Weight	data of	Proma	ag W in I	cg										
	ninal		C	Compa	act versio	n			Rem	ote v	ersion (v	vithou	it cable]	)
dian	neter									0			1	<b>T</b>
[mm]	[in ah]	EN	(DIN) /	1	пе		NSI/	EN	Sensor EN (DIN) / JIS				NSI/	Trans- mitter
[IIIIII]	[inch]		AS*		JIS		WWA		AS*		313		WWA	
25	1"		7.3		7.3		7.3		5.3		5.3		5.3	6.0
32	1 1/4"	40	8.0		7.3		-	40	6.0		5.3		-	6.0
40	1 1⁄2"	PN	9.4		8.3		9.4	PN	7.4		6.3	1	7.4	6.0
50	2"		10.6		9.3		10.6		8.6		7.3		8.6	6.0
65	2 1⁄2"		12.0		11.1		-		10.0		9.1		-	6.0
80	3"	ý	14.0	10K	12.5		14.0	ý	12.0	10K	10.5		12.0	6.0
100	4"	PN 16	16.0	10	14.7		16.0	PN 16	14.0	10	12.7		14.0	6.0
125	5"	Ч	21.5		21.0	50	-	4	19.5		19.0	50	-	6.0
150	6"		25.5		24.5	Class 150	25.5		23.5		22.5	Class 150	23.5	6.0
200	8"		45		41.9	Cla	45		43		39.9	Cla	43	6.0
250	10"		65		69.4		65		63		67.4		73	6.0
300	12"		70		72.3		110		68		70.3		108	6.0
350	14"		115				175		113				173	6.0
400	16"		135				205		133				203	6.0
450	18"	C	175				255	0	173				253	6.0
500	20"	PN 10	175				285	PN 10	173				283	6.0
600	24"	Ц	235				405	ц	233				403	6.0
700	28"		355				400		353				398	6.0
-	30"		-				460		-				458	6.0
800	32"		435				550		433				548	6.0
900	36"		575				800		573				798	6.0
1000	40"		700				900		698				898	6.0
-	42"		I				1100		-				1098	6.0
1200	48"		850			D	1400		848			D	1398	6.0
-	54"		Ι			Class D	2200		-			Class D	2198	6.0
1400	-		1300			0	-	]	1298			0	-	6.0
-	60"	16	-				2700	91	-				2698	6.0
1600	_	PN	1700				_	ΡN	1698				_	6.0
_	66"		Ι				3700		-				3698	6.0
1800	72"		2200				4100		2198				4098	6.0
-	78"		I				4600		-				4598	6.0
2000	-		2800				_		2798				_	6.0
Transmi	itter Pron	nag (co	ompact ve	rsion):	3.4 kg									

Transmitter Promag (compact version): 3.4 kg (Weight data valid for standard pressure ratings and without packaging material) \*Flanges according to AS are only available for DN 80, 100, 150 to 400, 500 and 600

## Promag P

Weight	t data of	Prom	ag P in k	g										
	ninal neter		C	Comp	act versio	n		Remote version (without cable)						
									Sensor					
[mm]	[inch]		(DIN) / AS*		JIS	ANSI/ AWWA			EN (DIN) / AS*		JIS	ANSI/ AWWA		mitter
15	1/2"		6.5		6.5		6.5		4.5		4.5		4.5	6.0
25	1"	0	7.3		7.3		7.3		5.3		5.3		5.3	6.0
32	1 1/4"	PN 40	8.0		7.3		-	PN 40	6.0		5.3		Ι	6.0
40	1 1⁄2"	ц	9.4		8.3		9.4	щ	7.4		6.3		7.4	6.0
50	2"		10.6		9.3		10.6		8.6		7.3		8.6	6.0
65	2 1/2"		12.0		11.1		-		10.0		9.1		Ι	6.0
80	3"	2	14.0	10K	12.5		14.0	2	12.0	10K	10.5		12.0	6.0
100	4"	PN 16	14.4		14.7		16.0	PN 16	14.0		12.7		14.0	6.0
125	5"	Ц	16.0		21.0	150	-	<u>д</u>	19.5		19.0	150	Ι	6.0
150	6"		21.5		24.5	Class	25.5		23.5		22.5	Class	23.5	6.0
200	8"		45		41.9		45		43		39.9		43	6.0
250	10"		65		69.4		75		63		67.4		73	6.0
300	12"		70		72.3		110		68		70.3		108	6.0
350	14"	10	115				175	10	113				173	6.0
400	16"	PN	135	]			205	PN	133				203	6.0
450	18"		175	]			255		173				253	6.0
500	20"		175	1			285		173	1			283	6.0
600	24"		235	1			405		233				403	6.0
Transm	itter Pron	nag (c	ompact ve	ersion)	: 3.4 kg				•				-	

Transmitter Promag (compact version): 3.4 kg High-temperature version: + 1.5 kg (Weight data valid for standard pressure ratings and without packaging material) \* Flanges according to AS are only available for DN 25 and 50.

## Promag H

Nominal diameter		Compact version	Remote version (without cable)	
[mm]	[inch]	DIN	Sensor	Transmitter
2	1/12"	5.2	2	6.0
4	5/32"	5.2	2	6.0
8	5/16"	5.3	2	6.0
15	1/2"	5.4	1.9	6.0
25	1"	5.5	2.8	6.0
40	1 1⁄2"	6.5	4.5	6.0
50	2"	9.0	7.0	6.0
65	2 1/2"	9.5	7.5	6.0
80	3"	19.0	17.0	6.0
100	4"	18.5	16.5	6.0

## Weight (US units)

## Promag D

## Weight data of Promag D in lbs

Weight data of Flomag D in its						
Nominal	diameter	Compact version	Remote version (v	ion (without cable)		
[mm]	[inch]		Sensor	Transmitter		
25	1"	10	6	13		
40	1 1⁄2"	11	7	13		
50	2"	13	9	13		
80	3"	17	13	13		
100	4"	23	19	13		
Transmitter Promag (compact version): 7.5 lbs (Weight data valid without packaging material)						

Promag L (ANSI /	AWWA: lap joint flanges /	welded flanges DN >700)
		<i>j</i>

Nominal diameter		Co	ompact version	Remote vers	Remote version (without cable	
[mm]	[inch]	ANSI / AWWA		ANSI / AWWA		
50	2"		23		19	
65	2 1⁄2"		-		-	
80	3"	20	31	00	26	
100	4"	ANSI / Class 150	35	ANSI / Class 150	31	
125	5"	CIa	-	CIa	_	
150	6"	/ ISI	56	/ ISI	52	
200	8"	AP	99	AP	95	
250	10"		143		139	
300	12"		243		238	
350	14"		-		_	
400	16"		_		_	
450	18"		-		-	
500	20"		-		_	
600	24"		-		_	
700	28"		611		606	
750	30"	D	725	Q	721	
800	32"	Class	873	llass	869	
900	36"	AWWA / Class D	1063	AWWA / Class D	1058	
1000	40"	٧WA	1324	MW∧	1320	
	42"	AV	1508	AV	1504	
1200	48"		2015		2011	

(Weight data valid without packaging material)

[mm]	[inch]				Sensor	Transmitter
15	1⁄2"		14		10	13
25	1"		16		12	13
40	1 1/2"		21		16	13
50	2"		23		19	13
80	3"		31		26	13
100	4"		35		31	13
150	6"	50	56	50	52	13
200	8"	Class 150	99	Class 150	95	13
250	10"	CIS	165	Cla	161	13
300	12"		243		238	13
350	14"		386		381	13
400	16"		452		448	13
450	18"		562		558	13
500	20"		628		624	13
600	24"		893		889	13

## Promag P (ANSI/AWWA)

Promag W (ANSI/AWWA)

Weight data of Promag W in lbs						
Nominal	diameter	Compact version		Remote version (without cable)		
[mm]	[mm] [inch]			S	ensor	Transmitter
25	1"		16		12	13
40	1 1/2"		21		16	13
50	2"		23		19	13
80	3"		31		26	13
100	4"		35		31	13
150	6"		56		52	13
200	8"	150	99	150	95	13
250	10"	Class 150	143	Class 150	161	13
300	12"	Ŭ	243	Ŭ	238	13
350	14"		386		381	13
400	16"		452		448	13
450	18"		562		558	13
500	20"		628		624	13
600	24"		893		889	13

Weight data of Promag W in Ibs							
Nominal	diameter	Com	Compact version		Remote version (without cable)		
[mm]	[inch]			s	ensor	Transmitter	
700	28"		882		878	13	
-	30"		1014		1010	13	
800	32"		1213		1208	13	
900	36"		1764		1760	13	
1000	40"		1985		1980	13	
-	42"	s D	2426	Class D	2421	13	
1200	48"	Class D	3087	Clas	3083	13	
-	54"		4851		4847	13	
-	60"		5954		5949	13	
-	66"		8159		8154	13	
1800	72"		9041		9036	13	
_	78"		10143		10139	13	

Transmitter Promag (compact version): 7.5 lbs

(Weight data valid for standard pressure ratings and without packaging material)

### Promag H

Weight data of Promag H in Ibs					
Nominal	diameter	Compact version	Remote version (without cable)		
[mm]	[inch]		Sensor	Transmitter	
2	1/12"	11	4	13	
4	5/32"	11	4	13	
8	5/16"	12	4	13	
15	1⁄2"	12	4	13	
25	1"	12	6	13	
40	1 1/2"	14	10	13	
50	2"	20	15	13	
65	2 1/2"	21	17	13	
80	3"	42	37	13	
100	4"	41	36	13	
Transmitter Promag (compact version): 7.5 lbs					

Transmitter Promag (compact version): 7.5 lbs

(Weight data valid for standard pressure ratings and without packaging material)

#### Material

#### Promag D

- Transmitter housing: powder-coated die-cast aluminum
- Sensor housing: powder-coated die-cast aluminum
- Measuring tube: polyamide, O-rings EPDM (Drinking water approvals: WRAS BS 6920, ACS, NSF 61, KTW/W270)
- Electrodes: 1.4435/316L
- Ground disks: 1.4301/304

#### Promag L

- Transmitter housing:
  - Compact housing: powder-coated die-cast aluminum
  - Wall-mounted housing: powder-coated die-cast aluminum
- Sensor housing
  - DN 50 to 300: powder-coated die-cast aluminum
  - DN 350 to 1200: with protective lacquering

- Measuring tube:
  - DN ≤300; stainless steel 1.4301 or 1.4306/304L
  - DN ≥350; stainless steel 202 or 304
- Electrodes: 1.4435, Alloy C-22
- Flange
  - − EN 1092-1 (DIN 2501): DN ≤ 300: 1.4306; 1.4307; 1.4301; 1.0038 (S235JRG2)
  - EN 1092-1 (DIN 2501): DN ≥ 350: A105; 1.0038 (S235JRG2)
  - AWWA: A181/A105; 1.0425/316L (P265GH); 1.0044 (S275JR)
- AS 2129: A105; 1.0345 (P235GH); 1.0425/316L (P265GH); 1.0038 (S235JRG2); FE 410 WB
- AS 4087: A105; 1.0425/316L (P265GH); 1.0044 (S275JR)
- Seals: to DIN EN 1514-1
- Ground disks: 1.4435/316L or Alloy C-22

### Promag W

- Transmitter housing:
  - Compact housing: powder-coated die-cast aluminum
  - Wall-mounted housing: powder-coated die-cast aluminum
- Sensor housing
  - DN 25 to 300: powder-coated die-cast aluminum
  - DN 350 to 2000: with protective lacquering
- Measuring tube
  - DN  $\leq$  300: stainless steel 1.4301 or 1.4306/304L
  - (for flanges made of carbon steel with Al/Zn protective coating)
  - DN ≥ 350: stainless steel 1.4301 or 1.4306/304 (for flanges made of carbon steel with protective lacquering)
- Electrodes: 1.4435 or Alloy C-22, Tantalum
- Flange
  - EN 1092-1 (DIN2501): 1.4571/316L; RSt37-2 (S235JRG2); C22; FE 410 WB (DN ≤ 300 with Al/Zn protective coating; DN ≥ 350 with protective lacquering) ANSI: A105; F316L
  - (DN  $\leq$  300 with Al/Zn protective coating; DN  $\geq$  350 with protective lacquering) AWWA: 1.0425
  - JIS: RSt37-2 (S235JRG2); HII; 1.0425/316L
  - (DN  $\leq$  300 with Al/Zn protective coating; DN  $\geq$  350 with protective lacquering) AS 2129
    - (DN 150, 200, 250, 300, 600) A105 or RSt37-2 (S235JRG2)
    - (DN 80, 100, 350, 400, 500) A105 or St44-2 (S275JR)
  - AS 4087: A105 or St44-2 (S275JR)
- Seals: to DIN EN 1514-1
- Ground disks: 1.4435/316L, Alloy C-22, Titanium, Tantalum

#### Promag P

- Transmitter housing:
  - Compact housing: powder-coated die-cast aluminum
  - Wall-mounted housing: powder-coated die-cast aluminum
- Sensor housing
  - DN 15 to 300: powder-coated die-cast aluminum
  - DN 350 to 2000: with protective lacquering
- Measuring tube
  - DN  $\leq$  300: stainless steel 1.4301 or 1.4306/304L; for flanges made of carbon steel with Al/Zn protective coating
  - DN  $\geq$  350.: stainless steel 1.4301 or 1.4306/304L; for flanges made of carbon steel with Al/ Zn protective coating

- Electrodes: 1.4435, Platinum, Alloy C-22, Tantalum, Titanium
- Flange
  - EN 1092-1 (DIN2501): 1.4571/316L; RSt37-2 (S235JRG2); C22; FE 410W B (DN ≤ 300: with Al/Zn protective coating; DN ≥ 350 with protective lacquering) ANSI: A105; F316L
  - $(DN \le 300 \text{ with Al/Zn protective coating; } DN \ge 350 \text{ with protective lacquering})$ - AWWA: 1.0425
  - JIS: RSt37-2 (S235JRG2); HII; 1.0425/316L
  - (DN  $\leq$  300 with Al/Zn protective coating; DN  $\geq$  350 with protective lacquering) AS 2129
  - (DN 25) A105 or RSt37-2 (S235JRG2)
  - (DN 40) A105 or St44-2 (S275JR)
  - AS 4087: A105 or St44-2 (S275JR)
- Seals: to DIN EN 1514-1
- Ground disks: 1.4435/316L or Alloy C-22

### Promag H

- Transmitter housing:
  - Compact housing: powder-coated die-cast aluminum or stainless steel field housing (1.4301/316L)
  - Wall-mounted housing: powder-coated die-cast aluminum
  - Window material: glas or polycarbonate
- Sensor housing: stainless steel 1.4301
- Wall mounting kit: stainless steel 1.4301
- Measuring tube: stainless steel 1.4301
- Liner: PFA (USP class VI; FDA 21 CFR 177.1550: 3A)
- Electrodes:
  - Standard: 1.4435
  - Option: Alloy C-22, Tantalum, Platinum
- Flange:
  - All connections stainless-steel 1.4404/316L
  - EN (DIN), ANSI, JIS made of PVDF
  - Adhesive fitting made of PVC
- Seals
  - DN 2 to 25: O-ring (EPDM, Viton, Kalrez), gasket seal (EPDM\*, Viton, Silicone\*)
  - DN 40 to 100: gasket seal (EPDM\*, Silicone\*)

\* = USP class VI; FDA 21 CFR 177.2600: 3A

Ground rings: 1.4435/316L (optional: Tantalum, Alloy C-22)

Material load diagramThe material load diagrams (pressure-temperature graphs) for the process connections are to be<br/>found in the "Technical Information" documents of the device in question:<br/>List of supplementary documentation  $\rightarrow \ge 116$ .

Fitted electrodes

- Promag D
- 2 measuring electrodes for signal detection

## Promag L, W and P

- 2 measuring electrodes for signal detection
- 1 EPD electrode for empty pipe detection
- 1 reference electrode for potential equalization

## Promag H

- 2 measuring electrodes for signal detection
- 1 EPD electrode for empty pipe detection (apart from DN 2 to 15)

# Process connections

Wafer version  $\rightarrow$  without process connections

## Promag L

Promag D

Flange connections:

- EN 1092-1 (DIN 2501)
  - DN  $\leq$  300 = Form A
  - DN  $\ge$  350 = Form B
- ANSI
- AWWA
- AS

## Promag W and P

Flange connections:

- EN 1092-1 (DIN 2501)
  - DN  $\leq$  300 = form A
  - DN  $\ge$  350 = flat face
  - DN 65 PN 16 and DN 600 PN 16 only as per EN 1092-1
- ANSI
- AWWA (only Promag W)
- JIS
- AS

#### Promag H

With O-ring:

- Weld nipple DIN (EN), ISO 1127, ODT/SMS
- Flange EN (DIN), ANSI, JIS
- Flange made of PVDF EN (DIN), ANSI, JIS
- External thread
- Internal thread
- Hose connection
- PVC adhesive fitting

With gasket seal:

- Weld nipple DIN 11850, ODT/SMS
- Clamp ISO 2852, DIN 32676, L14 AM7
- Threaded joint DIN 11851, DIN 11864-1, ISO 2853, SMS 1145
- Flange DIN 11864-2

#### Surface roughness

- Liner  $\rightarrow$  PFA:  $\leq 0.4 \ \mu m (15 \ \mu in)$
- Electrodes: 0.3 to 0.5 μm (12 to 20 μin)

All data relate to parts in contact with fluid.

• Process connection made of stainless-steel (Promag H):  $\leq 0.8 \ \mu m \ (31 \ \mu in)$ 

## 10.1.11 Human interface

Display elements	<ul> <li>Liquid crystal display: illuminated, two-line, 16 characters per line</li> <li>Custom configurations for presenting different measured-value and status variables</li> <li>2 totalizers</li> </ul>
	Note!



At ambient temperatures below  $-20 (-4 \text{ }^\circ\text{F})$  the readability of the display may be impaired.

Operating elements	<ul> <li>Local operation with three keys (-, *, E)</li> <li>"Quick Setup" menus for straightforward commissioning</li> </ul>
Language groups	<ul> <li>Language groups available for operation in different countries:</li> <li>Western Europe and America (WEA): English, German, Spanish, Italian, French, Dutch and Portuguese</li> <li>Eastern Europe/Scandinavia (EES): English, Russian, Polish, Norwegian, Finnish, Swedish and Czech</li> <li>Southeast Asia (SEA): English, Japanese, Indonesian</li> </ul>
	Note! You can change the language group via the operating program "FieldCare".
Remote operation	Operation via HART protocol and Fieldtool
	10.1.12 Certificates and approvals
CE mark	The measuring system is in conformity with the statutory requirements of the EC Directives. Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.
C-tick mark	The measuring system meets the EMC requirements of the Australian Communications and Media Authority (ACMA)
Ex approval	Information about currently available Ex versions (ATEX, FM, CSA, IECEx, NEPSI etc.) can be supplied by your Endress+Hauser Sales Center on request. All explosion protection data are given in a separate documentation which is available upon request.
Sanitary compatibility	Promag D, L, W and P
	No applicable approvals or certification
	Promag H
	<ul> <li>3A authorization and EHEDG-tested</li> <li>Seals: in conformity with FDA (except Kalrez seals)</li> </ul>
Drinking water approval	Promag D, L and W
	• WRAS BS 6920
	<ul> <li>ACS</li> <li>NSF 61</li> </ul>
	■ KTW/W270
	Promag P and H
	No drinking water approval
Pressure Equipment Directive	Promag D and L
	No pressure measuring device approval
	Promag W, P and H
	The measuring devices can be ordered with or without PED (Pressure Equipment Directive). If a device with PED is required, this must be ordered explicitly. For devices with nominal diameters less than or equal to DN 25 (1"), this is neither possible nor necessary.

	<ul> <li>"With the identification PED/G1/III on the sensor nameplate, Endress+Hauser confirms conformity with the "Basic safety requirements" of Appendix I of the Pressure Equipment Directive 97/23/EC.</li> <li>"Devices with this identification (with PED) are suitable for the following types of fluid: <ul> <li>Fluids of Group 1 and 2 with a steam pressure of greater or less than 0.5 bar (7.3 psi)</li> <li>Unstable gases</li> </ul> </li> <li>"Devices without this identification (without PED) are designed and manufactured according to good engineering practice. They correspond to the requirements of Art. 3, Section 3 of the Pressure Equipment Directive 97/23/EC. Their application is illustrated in Diagrams 6 to 9 in Appendix II of the Pressure Equipment Directive 97/23/EC.</li> </ul>
Other standards and guidelines	<ul> <li>EN 60529</li> <li>Degrees of protection by housing (IP code).</li> </ul>
	<ul> <li>EN 61010-1 Safety requirements for electrical equipment for measurement, control and laboratory use</li> </ul>
	<ul> <li>IEC/EN 61326</li> <li>Electromagnetic compatibility (EMC requirements)</li> </ul>
	<ul> <li>ANSI/ISA-S82.01</li> <li>Safety Standard for Electrical and Electronic Test, Measuring, Controlling and related Equipment</li> <li>General Requirements. Pollution degree 2, Installation Category II.</li> </ul>
	<ul> <li>CAN/CSA-C22.2 (No. 1010.1-92)</li> <li>Safety requirements for Electrical Equipment for Measurement and Control and Laboratory Use.</li> <li>Pollution degree 2, Installation Category I.</li> </ul>
	<ul> <li>NAMUR NE 21 Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment.</li> </ul>
	<ul> <li>NAMUR NE 43 Standardization of the signal level for the breakdown information of digital transmitters with analog output signal.</li> </ul>
	10.1.13 Ordering information
	Your Endress+Hauser service organization can provide detailed ordering information and information on the order codes on request.

## 10.1.14 Accessories

Various accessories, which can be ordered separately from Endress+Hauser, are available for the transmitter and the sensor  $\rightarrow \square 76$ .

Your Endress+Hauser service organization can provide detailed information on the specific order codes on request.

## 10.1.15 Documentation

- Flow measuring technology (FA005D/06)
- Technical Information Promag 50D (TI082D/06)
- Technical Information Promag 50L (TI00097D/06)
- Technical Information Promag 50W, 53W (TI046D/06)
- Technical Information Promag 50P, 53P (TI047D/06)
- Technical Information Promag 50H, 53H (TI048D/06)
- Description of Device Functions Promag 50 HART (BA049D/06)
- Supplementary documentation on Ex-ratings: ATEX, FM, CSA, etc.

# Index

## Α

Accessories	
Ambient temperature range	
Applicator (selection and configuration software)	
Appiovais	15

# С

0
Cable entry
Cable specifications
Calibration factor
CE mark 115
CE mark (Declaration of Conformity) 9
Centering sleeve
Promag D 22
Certificates
CIP cleaning
Cleaning (exterior cleaning)
Code entry (function matrix) 60
Commissioning
General
Two current outputs 72
Commissioning Quick Setup menu
Commubox FXA 195 (electrical connection) 52, 77
Communication
Conductivity of fluid 101
Connecting cable
Connection
Check
HART
Remote version
C-tick mark
Current output
Configuration (active/passive)

## D

Declaration of Conformity (CE mark)	. 9
Degree of protection 56,	99
Design 1	05
Device description files	63
Device variable via HART protocol	63
Display	
Elements 58, 1	14
Turning the display	40
Documentation	16
Drinking water approval 1	15

# Ε

Electrical connection	
Commubox FXA 191	52
HART handheld terminal	52
Electrical connections	97
Electrodes	
EPD electrode	15
EMC (electromagnetic compatibility) 49, 1	00
Empty-pipe/full-pipe adjustment	73
Error message types	61

Error messages
Process error (application error)
System errors (device errors)
European Pressure Equipment Directive
Ex approval
Exterior cleaning

## F

1
Field Xpert SFX100
FieldCare
Fieldcheck (tester and simulator)
Fitted electrodes 113
Flow rate/limits
Function matrix
Brief operating instructions
Fuse, replacing
FXA193
FXA195

# G

0
Galvanic isolation
Gewicht
Ground cable
Promag L
Promag P
Promag W
Grounding rings
Promag H

## Н

HART
Command classes
Commands 64
Communicator DXR 375 62
Device description files
Device status / Error messages
Write protection
Hazardous substances
High-temperature version 33
HOME position (operating mode) 58

## I

1
Incoming acceptance
Inlet/outlet run
Installation
Promag D
Promag H
Promag L
Promag P
Promag W
Installation conditions
Adapters
Dimensions 13
Down pipe
EPD electrode 15
Foundations, supports 17
Inlet/outlet run

Installation of pumps13Mounting location13Orientation15Partially filled pipes14Vibrations16Installing the wall-mount housing41
L Language groups
Local display See Display Low flow cut off
Μ
Maintenance75Material111Material load diagram113Maximum measured error98Measured variable96Measuring principle96Measuring range96Measuring system96Mechanical construction105Medium pressure range101Medium temperature range100Mounting bolts22Promag D22Mounting the sensor
See Installing the sensor
See Installing the sensor <b>N</b>
See Installing the sensor
See Installing the sensor          N         Nameplate specifications         Connections       9         Sensor       8         Transmitter       7         Nominal diameter and flow rate
See Installing the sensor          N         Nameplate specifications         Connections       9         Sensor       8         Transmitter       7         Nominal diameter and flow rate       18         O       96         Operable flow range       96         Operating conditions       96
See Installing the sensor         N         Nameplate specifications         Connections       9         Sensor       8         Transmitter       7         Nominal diameter and flow rate       7         Promag W       18         O       9         Operable flow range       96         Operating conditions       99         Environment       99         Process       100         Operating elements       58, 115         Operation       58         Device description files       63         FieldCare       62         Operating programs       62         Operational safety       5
See Installing the sensor          N         Nameplate specifications         Connections       9         Sensor       8         Transmitter       7         Nominal diameter and flow rate       7         Promag W       18         O       9         Operable flow range       96         Operating conditions       99         Environment       99         Process       100         Operating elements       58, 115         Operation       58         Device description files       63         FieldCare       62         Operating programs       62

## Index

3		

Р
Performance characteristics
Pig (cleaning) 38
Post-installation
Check
Potential equalization
Power consumption
Power supply
Power supply failure
Pressure Equipment Directive
Pressure tightness
Process error messages
Process errors (definition)
Programming mode
Disable
Enable
Promag D
Centering sleeve
Installation
Mounting bolts
Seals
Tightening torques 23
Promag D mounting kit 21
Promag H
Cleaning with pigs
Grounding ring (DN 2 to 25, 1/12" to 1") 37
Installation
Seals
Weld nipple 38
Promag L
Ground cable
Installation 24
Seals
Tightening torques 25
Promag P
Ground cable
High-temperature version    33      Installation    32
Installation
Tightening torques
Promag W
Ground cable
Installation
Seals
Tightening torques
0 0 1
Q
Quick Setup 71
P
R
Reference operating conditions
Registered trademarks
Remote operation
Remote version Connection
Repair

Repeatability	98
Replacing	
Exchangeable electrode	92
Response to errors	84
Returning devices	
-	

# S

Temperature
Ambient
Medium 100
Storage
Tightening torques
Promag D 23
Promag L
Promag P 33
Promag W
Transmitter
Electrical connection 50
Installing the wall-mount housing
Turning the field housing (aluminum) 39
Turning the field housing (stainless steel)
Troubleshooting
Types of error (system and process errors) 61
V
Vibration resistance
Vibrations

## W

Wall-mount housing, installing	41
Weight 1	05
Wiring	44



People for Process Automation

# **Declaration of Hazardous Material and De-Contamination** *Erklärung zur Kontamination und Reinigung*

RA No.

Please reference the Return Authorization Number (RA#), obtained from Endress+Hauser, on all paperwork and mark the RA# clearly on the outside of the box. If this procedure is not followed, it may result in the refusal of the package at our facility. Bitte geben Sie die von E+H mitgeteilte Rücklieferungsnummer (RA#) auf allen Lieferpapieren an und vermerken Sie diese auch außen auf der Verpackung. Nichtbeachtung dieser Anweisung führt zur Ablehnung ihrer Lieferung.

Because of legal regulations and for the safety of our employees and operating equipment, we need the "Declaration of Hazardous Material and De-Contamination", with your signature, before your order can be handled. Please make absolutely sure to attach it to the outside of the packaging.

Aufgrund der gesetzlichen Vorschriften und zum Schutz unserer Mitarbeiter und Betriebseinrichtungen, benötigen wir die unterschriebene "Erklärung zur Kontamination und Reinigung", bevor Ihr Auftrag bearbeitet werden kann. Bringen Sie diese unbedingt außen an der Verpackung an.

### Type of instrument / sensor

Geräte-/Sensortyp

**Serial number** Seriennummer

Used as SIL device in a Safety Instrumented System / Einsatz als SIL Gerät in Schutzeinrichtungen

Process data/Prozessdaten

Temperature / *Temperatur\_\_\_\_* [°F] \_\_\_\_\_ [°C] Conductivity / *Leitfähigkeit* \_\_\_\_\_\_ [µS/cm]

\_\_\_\_\_[°C] Pressure / Dru \_\_ [μS/cm] Viscosity / Visk

Δ

ssure / <i>Druck</i>	 [psi]	[ Pa ]
cosity <i>/ Viskosität</i>	 [cp]	[mm <sup>2</sup> /s

Λ

#### Medium and warnings

Warnhinweise zum Medium

Warninin Weise Zum	i meatam		0		/\	/×\	$\overline{\Lambda}$	
	Medium /concentration <i>Medium /Konzentration</i>	Identification CAS No.	flammable entzündlich	toxic <i>giftig</i>	corrosive <i>ätzend</i>	harmful/ irritant gesundheits- schädlich/ reizend	other * <i>sonstiges*</i>	harmless <i>unbedenklich</i>
Process medium Medium im Prozess Medium for process cleaning Medium zur Prozessreinigung								
Returned part cleaned with Medium zur Endreinigung								

\* explosive; oxidising; dangerous for the environment; biological risk; radioactive

\* explosiv; brandfördernd; umweltgefährlich; biogefährlich; radioaktiv

Please tick should one of the above be applicable, include safety data sheet and, if necessary, special handling instructions. Zutreffendes ankreuzen; trifft einer der Warnhinweise zu, Sicherheitsdatenblatt und ggf. spezielle Handhabungsvorschriften beilegen.

#### Description of failure / Fehlerbeschreibung \_\_\_\_

#### **Company data** / *Angaben zum Absender*

Company / Firma \_

Phone number of contact person / Telefon-Nr. Ansprechpartner:

Address / Adresse

Your order No. / Ihre Auftragsnr. \_

"We hereby certify that this declaration is filled out truthfully and completely to the best of our knowledge. We further certify that the returned parts have been carefully cleaned. To the best of our knowledge they are free of any residues in dangerous quantities."

Fax / E-Mail

"Wir bestätigen, die vorliegende Erklärung nach unserem besten Wissen wahrheitsgetreu und vollständig ausgefüllt zu haben. Wir bestätigen weiter, dass die zurückgesandten Teile sorgfältig gereinigt wurden und nach unserem besten Wissen frei von Rückständen in gefahrbringender Menge sind."

www.endress.com/worldwide



People for Process Automation

BA00046D/06/EN/14.11 71136623 FM+SGML6.0 ProMoDo